

Master DTC Chart

- ▶ [ABS \(anti-lock brake system\)](#)
- ▶ [ACM \(audio front control module\)](#)
- ▶ [APIM \(SYNC module\)](#)
- ▶ [BCM \(body control module\)](#)
- ▶ [BCMB \(body control module B\)](#)
- ▶ [BCMC \(body control module C\)](#)
- ▶ [CCM \(cruise control module\)](#)
- ▶ [DDM \(driver door module\)](#)
- ▶ [DSM \(driver front seat module\)](#)
- ▶ [DSP \(audio digital signal processing module\)](#)
- ▶ [GWM \(gateway module A\)](#)
- ▶ [HCM \(headlamp control module\)](#)
- ▶ [HVAC \(heating, ventilation and air conditioning\)](#)
- ▶ [IPC \(instrument panel cluster\)](#)
- ▶ [IPMA \(image processing module A\)](#)
- ▶ [LDCMA \(Lighting Driver Control Module A\)](#)
- ▶ [LDCMB \(Lighting Driver Control Module B\)](#)
- ▶ [MRCMA \(movable roof control module A\)](#)
- ▶ [MRCMB \(movable roof control module B\)](#)
- ▶ [OCSM \(occupant classification system module\)](#)
- ▶ [PAM \(parking assist control module\)](#)
- ▶ [PCM \(powertrain control module\)](#)
- ▶ [PDM \(passenger door module\)](#)
- ▶ [PSCM \(power steering control module\)](#)
- ▼ [RCM \(restraints control module\)](#)

DTC	Description	PINPOINT TEST
B0001:11	Driver Frontal Stage 1 Deployment Control: Circuit Short To Ground	A: B0001:11, B0001:12, B0001:13, B0001:1A (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B0001:12	Driver Frontal Stage 1 Deployment Control: Circuit Short To Battery	A: B0001:11, B0001:12, B0001:13, B0001:1A (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B0001:13	Driver Frontal Stage 1 Deployment Control: Circuit Open	A: B0001:11, B0001:12, B0001:13, B0001:1A (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B0001:1A	Driver Frontal Stage 1 Deployment Control: Circuit Resistance Below Threshold	A: B0001:11, B0001:12, B0001:13, B0001:1A (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B0001:2B	Driver Frontal Stage 1 Deployment Control: Signal Cross-Coupled	AO: BXXXX:2B (ANY BXXXX DTC WITH A 2B FAILURE TYPE) SIGNAL CROSS COUPLED (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B0001:4A	Driver Frontal Stage 1 Deployment Control: Incorrect Component Installed	AP: BXXXX:4A (ANY BXXXX DTC WITH A 4A FAILURE TYPE) INCORRECT COMPONENT INSTALLED (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B0002:11	Driver Frontal Stage 2 Deployment Control: Circuit Short To Ground	B: B0002:11, B0002:12, B0002:13, B0002:1A (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))

B0002:12	Driver Frontal Stage 2 Deployment Control: Circuit Short To Battery	B: B0002:11, B0002:12, B0002:13, B0002:1A (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B0002:13	Driver Frontal Stage 2 Deployment Control: Circuit Open	B: B0002:11, B0002:12, B0002:13, B0002:1A (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B0002:1A	Driver Frontal Stage 2 Deployment Control: Circuit Resistance Below Threshold	B: B0002:11, B0002:12, B0002:13, B0002:1A (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B0002:2B	Driver Frontal Stage 2 Deployment Control: Signal Cross-Coupled	AO: BXXXX:2B (ANY BXXXX DTC WITH A 2B FAILURE TYPE) SIGNAL CROSS COUPLED (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B0002:4A	Driver Frontal Stage 2 Deployment Control: Incorrect Component Installed	AP: BXXXX:4A (ANY BXXXX DTC WITH A 4A FAILURE TYPE) INCORRECT COMPONENT INSTALLED (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B0004:11	Driver Knee Bolster Deployment Control: Circuit Short To Ground	C: B0004:11, B0004:12, B0004:13, B0004:1A (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B0004:12	Driver Knee Bolster Deployment Control: Circuit Short To Battery	C: B0004:11, B0004:12, B0004:13, B0004:1A (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B0004:13	Driver Knee Bolster Deployment Control: Circuit Open	C: B0004:11, B0004:12, B0004:13, B0004:1A (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B0004:1A	Driver Knee Bolster Deployment Control: Circuit Resistance Below Threshold	C: B0004:11, B0004:12, B0004:13, B0004:1A (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B0004:2B	Driver Knee Bolster Deployment Control: Signal Cross-Coupled	AO: BXXXX:2B (ANY BXXXX DTC WITH A 2B FAILURE TYPE) SIGNAL CROSS COUPLED (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B0004:4A	Driver Knee Bolster Deployment Control: Incorrect Component Installed	AP: BXXXX:4A (ANY BXXXX DTC WITH A 4A FAILURE TYPE) INCORRECT COMPONENT INSTALLED (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B0005:11	Collapsible Steering Column Deployment Control: Circuit Short To Ground	D: B0005:11, B0005:12, B0005:13, B0005:1A (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B0005:12	Collapsible Steering Column Deployment Control: Circuit Short To Battery	D: B0005:11, B0005:12, B0005:13, B0005:1A (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B0005:13	Collapsible Steering Column Deployment Control: Circuit Open	D: B0005:11, B0005:12, B0005:13, B0005:1A (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B0005:1A	Collapsible Steering Column Deployment Control: Circuit Resistance Below Threshold	D: B0005:11, B0005:12, B0005:13, B0005:1A (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B0005:2B	Collapsible Steering Column Deployment Control: Signal Cross-Coupled	AO: BXXXX:2B (ANY BXXXX DTC WITH A 2B FAILURE TYPE) SIGNAL CROSS COUPLED (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B0005:4A	Collapsible Steering Column Deployment Control: Incorrect Component Installed	AP: BXXXX:4A (ANY BXXXX DTC WITH A 4A FAILURE TYPE) INCORRECT COMPONENT INSTALLED (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B0010:11	Passenger Frontal Stage 1 Deployment Control: Circuit Short To Ground	E: B0010:11, B0010:12, B0010:13, B0010:1A (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B0010:12	Passenger Frontal Stage 1 Deployment Control: Circuit Short To Battery	E: B0010:11, B0010:12, B0010:13, B0010:1A (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B0010:13	Passenger Frontal Stage 1 Deployment Control: Circuit Open	E: B0010:11, B0010:12, B0010:13, B0010:1A (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B0010:1A	Passenger Frontal Stage 1 Deployment Control: Circuit Resistance Below Threshold	E: B0010:11, B0010:12, B0010:13, B0010:1A (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))

B0010:2B	Passenger Frontal Stage 1 Deployment Control: Signal Cross-Coupled	AO: BXXXX:2B (ANY BXXXX DTC WITH A 2B FAILURE TYPE) SIGNAL CROSS COUPLED (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B0010:4A	Passenger Frontal Stage 1 Deployment Control: Incorrect Component Installed	AP: BXXXX:4A (ANY BXXXX DTC WITH A 4A FAILURE TYPE) INCORRECT COMPONENT INSTALLED (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B0011:11	Passenger Frontal Stage 2 Deployment Control: Circuit Short To Ground	F: B0011:11, B0011:12, B0011:13, B0011:1A (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B0011:12	Passenger Frontal Stage 2 Deployment Control: Circuit Short To Battery	F: B0011:11, B0011:12, B0011:13, B0011:1A (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B0011:13	Passenger Frontal Stage 2 Deployment Control: Circuit Open	F: B0011:11, B0011:12, B0011:13, B0011:1A (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B0011:1A	Passenger Frontal Stage 2 Deployment Control: Circuit Resistance Below Threshold	F: B0011:11, B0011:12, B0011:13, B0011:1A (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B0011:2B	Passenger Frontal Stage 2 Deployment Control: Signal Cross-Coupled	AO: BXXXX:2B (ANY BXXXX DTC WITH A 2B FAILURE TYPE) SIGNAL CROSS COUPLED (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B0011:4A	Passenger Frontal Stage 2 Deployment Control: Incorrect Component Installed	AP: BXXXX:4A (ANY BXXXX DTC WITH A 4A FAILURE TYPE) INCORRECT COMPONENT INSTALLED (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B0013:11	Passenger Knee Bolster Deployment Control: Circuit Short To Ground	G: B0013:11, B0013:12, B0013:13, B0013:1A (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B0013:12	Passenger Knee Bolster Deployment Control: Circuit Short To Battery	G: B0013:11, B0013:12, B0013:13, B0013:1A (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B0013:13	Passenger Knee Bolster Deployment Control: Circuit Open	G: B0013:11, B0013:12, B0013:13, B0013:1A (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B0013:1A	Passenger Knee Bolster Deployment Control: Circuit Resistance Below Threshold	G: B0013:11, B0013:12, B0013:13, B0013:1A (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B0013:2B	Passenger Knee Bolster Deployment Control: Signal Cross-Coupled	AO: BXXXX:2B (ANY BXXXX DTC WITH A 2B FAILURE TYPE) SIGNAL CROSS COUPLED (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B0013:4A	Passenger Knee Bolster Deployment Control: Incorrect Component Installed	AP: BXXXX:4A (ANY BXXXX DTC WITH A 4A FAILURE TYPE) INCORRECT COMPONENT INSTALLED (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B0050:11	Driver Seatbelt Sensor: Circuit Short To Ground	H: B0050:11, B0050:12, B0050:13, B0050:1D (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B0050:12	Driver Seatbelt Sensor: Circuit Short To Battery	H: B0050:11, B0050:12, B0050:13, B0050:1D (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B0050:13	Driver Seatbelt Sensor: Circuit Open	H: B0050:11, B0050:12, B0050:13, B0050:1D (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B0050:1D	Driver Seatbelt Sensor: Circuit Current Out Of Range	H: B0050:11, B0050:12, B0050:13, B0050:1D (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B0050:2B	Driver Seatbelt Sensor: Signal Cross-Coupled	AO: BXXXX:2B (ANY BXXXX DTC WITH A 2B FAILURE TYPE) SIGNAL CROSS COUPLED (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B0050:4A	Driver Seatbelt Sensor: Incorrect Component Installed	AP: BXXXX:4A (ANY BXXXX DTC WITH A 4A FAILURE TYPE) INCORRECT COMPONENT INSTALLED (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B0052:11	Passenger Seatbelt Sensor: Circuit Short To Ground	I: B0052:11, B0052:12, B0052:13, B0052:1D (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))

B0052:12	Passenger Seatbelt Sensor: Circuit Short To Battery	I: B0052:11 , B0052:12 , B0052:13 , B0052:1D (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B0052:13	Passenger Seatbelt Sensor: Circuit Open	I: B0052:11 , B0052:12 , B0052:13 , B0052:1D (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B0052:1D	Passenger Seatbelt Sensor: Circuit Current Out Of Range	I: B0052:11 , B0052:12 , B0052:13 , B0052:1D (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B0052:2B	Passenger Seatbelt Sensor: Signal Cross-Coupled	AO: BXXXX:2B (ANY BXXXX DTC WITH A 2B FAILURE TYPE) SIGNAL CROSS COUPLED (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B0052:4A	Passenger Seatbelt Sensor: Incorrect Component Installed	AP: BXXXX:4A (ANY BXXXX DTC WITH A 4A FAILURE TYPE) INCORRECT COMPONENT INSTALLED (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B0070:11	Driver Seatbelt Pretensioner 'A' Deployment Control: Circuit Short To Ground	J: B0070:11 , B0070:12 , B0070:13 , B0070:1A (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B0070:12	Driver Seatbelt Pretensioner 'A' Deployment Control: Circuit Short To Battery	J: B0070:11 , B0070:12 , B0070:13 , B0070:1A (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B0070:13	Driver Seatbelt Pretensioner 'A' Deployment Control: Circuit Open	J: B0070:11 , B0070:12 , B0070:13 , B0070:1A (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B0070:1A	Driver Seatbelt Pretensioner 'A' Deployment Control: Circuit Resistance Below Threshold	J: B0070:11 , B0070:12 , B0070:13 , B0070:1A (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B0070:2B	Driver Seatbelt Pretensioner 'A' Deployment Control: Signal Cross-Coupled	AO: BXXXX:2B (ANY BXXXX DTC WITH A 2B FAILURE TYPE) SIGNAL CROSS COUPLED (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B0070:4A	Driver Seatbelt Pretensioner 'A' Deployment Control: Incorrect Component Installed	AP: BXXXX:4A (ANY BXXXX DTC WITH A 4A FAILURE TYPE) INCORRECT COMPONENT INSTALLED (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B0072:11	Passenger Seatbelt Pretensioner 'A' Deployment Control: Circuit Short To Ground	K: B0072:11 , B0072:12 , B0072:13 , B0072:1A (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B0072:12	Passenger Seatbelt Pretensioner 'A' Deployment Control: Circuit Short To Battery	K: B0072:11 , B0072:12 , B0072:13 , B0072:1A (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B0072:13	Passenger Seatbelt Pretensioner 'A' Deployment Control: Circuit Open	K: B0072:11 , B0072:12 , B0072:13 , B0072:1A (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B0072:1A	Passenger Seatbelt Pretensioner 'A' Deployment Control: Circuit Resistance Below Threshold	K: B0072:11 , B0072:12 , B0072:13 , B0072:1A (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B0072:2B	Passenger Seatbelt Pretensioner 'A' Deployment Control: Signal Cross-Coupled	AO: BXXXX:2B (ANY BXXXX DTC WITH A 2B FAILURE TYPE) SIGNAL CROSS COUPLED (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B0072:4A	Passenger Seatbelt Pretensioner 'A' Deployment Control: Incorrect Component Installed	AP: BXXXX:4A (ANY BXXXX DTC WITH A 4A FAILURE TYPE) INCORRECT COMPONENT INSTALLED (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B007E:11	Driver Seatbelt Pretensioner 'C' Deployment Control: Circuit Short To Ground	L: B007E:11 , B007E:12 , B007E:13 , B007E:1A (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B007E:12	Driver Seatbelt Pretensioner 'C' Deployment Control: Circuit Short To Battery	L: B007E:11 , B007E:12 , B007E:13 , B007E:1A (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B007E:13	Driver Seatbelt Pretensioner 'C' Deployment Control: Circuit Open	L: B007E:11 , B007E:12 , B007E:13 , B007E:1A (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B007E:1A	Driver Seatbelt Pretensioner 'C' Deployment Control: Circuit Resistance Below Threshold	L: B007E:11 , B007E:12 , B007E:13 , B007E:1A (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))

B007E:2B	Driver Seatbelt Pretensioner 'C' Deployment Control: Signal Cross-Coupled	AO: BXXXX:2B (ANY BXXXX DTC WITH A 2B FAILURE TYPE) SIGNAL CROSS COUPLED (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B007E:4A	Driver Seatbelt Pretensioner 'C' Deployment Control: Incorrect Component Installed	AP: BXXXX:4A (ANY BXXXX DTC WITH A 4A FAILURE TYPE) INCORRECT COMPONENT INSTALLED (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B007F:11	Passenger Seatbelt Pretensioner 'C' Deployment Control: Circuit Short To Ground	M: B007F:11, B007F:12, B007F:13, B007F:1A (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B007F:12	Passenger Seatbelt Pretensioner 'C' Deployment Control: Circuit Short To Battery	M: B007F:11, B007F:12, B007F:13, B007F:1A (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B007F:13	Passenger Seatbelt Pretensioner 'C' Deployment Control: Circuit Open	M: B007F:11, B007F:12, B007F:13, B007F:1A (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B007F:1A	Passenger Seatbelt Pretensioner 'C' Deployment Control: Circuit Resistance Below Threshold	M: B007F:11, B007F:12, B007F:13, B007F:1A (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B007F:2B	Passenger Seatbelt Pretensioner 'C' Deployment Control: Signal Cross-Coupled	AO: BXXXX:2B (ANY BXXXX DTC WITH A 2B FAILURE TYPE) SIGNAL CROSS COUPLED (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B007F:4A	Passenger Seatbelt Pretensioner 'C' Deployment Control: Incorrect Component Installed	AP: BXXXX:4A (ANY BXXXX DTC WITH A 4A FAILURE TYPE) INCORRECT COMPONENT INSTALLED (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B0082:11	Passenger Seatbelt Load Limiter Deployment Control: Circuit Short To Ground	N: B0082:11, B0082:12, B0082:13, B0082:1A (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B0082:12	Passenger Seatbelt Load Limiter Deployment Control: Circuit Short To Battery	N: B0082:11, B0082:12, B0082:13, B0082:1A (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B0082:13	Passenger Seatbelt Load Limiter Deployment Control: Circuit Open	N: B0082:11, B0082:12, B0082:13, B0082:1A (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B0082:1A	Passenger Seatbelt Load Limiter Deployment Control: Circuit Resistance Below Threshold	N: B0082:11, B0082:12, B0082:13, B0082:1A (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B0082:2B	Passenger Seatbelt Load Limiter Deployment Control: Signal Cross-Coupled	AO: BXXXX:2B (ANY BXXXX DTC WITH A 2B FAILURE TYPE) SIGNAL CROSS COUPLED (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B0082:4A	Passenger Seatbelt Load Limiter Deployment Control: Incorrect Component Installed	AP: BXXXX:4A (ANY BXXXX DTC WITH A 4A FAILURE TYPE) INCORRECT COMPONENT INSTALLED (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B00A0:09	Occupant Classification System: Component Failures	O: B00A0:09, B00A0:4A, B00A0:63, B00A0:64 AND B00A0:68 (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B00A0:4A	Occupant Classification System: Incorrect Component Installed	O: B00A0:09, B00A0:4A, B00A0:63, B00A0:64 AND B00A0:68 (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B00A0:63	Occupant Classification System: Circuit/Component Protection Time-Out	O: B00A0:09, B00A0:4A, B00A0:63, B00A0:64 AND B00A0:68 (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B00A0:64	Occupant Classification System: Signal Plausibility Failure	O: B00A0:09, B00A0:4A, B00A0:63, B00A0:64 AND B00A0:68 (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B00A0:68	Occupant Classification System: Event Information	O: B00A0:09, B00A0:4A, B00A0:63, B00A0:64 AND B00A0:68 (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B00B5:11	Driver Seat Track Position Restraints Sensor: Circuit Short To Ground	P: B00B5:11, B00B5:12, B00B5:13, B00B5:1D (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B00B5:12	Driver Seat Track Position Restraints Sensor: Circuit Short To Battery	P: B00B5:11, B00B5:12, B00B5:13, B00B5:1D (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))

B00B5:13	Driver Seat Track Position Restraints Sensor: Circuit Open	P: B00B5:11, B00B5:12, B00B5:13, B00B5:1D (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B00B5:1D	Driver Seat Track Position Restraints Sensor: Circuit Current Out Of Range	P: B00B5:11, B00B5:12, B00B5:13, B00B5:1D (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B00B5:2B	Driver Seat Track Position Restraints Sensor: Signal Cross-Coupled	AO: BXXXX:2B (ANY BXXXX DTC WITH A 2B FAILURE TYPE) SIGNAL CROSS COUPLED (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B00B5:4A	Driver Seat Track Position Restraints Sensor: Incorrect Component Installed	AP: BXXXX:4A (ANY BXXXX DTC WITH A 4A FAILURE TYPE) INCORRECT COMPONENT INSTALLED (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B00C5:11	Passenger Seat Track Position Restraints Sensor: Circuit Short To Ground	Q: B00C5:11, B00C5:12, B00C5:13, B00C5:1D (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B00C5:12	Passenger Seat Track Position Restraints Sensor: Circuit Short To Battery	Q: B00C5:11, B00C5:12, B00C5:13, B00C5:1D (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B00C5:13	Passenger Seat Track Position Restraints Sensor: Circuit Open	Q: B00C5:11, B00C5:12, B00C5:13, B00C5:1D (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B00C5:1D	Passenger Seat Track Position Restraints Sensor: Circuit Current Out Of Range	Q: B00C5:11, B00C5:12, B00C5:13, B00C5:1D (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B00C5:2B	Passenger Seat Track Position Restraints Sensor: Signal Cross-Coupled	AO: BXXXX:2B (ANY BXXXX DTC WITH A 2B FAILURE TYPE) SIGNAL CROSS COUPLED (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B00C5:4A	Passenger Seat Track Position Restraints Sensor: Incorrect Component Installed	AP: BXXXX:4A (ANY BXXXX DTC WITH A 4A FAILURE TYPE) INCORRECT COMPONENT INSTALLED (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B00D5:12	Restraint System Passenger Disable Indicator: Circuit Short To Battery	R: B00D5:12, B00D5:14 (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B00D5:14	Restraint System Passenger Disable Indicator: Circuit Short To Ground Or Open	R: B00D5:12, B00D5:14 (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B00D5:4A	Restraint System Passenger Disable Indicator: Incorrect Component Installed	AP: BXXXX:4A (ANY BXXXX DTC WITH A 4A FAILURE TYPE) INCORRECT COMPONENT INSTALLED (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1193:00	Crash Event Storage Full and Locked: No Sub Type Information	S: B1193:00 (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B11CF:11	Passenger Frontal Airbag Canister Vent: Circuit Short To Ground	T: B11CF:11, B11CF:12, B11CF:13, B11CF:1A (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B11CF:12	Passenger Frontal Airbag Canister Vent: Circuit Short To Battery	T: B11CF:11, B11CF:12, B11CF:13, B11CF:1A (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B11CF:13	Passenger Frontal Airbag Canister Vent: Circuit Open	T: B11CF:11, B11CF:12, B11CF:13, B11CF:1A (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B11CF:1A	Passenger Frontal Airbag Canister Vent: Circuit Resistance Below Threshold	T: B11CF:11, B11CF:12, B11CF:13, B11CF:1A (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B11CF:2B	Passenger Frontal Airbag Canister Vent: Signal Cross-Coupled	AO: BXXXX:2B (ANY BXXXX DTC WITH A 2B FAILURE TYPE) SIGNAL CROSS COUPLED (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B11CF:4A	Passenger Frontal Airbag Canister Vent: Incorrect Component Installed	AP: BXXXX:4A (ANY BXXXX DTC WITH A 4A FAILURE TYPE) INCORRECT COMPONENT INSTALLED (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B11D8:12	Restraint Event Notification: Circuit Short To Battery	V: B11D8:12, B11D8:14 (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B11D8:14	Restraint Event Notification: Circuit Short To Ground Or Open	V: B11D8:12, B11D8:14 (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))

B1202:12	Restraint System Passenger Enable Indicator: Circuit Short To Battery	W: B1202:12, B1202:14 (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1202:14	Restraint System Passenger Enable Indicator: Circuit Short To Ground Or Open	W: B1202:12, B1202:14 (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1202:4A	Restraint System Passenger Enable Indicator: Incorrect Component Installed	AP: BXXXX:4A (ANY BXXXX DTC WITH A 4A FAILURE TYPE) INCORRECT COMPONENT INSTALLED (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1404:11	Driver Side Airbag Deployment Control: Circuit Short To Ground	X: B1404:11, B1404:12, B1404:13, B1404:1A (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1404:12	Driver Side Airbag Deployment Control: Circuit Short To Battery	X: B1404:11, B1404:12, B1404:13, B1404:1A (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1404:13	Driver Side Airbag Deployment Control: Circuit Open	X: B1404:11, B1404:12, B1404:13, B1404:1A (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1404:1A	Driver Side Airbag Deployment Control: Circuit Resistance Below Threshold	X: B1404:11, B1404:12, B1404:13, B1404:1A (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1404:2B	Driver Side Airbag Deployment Control: Signal Cross-Coupled	AO: BXXXX:2B (ANY BXXXX DTC WITH A 2B FAILURE TYPE) SIGNAL CROSS COUPLED (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1404:4A	Driver Side Airbag Deployment Control: Incorrect Component Installed	AP: BXXXX:4A (ANY BXXXX DTC WITH A 4A FAILURE TYPE) INCORRECT COMPONENT INSTALLED (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1405:11	Driver Side Curtain Deployment Control 1: Circuit Short To Ground	Y: B1405:11, B1405:12, B1405:13, B1405:1A WITH COUPE (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1405:11	Driver Side Curtain Deployment Control 1: Circuit Short To Ground	Z: B1405:11, B1405:12, B1405:13, B1405:1A WITH CONVERTIBLE (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1405:12	Driver Side Curtain Deployment Control 1: Circuit Short To Battery	Y: B1405:11, B1405:12, B1405:13, B1405:1A WITH COUPE (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1405:12	Driver Side Curtain Deployment Control 1: Circuit Short To Battery	Z: B1405:11, B1405:12, B1405:13, B1405:1A WITH CONVERTIBLE (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1405:13	Driver Side Curtain Deployment Control 1: Circuit Open	Y: B1405:11, B1405:12, B1405:13, B1405:1A WITH COUPE (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1405:13	Driver Side Curtain Deployment Control 1: Circuit Open	Z: B1405:11, B1405:12, B1405:13, B1405:1A WITH CONVERTIBLE (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1405:1A	Driver Side Curtain Deployment Control 1: Circuit Resistance Below Threshold	Y: B1405:11, B1405:12, B1405:13, B1405:1A WITH COUPE (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1405:1A	Driver Side Curtain Deployment Control 1: Circuit Resistance Below Threshold	Z: B1405:11, B1405:12, B1405:13, B1405:1A WITH CONVERTIBLE (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1405:2B	Driver Side Curtain Deployment Control 1: Signal Cross-Coupled	AO: BXXXX:2B (ANY BXXXX DTC WITH A 2B FAILURE TYPE) SIGNAL CROSS COUPLED (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1405:4A	Driver Side Curtain Deployment Control 1: Incorrect Component Installed	AP: BXXXX:4A (ANY BXXXX DTC WITH A 4A FAILURE TYPE) INCORRECT COMPONENT INSTALLED (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1407:11	Passenger Side Airbag Deployment Control: Circuit Short To Ground	AA: B1407:11, B1407:12, B1407:13, B1407:1A (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1407:12	Passenger Side Airbag Deployment Control: Circuit Short To Battery	AA: B1407:11, B1407:12, B1407:13, B1407:1A (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))

B1407:13	Passenger Side Airbag Deployment Control: Circuit Open	AA: B1407:11, B1407:12, B1407:13, B1407:1A (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1407:1A	Passenger Side Airbag Deployment Control: Circuit Resistance Below Threshold	AA: B1407:11, B1407:12, B1407:13, B1407:1A (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1407:2B	Passenger Side Airbag Deployment Control: Signal Cross-Coupled	AO: BXXXX:2B (ANY BXXXX DTC WITH A 2B FAILURE TYPE) SIGNAL CROSS COUPLED (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1407:4A	Passenger Side Airbag Deployment Control: Incorrect Component Installed	AP: BXXXX:4A (ANY BXXXX DTC WITH A 4A FAILURE TYPE) INCORRECT COMPONENT INSTALLED (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1408:11	Passenger Side Curtain Deployment Control 1: Circuit Short To Ground	AB: B1408:11, B1408:12, B1408:13, B1408:1A WITH COUPE (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1408:11	Passenger Side Curtain Deployment Control 1: Circuit Short To Ground	AC: B1408:11, B1408:12, B1408:13, B1408:1A WITH CONVERTIBLE (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1408:12	Passenger Side Curtain Deployment Control 1: Circuit Short To Battery	AB: B1408:11, B1408:12, B1408:13, B1408:1A WITH COUPE (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1408:12	Passenger Side Curtain Deployment Control 1: Circuit Short To Battery	AC: B1408:11, B1408:12, B1408:13, B1408:1A WITH CONVERTIBLE (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1408:13	Passenger Side Curtain Deployment Control 1: Circuit Open	AB: B1408:11, B1408:12, B1408:13, B1408:1A WITH COUPE (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1408:13	Passenger Side Curtain Deployment Control 1: Circuit Open	AC: B1408:11, B1408:12, B1408:13, B1408:1A WITH CONVERTIBLE (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1408:1A	Passenger Side Curtain Deployment Control 1: Circuit Resistance Below Threshold	AB: B1408:11, B1408:12, B1408:13, B1408:1A WITH COUPE (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1408:1A	Passenger Side Curtain Deployment Control 1: Circuit Resistance Below Threshold	AC: B1408:11, B1408:12, B1408:13, B1408:1A WITH CONVERTIBLE (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1408:2B	Passenger Side Curtain Deployment Control 1: Signal Cross-Coupled	AO: BXXXX:2B (ANY BXXXX DTC WITH A 2B FAILURE TYPE) SIGNAL CROSS COUPLED (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1408:4A	Passenger Side Curtain Deployment Control 1: Incorrect Component Installed	AP: BXXXX:4A (ANY BXXXX DTC WITH A 4A FAILURE TYPE) INCORRECT COMPONENT INSTALLED (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B140C:11	Second Row Driver Side Seatbelt Sensor: Circuit Short To Ground	AD: B140C:11, B140C:12, B140C:13, B140C:1D (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B140C:12	Second Row Driver Side Seatbelt Sensor: Circuit Short To Battery	AD: B140C:11, B140C:12, B140C:13, B140C:1D (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B140C:13	Second Row Driver Side Seatbelt Sensor: Circuit Open	AD: B140C:11, B140C:12, B140C:13, B140C:1D (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B140C:1D	Second Row Driver Side Seatbelt Sensor: Circuit Current Out Of Range	AD: B140C:11, B140C:12, B140C:13, B140C:1D (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B140C:2B	Second Row Driver Side Seatbelt Sensor: Signal Cross-Coupled	AO: BXXXX:2B (ANY BXXXX DTC WITH A 2B FAILURE TYPE) SIGNAL CROSS COUPLED (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B140C:4A	Second Row Driver Side Seatbelt Sensor: Incorrect Component Installed	AP: BXXXX:4A (ANY BXXXX DTC WITH A 4A FAILURE TYPE) INCORRECT COMPONENT INSTALLED (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B140D:11	Second Row Passenger Side Seatbelt Sensor: Circuit Short To Ground	AE: B140D:11, B140D:12, B140D:13, B140D:1D (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))

B140D:12	Second Row Passenger Side Seatbelt Sensor: Circuit Short To Battery	AE: B140D:11, B140D:12, B140D:13, B140D:1D (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B140D:13	Second Row Passenger Side Seatbelt Sensor: Circuit Open	AE: B140D:11, B140D:12, B140D:13, B140D:1D (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B140D:1D	Second Row Passenger Side Seatbelt Sensor: Circuit Current Out Of Range	AE: B140D:11, B140D:12, B140D:13, B140D:1D (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B140D:2B	Second Row Passenger Side Seatbelt Sensor: Signal Cross-Coupled	AO: BXXXX:2B (ANY BXXXX DTC WITH A 2B FAILURE TYPE) SIGNAL CROSS COUPLED (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B140D:4A	Second Row Passenger Side Seatbelt Sensor: Incorrect Component Installed	AP: BXXXX:4A (ANY BXXXX DTC WITH A 4A FAILURE TYPE) INCORRECT COMPONENT INSTALLED (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1410:11	Second Row Driver Side Seatbelt Pretensioner Deployment Control: Circuit Short To Ground	AF: B1410:11, B1410:12, B1410:13, B1410:1A (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1410:12	Second Row Driver Side Seatbelt Pretensioner Deployment Control: Circuit Short To Battery	AF: B1410:11, B1410:12, B1410:13, B1410:1A (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1410:13	Second Row Driver Side Seatbelt Pretensioner Deployment Control: Circuit Open	AF: B1410:11, B1410:12, B1410:13, B1410:1A (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1410:1A	Second Row Driver Side Seatbelt Pretensioner Deployment Control: Circuit Resistance Below Threshold	AF: B1410:11, B1410:12, B1410:13, B1410:1A (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1410:2B	Second Row Driver Side Seatbelt Pretensioner Deployment Control: Signal Cross-Coupled	AO: BXXXX:2B (ANY BXXXX DTC WITH A 2B FAILURE TYPE) SIGNAL CROSS COUPLED (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1410:4A	Second Row Driver Side Seatbelt Pretensioner Deployment Control: Incorrect Component Installed	AP: BXXXX:4A (ANY BXXXX DTC WITH A 4A FAILURE TYPE) INCORRECT COMPONENT INSTALLED (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1412:11	Second Row Passenger Side Seatbelt Pretensioner Deployment Control: Circuit Short To Ground	AG: B1412:11, B1412:12, B1412:13, B1412:1A (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1412:12	Second Row Passenger Side Seatbelt Pretensioner Deployment Control: Circuit Short To Battery	AG: B1412:11, B1412:12, B1412:13, B1412:1A (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1412:13	Second Row Passenger Side Seatbelt Pretensioner Deployment Control: Circuit Open	AG: B1412:11, B1412:12, B1412:13, B1412:1A (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1412:1A	Second Row Passenger Side Seatbelt Pretensioner Deployment Control: Circuit Resistance Below Threshold	AG: B1412:11, B1412:12, B1412:13, B1412:1A (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1412:2B	Second Row Passenger Side Seatbelt Pretensioner Deployment Control: Signal Cross-Coupled	AO: BXXXX:2B (ANY BXXXX DTC WITH A 2B FAILURE TYPE) SIGNAL CROSS COUPLED (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1412:4A	Second Row Passenger Side Seatbelt Pretensioner Deployment Control: Incorrect Component Installed	AP: BXXXX:4A (ANY BXXXX DTC WITH A 4A FAILURE TYPE) INCORRECT COMPONENT INSTALLED (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1413:11	Driver Frontal Restraints Sensor: Circuit Short To Ground	AH: B1413:11, B1413:12, B1413:13 (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1413:12	Driver Frontal Restraints Sensor: Circuit Short To Battery	AH: B1413:11, B1413:12, B1413:13 (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1413:13	Driver Frontal Restraints Sensor: Circuit Open	AH: B1413:11, B1413:12, B1413:13 (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1413:2B	Driver Frontal Restraints Sensor: Signal Cross-Coupled	AO: BXXXX:2B (ANY BXXXX DTC WITH A 2B FAILURE TYPE) SIGNAL CROSS COUPLED (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))

B1413:4A	Driver Frontal Restraints Sensor: Incorrect Component Installed	AP: BXXXX:4A (ANY BXXXX DTC WITH A 4A FAILURE TYPE) INCORRECT COMPONENT INSTALLED (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1413:81	Driver Frontal Restraints Sensor: Invalid Serial Data Received	AJ: IMPACT SENSOR INTERNAL FAULTS (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1413:96	Driver Frontal Restraints Sensor: Component Internal Failure	AJ: IMPACT SENSOR INTERNAL FAULTS (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1414:11	Driver Side Restraints Sensor 1: Circuit Short To Ground	AK: B1414:11, B1414:12, B1414:13 WITH CONVERTIBLE (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1414:11	Driver Side Restraints Sensor 1: Circuit Short To Ground	AL: B1414:11, B1414:12, B1414:13, B1419:11, B1419:12, B1419:13 WITH COUPE (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1414:12	Driver Side Restraints Sensor 1: Circuit Short To Battery	AK: B1414:11, B1414:12, B1414:13 WITH CONVERTIBLE (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1414:12	Driver Side Restraints Sensor 1: Circuit Short To Battery	AL: B1414:11, B1414:12, B1414:13, B1419:11, B1419:12, B1419:13 WITH COUPE (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1414:13	Driver Side Restraints Sensor 1: Circuit Open	AK: B1414:11, B1414:12, B1414:13 WITH CONVERTIBLE (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1414:13	Driver Side Restraints Sensor 1: Circuit Open	AL: B1414:11, B1414:12, B1414:13, B1419:11, B1419:12, B1419:13 WITH COUPE (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1414:2B	Driver Side Restraints Sensor 1: Signal Cross-Coupled	AO: BXXXX:2B (ANY BXXXX DTC WITH A 2B FAILURE TYPE) SIGNAL CROSS COUPLED (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1414:4A	Driver Side Restraints Sensor 1: Incorrect Component Installed	AP: BXXXX:4A (ANY BXXXX DTC WITH A 4A FAILURE TYPE) INCORRECT COMPONENT INSTALLED (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1414:81	Driver Side Restraints Sensor 1: Invalid Serial Data Received	AJ: IMPACT SENSOR INTERNAL FAULTS (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1414:96	Driver Side Restraints Sensor 1: Component Internal Failure	AJ: IMPACT SENSOR INTERNAL FAULTS (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1415:11	Driver Side Restraints Sensor 2: Circuit Short To Ground	AN: B1415:11, B1415:12, B1415:13, B1418:11, B1418:12, B1418:13, FOR COUPE (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1415:12	Driver Side Restraints Sensor 2: Circuit Short To Battery	AN: B1415:11, B1415:12, B1415:13, B1418:11, B1418:12, B1418:13, FOR COUPE (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1415:13	Driver Side Restraints Sensor 2: Circuit Open	AN: B1415:11, B1415:12, B1415:13, B1418:11, B1418:12, B1418:13, FOR COUPE (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1415:2B	Driver Side Restraints Sensor 2: Signal Cross-Coupled	AO: BXXXX:2B (ANY BXXXX DTC WITH A 2B FAILURE TYPE) SIGNAL CROSS COUPLED (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1415:4A	Driver Side Restraints Sensor 2: Incorrect Component Installed	AP: BXXXX:4A (ANY BXXXX DTC WITH A 4A FAILURE TYPE) INCORRECT COMPONENT INSTALLED (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1415:81	Driver Side Restraints Sensor 2: Invalid Serial Data Received	AJ: IMPACT SENSOR INTERNAL FAULTS (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1415:96	Driver Side Restraints Sensor 2: Component Internal Failure	AJ: IMPACT SENSOR INTERNAL FAULTS (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1417:11	Passenger Frontal Restraints Sensor: Circuit Short To Ground	AI: B1417:11, B1417:12, B1417:13 (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))

B1417:12	Passenger Frontal Restraints Sensor: Circuit Short To Battery	AI: B1417:11, B1417:12, B1417:13 (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1417:13	Passenger Frontal Restraints Sensor: Circuit Open	AI: B1417:11, B1417:12, B1417:13 (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1417:2B	Passenger Frontal Restraints Sensor: Signal Cross-Coupled	AO: BXXXX:2B (ANY BXXXX DTC WITH A 2B FAILURE TYPE) SIGNAL CROSS COUPLED (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1417:4A	Passenger Frontal Restraints Sensor: Incorrect Component Installed	AP: BXXXX:4A (ANY BXXXX DTC WITH A 4A FAILURE TYPE) INCORRECT COMPONENT INSTALLED (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1417:81	Passenger Frontal Restraints Sensor: Invalid Serial Data Received	AJ: IMPACT SENSOR INTERNAL FAULTS (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1417:96	Passenger Frontal Restraints Sensor: Component Internal Failure	AJ: IMPACT SENSOR INTERNAL FAULTS (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1418:11	Passenger Side Restraints Sensor 1: Circuit Short To Ground	AN: B1415:11, B1415:12, B1415:13, B1418:11, B1418:12, B1418:13, FOR COUPE (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1418:11	Passenger Side Restraints Sensor 1: Circuit Short To Ground	AM: B1418:11, B1418:12, B1418:13 WITH CONVERTIBLE (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1418:12	Passenger Side Restraints Sensor 1: Circuit Short To Battery	AN: B1415:11, B1415:12, B1415:13, B1418:11, B1418:12, B1418:13, FOR COUPE (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1418:12	Passenger Side Restraints Sensor 1: Circuit Short To Battery	AM: B1418:11, B1418:12, B1418:13 WITH CONVERTIBLE (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1418:13	Passenger Side Restraints Sensor 1: Circuit Open	AN: B1415:11, B1415:12, B1415:13, B1418:11, B1418:12, B1418:13, FOR COUPE (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1418:13	Passenger Side Restraints Sensor 1: Circuit Open	AM: B1418:11, B1418:12, B1418:13 WITH CONVERTIBLE (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1418:2B	Passenger Side Restraints Sensor 1: Signal Cross-Coupled	AO: BXXXX:2B (ANY BXXXX DTC WITH A 2B FAILURE TYPE) SIGNAL CROSS COUPLED (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1418:4A	Passenger Side Restraints Sensor 1: Incorrect Component Installed	AP: BXXXX:4A (ANY BXXXX DTC WITH A 4A FAILURE TYPE) INCORRECT COMPONENT INSTALLED (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1418:81	Passenger Side Restraints Sensor 1: Invalid Serial Data Received	AJ: IMPACT SENSOR INTERNAL FAULTS (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1418:96	Passenger Side Restraints Sensor 1: Component Internal Failure	AJ: IMPACT SENSOR INTERNAL FAULTS (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1419:11	Passenger Side Restraints Sensor 2: Circuit Short To Ground	AL: B1414:11, B1414:12, B1414:13, B1419:11, B1419:12, B1419:13 WITH COUPE (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1419:12	Passenger Side Restraints Sensor 2: Circuit Short To Battery	AL: B1414:11, B1414:12, B1414:13, B1419:11, B1419:12, B1419:13 WITH COUPE (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1419:13	Passenger Side Restraints Sensor 2: Circuit Open	AL: B1414:11, B1414:12, B1414:13, B1419:11, B1419:12, B1419:13 WITH COUPE (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1419:2B	Passenger Side Restraints Sensor 2: Signal Cross-Coupled	AO: BXXXX:2B (ANY BXXXX DTC WITH A 2B FAILURE TYPE) SIGNAL CROSS COUPLED (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1419:4A	Passenger Side Restraints Sensor 2: Incorrect Component Installed	AP: BXXXX:4A (ANY BXXXX DTC WITH A 4A FAILURE TYPE) INCORRECT COMPONENT INSTALLED (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))

B1419:81	Passenger Side Restraints Sensor 2: Invalid Serial Data Received	AJ: IMPACT SENSOR INTERNAL FAULTS (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1419:96	Passenger Side Restraints Sensor 2: Component Internal Failure	AJ: IMPACT SENSOR INTERNAL FAULTS (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1424:2B	Pedestrian Protection Sensor Center: Signal Cross-Coupled	AO: BXXXX:2B (ANY BXXXX DTC WITH A 2B FAILURE TYPE) SIGNAL CROSS COUPLED (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1424:4A	Pedestrian Protection Sensor Center: Incorrect Component Installed	AP: BXXXX:4A (ANY BXXXX DTC WITH A 4A FAILURE TYPE) INCORRECT COMPONENT INSTALLED (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1427:2B	Pedestrian Protection Sensor Driver Outer: Signal Cross-Coupled	AO: BXXXX:2B (ANY BXXXX DTC WITH A 2B FAILURE TYPE) SIGNAL CROSS COUPLED (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1427:4A	Pedestrian Protection Sensor Driver Outer: Incorrect Component Installed	AP: BXXXX:4A (ANY BXXXX DTC WITH A 4A FAILURE TYPE) INCORRECT COMPONENT INSTALLED (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B142D:00	Pyrotechnic End of Life Activation Performed: No Sub Type Information	AY: B142D:00, U2200:00, U3000:04, U3000:46, U3000:49 (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B147D:2B	Driver Side Hood Hinge Deployment Control: Signal Cross-Coupled	AO: BXXXX:2B (ANY BXXXX DTC WITH A 2B FAILURE TYPE) SIGNAL CROSS COUPLED (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B147D:4A	Driver Side Hood Hinge Deployment Control: Incorrect Component Installed	AP: BXXXX:4A (ANY BXXXX DTC WITH A 4A FAILURE TYPE) INCORRECT COMPONENT INSTALLED (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B147E:2B	Passenger Side Hood Hinge Deployment Control: Signal Cross-Coupled	AO: BXXXX:2B (ANY BXXXX DTC WITH A 2B FAILURE TYPE) SIGNAL CROSS COUPLED (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B147E:4A	Passenger Side Hood Hinge Deployment Control: Incorrect Component Installed	AP: BXXXX:4A (ANY BXXXX DTC WITH A 4A FAILURE TYPE) INCORRECT COMPONENT INSTALLED (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B1492:68	Fuel Cutoff Event: Event Information	AX: B1492:68 (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B14EB:2B	Pedestrian Protection Sensor Passenger Outer: Signal Cross-Coupled	AO: BXXXX:2B (ANY BXXXX DTC WITH A 2B FAILURE TYPE) SIGNAL CROSS COUPLED (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
B14EB:4A	Pedestrian Protection Sensor Passenger Outer: Incorrect Component Installed	AP: BXXXX:4A (ANY BXXXX DTC WITH A 4A FAILURE TYPE) INCORRECT COMPONENT INSTALLED (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
C0061:68	Lateral Acceleration Sensor: Event Information	AQ: C0061:68, C0062:68, C0063:68, C0064:68, C0065:68 (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
C0062:68	Longitudinal Acceleration Sensor: Event Information	AQ: C0061:68, C0062:68, C0063:68, C0064:68, C0065:68 (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
C0063:68	Yaw Rate Sensor: Event Information	AQ: C0061:68, C0062:68, C0063:68, C0064:68, C0065:68 (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
C0064:68	Roll Rate Sensor: Event Information	AQ: C0061:68, C0062:68, C0063:68, C0064:68, C0065:68 (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
C0065:68	Vertical Acceleration Sensor: Event Information	AQ: C0061:68, C0062:68, C0063:68, C0064:68, C0065:68 (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
U0028:88	Vehicle Communication Bus A: Bus Off	AR: U0028:88, U2101:00 (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
U0100:00	Lost Communication With ECM/PCM 'A': No Sub Type Information	AS: U0100:00 (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
U0140:00	Lost Communication With Body Control Module: No Sub Type Information	AT: U0140:00 (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))

U0154:00	Lost Communication with Restraints Occupant Classification System Module 'A': No Sub Type Information	AU: U0154:00 (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
U0253:00	Lost Communication With Accessory Protocol Interface Module: No Sub Type Information	AV: U0253:00 (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
U0401:00	Invalid Data Received from ECM/PCM A: No Sub Type Information	AW: INVALID DATA CONCERNS (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
U0401:81	Invalid Data Received from ECM/PCM A: Invalid Serial Data Received	AW: INVALID DATA CONCERNS (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
U0422:00	Invalid Data Received From Body Control Module: No Sub Type Information	AW: INVALID DATA CONCERNS (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
U0422:81	Invalid Data Received From Body Control Module: Invalid Serial Data Received	AW: INVALID DATA CONCERNS (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
U0422:82	Invalid Data Received From Body Control Module: Alive / Sequence Counter Incorrect / Not Updated	AW: INVALID DATA CONCERNS (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
U0423:00	Invalid Data Received from Instrument Panel Cluster Control Module: No Sub Type Information	AW: INVALID DATA CONCERNS (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
U0455:81	Invalid Data Received From Restraints Occupant Classification System Module 'A': Invalid Serial Data Received	AW: INVALID DATA CONCERNS (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
U0554:00	Invalid Data Received From Accessory Protocol Interface Module: No Sub Type Information	AW: INVALID DATA CONCERNS (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
U0557:82	Invalid Data Received From Front Controls Interface Module 'A': Alive / Sequence Counter Incorrect / Not Updated	AW: INVALID DATA CONCERNS (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
U2100:00	Initial Configuration Not Complete: No Sub Type Information	AZ: U2100:00 (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
U2101:00	Control Module Configuration Incompatible: No Sub Type Information	AR: U0028:88, U2101:00 (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
U2200:00	Control Module Configuration Memory Corrupt: No Sub Type Information	AY: B142D:00, U2200:00, U3000:04, U3000:46, U3000:49 (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
U2300:55	Central Configuration: Not Configured	BA: U2300:55, U2300:64 (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
U2300:64	Central Configuration: Signal Plausibility Failure	BA: U2300:55, U2300:64 (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
U3000:04	Control Module: System Internal Failure	AY: B142D:00, U2200:00, U3000:04, U3000:46, U3000:49 (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
U3000:46	Control Module: Calibration / Parameter Memory Failure	AY: B142D:00, U2200:00, U3000:04, U3000:46, U3000:49 (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
U3000:49	Control Module: Internal Electronic Failure	AY: B142D:00, U2200:00, U3000:04, U3000:46, U3000:49 (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
U3003:16	Battery Voltage: Circuit Voltage Below Threshold	BB: U3003:16 AND U3003:17 (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))
U3003:17	Battery Voltage: Circuit Voltage Above Threshold	BB: U3003:16 AND U3003:17 (Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS))

► [RTM \(radio transceiver module\)](#)

► [SCCM \(steering column control module\)](#)

- ▶ SODL (side obstacle detection control module LH)
- ▶ SODR (side obstacle detection control module RH)
- ▶ TCU (telematic control unit module)
- ▶ VDM (vehicle dynamics control module)
- ▶ WACM (wireless accessory charging module)