

## Master DTC Chart

- ▶ [ABS \(anti-lock brake system\)](#)
- ▶ [ACM \(audio front control module\)](#)
- ▶ [APIM \(SYNC module\)](#)
- ▶ [BCM \(body control module\)](#)
- ▶ [BCMB \(body control module B\)](#)
- ▶ [BCMC \(body control module C\)](#)
- ▶ [CCM \(cruise control module\)](#)
- ▶ [DDM \(driver door module\)](#)
- ▶ [DSM \(driver front seat module\)](#)
- ▶ [DSP \(audio digital signal processing module\)](#)
- ▶ [GWM \(gateway module A\)](#)
- ▶ [HCM \(headlamp control module\)](#)
- ▶ [HVAC \(heating, ventilation and air conditioning\)](#)
- ▶ [IPC \(instrument panel cluster\)](#)
- ▶ [IPMA \(image processing module A\)](#)
- ▶ [LDCMA \(Lighting Driver Control Module A\)](#)
- ▶ [LDCMB \(Lighting Driver Control Module B\)](#)
- ▶ [MRCMA \(movable roof control module A\)](#)
- ▶ [MRCMB \(movable roof control module B\)](#)
- ▶ [OCSM \(occupant classification system module\)](#)
- ▶ [PAM \(parking assist control module\)](#)
- ▶ [PCM \(powertrain control module\)](#)
- ▶ [PDM \(passenger door module\)](#)
- ▶ [PSCM \(power steering control module\)](#)
- ▶ [RCM \(restraints control module\)](#)
- ▼ [RTM \(radio transceiver module\)](#)

DTC	Description	PINPOINT TEST
U0146:00	Lost Communication With Serial Data Gateway 'A': No Sub Type Information	<a href="#">H: U0146:00</a> (Tire Pressure Monitoring System (TPMS))
U0401:00	Invalid Data Received from ECM/PCM A: No Sub Type Information	<a href="#">J: U0401:00, U0401:82</a> (Tire Pressure Monitoring System (TPMS))
U0401:82	Invalid Data Received from ECM/PCM A: Alive / Sequence Counter Incorrect / Not Updated	<a href="#">J: U0401:00, U0401:82</a> (Tire Pressure Monitoring System (TPMS))
U1A00:00	Private Communication Network: No Sub Type Information	<a href="#">O: U0258:87, U1A00:00</a> (Locks, Latches and Entry Systems)
U1A00:00	Private Communication Network: No Sub Type Information	<a href="#">I: U1A00:00</a> (Tire Pressure Monitoring System (TPMS))
U2100:00	Initial Configuration Not Complete: No Sub Type Information	<a href="#">K: U0559:56, U2100:00, U3000:04</a> (Tire Pressure Monitoring System (TPMS))
U3000:04	Control Module: System Internal Failure	<a href="#">K: U0559:56, U2100:00, U3000:04</a> (Tire Pressure Monitoring System (TPMS))

- ▶ [SCCM \(steering column control module\)](#)
- ▶ [SODL \(side obstacle detection control module LH\)](#)
- ▼ [SODR \(side obstacle detection control module RH\)](#)

<b>DTC</b>	<b>Description</b>	<b>PINPOINT TEST</b>
B13F4:54	Right Rear Side Sensor: Missing Calibration	<a href="#">M: BLIS SENSOR CALIBRATION CONCERNS - MULTIPLE DTC'S</a> (Blind Spot Information System)
B13F4:96	Right Rear Side Sensor: Component Internal Failure	<a href="#">P: B13F3:96 OR B13F4:96</a> (Blind Spot Information System)
B13F4:97	Right Rear Side Sensor: Component or System Operation Obstructed or Blocked	<a href="#">Q: B13F3:97 OR B13F4:97</a> (Blind Spot Information System)
B13F4:98	Right Rear Side Sensor: Component Or System Over Temperature	<a href="#">R: B13F3:98 OR B13F4:98</a> (Blind Spot Information System)
B157D:78	Right Rear Side Sensor Vertical Alignment: Alignment Or Adjustment Incorrect	<a href="#">M: BLIS SENSOR CALIBRATION CONCERNS - MULTIPLE DTC'S</a> (Blind Spot Information System)
B159C:78	Right Rear Side Sensor Horizontal Alignment: Alignment Or Adjustment Incorrect	<a href="#">M: BLIS SENSOR CALIBRATION CONCERNS - MULTIPLE DTC'S</a> (Blind Spot Information System)
U2008:08	Sensor Cluster: Bus Signal / Message Failure	<a href="#">S: DTC U2008:08</a> (Blind Spot Information System)
U2100:00	Initial Configuration Not Complete: No Sub Type Information	<a href="#">T: U2100:00 OR U2300:55</a> (Blind Spot Information System)
U2300:55	Central Configuration: Not Configured	<a href="#">T: U2100:00 OR U2300:55</a> (Blind Spot Information System)
U3000:41	Control Module: General Checksum Failure	<a href="#">U: U3000:41, U3000:42, U3000:44 OR U3000:49</a> (Blind Spot Information System)
U3000:42	Control Module: General Memory Failure	<a href="#">U: U3000:41, U3000:42, U3000:44 OR U3000:49</a> (Blind Spot Information System)
U3000:44	Control Module: Data Memory Failure	<a href="#">U: U3000:41, U3000:42, U3000:44 OR U3000:49</a> (Blind Spot Information System)
U3000:49	Control Module: Internal Electronic Failure	<a href="#">U: U3000:41, U3000:42, U3000:44 OR U3000:49</a> (Blind Spot Information System)
U3002:62	Vehicle Identification Number: Signal Compare Failure	<a href="#">V: U3002:62</a> (Blind Spot Information System)
U3003:16	Battery Voltage: Circuit Voltage Below Threshold	<a href="#">W: U3003:16</a> (Blind Spot Information System)
U3003:17	Battery Voltage: Circuit Voltage Above Threshold	<a href="#">X: 3003:17</a> (Blind Spot Information System)

► [\*\*TCU \(telematic control unit module\)\*\*](#)

► [\*\*VDM \(vehicle dynamics control module\)\*\*](#)

► [\*\*WACM \(wireless accessory charging module\)\*\*](#)

