

## Universal Transmitter

### Global Customer Symptom Code (GCSC) Chart

Diagnostics in this manual assume a certain skill level and knowledge of Ford-specific diagnostic practices. REFER to: [Diagnostic Methods](#) (100-00 General Information, Description and Operation).

Symptom	Action
Driver Aid & Information > Universal Remote > Performance > Inoperative	<a href="#">GO to Pinpoint Test A</a>

### Symptom Chart(s)

#### Symptom Chart: Universal Home Transmitter

Diagnostics in this manual assume a certain skill level and knowledge of Ford-specific diagnostic practices. REFER to: [Diagnostic Methods](#) (100-00 General Information, Description and Operation).

#### Symptom Chart

Condition	Actions
The universal transmitter is inoperative	<a href="#">GO to Pinpoint Test A</a>

### Pinpoint Tests

#### ▼ [PINPOINT TEST A: UNIVERSAL TRANSMITTER IS INOPERATIVE](#)

##### – [Introduction](#)

##### Normal Operation and Fault Conditions

REFER to: [Universal Transmitter - Overview](#) (419-02 Remote Convenience, Description and Operation).

##### Possible Sources

- Interior lighting concern
- Universal transmitter (part of the LH sun visor)

##### **A3 CHECK THE OPERATION OF THE LH (LEFT-HAND) VANITY MIRROR LAMP**

- Verify the operation of the LH vanity mirror lamp.  
REFER to: [Interior Lighting](#) (417-02 Interior Lighting, Diagnosis and Testing).

##### Does the LH vanity mirror lamp operate correctly?

Yes	INSTALL a new <u>LH</u> sun visor.
-----	------------------------------------

 Back

