

Message Center Configuration

Performance Shift Indicator, Shift Tone and Shift Point

1. **NOTE:** *The vehicle must be at a complete stop before configuring the performance shift indicator, shift tone or shift point.*
Press and release the SETUP button until the message center displays PRESS RESET TO SET SHIFTPPOINT.
2. Press the RESET button to toggle the performance shift indicator on or off. Once the performance shift indicator has been selected on or off, press the SETUP BUTTON.
3. Press the RESET button to toggle the shift tone on or off. Once the shift tone has been selected on or off, press the SETUP BUTTON.
4. **NOTE:** *The shift points can be configured from 1,500-6,000 rpm.*
Press the INFO button to lower the shift points in increments of 100 rpm.
5. Press the RESET button to raise the shift points in increments of 100 rpm.