


Generator — 5.0L

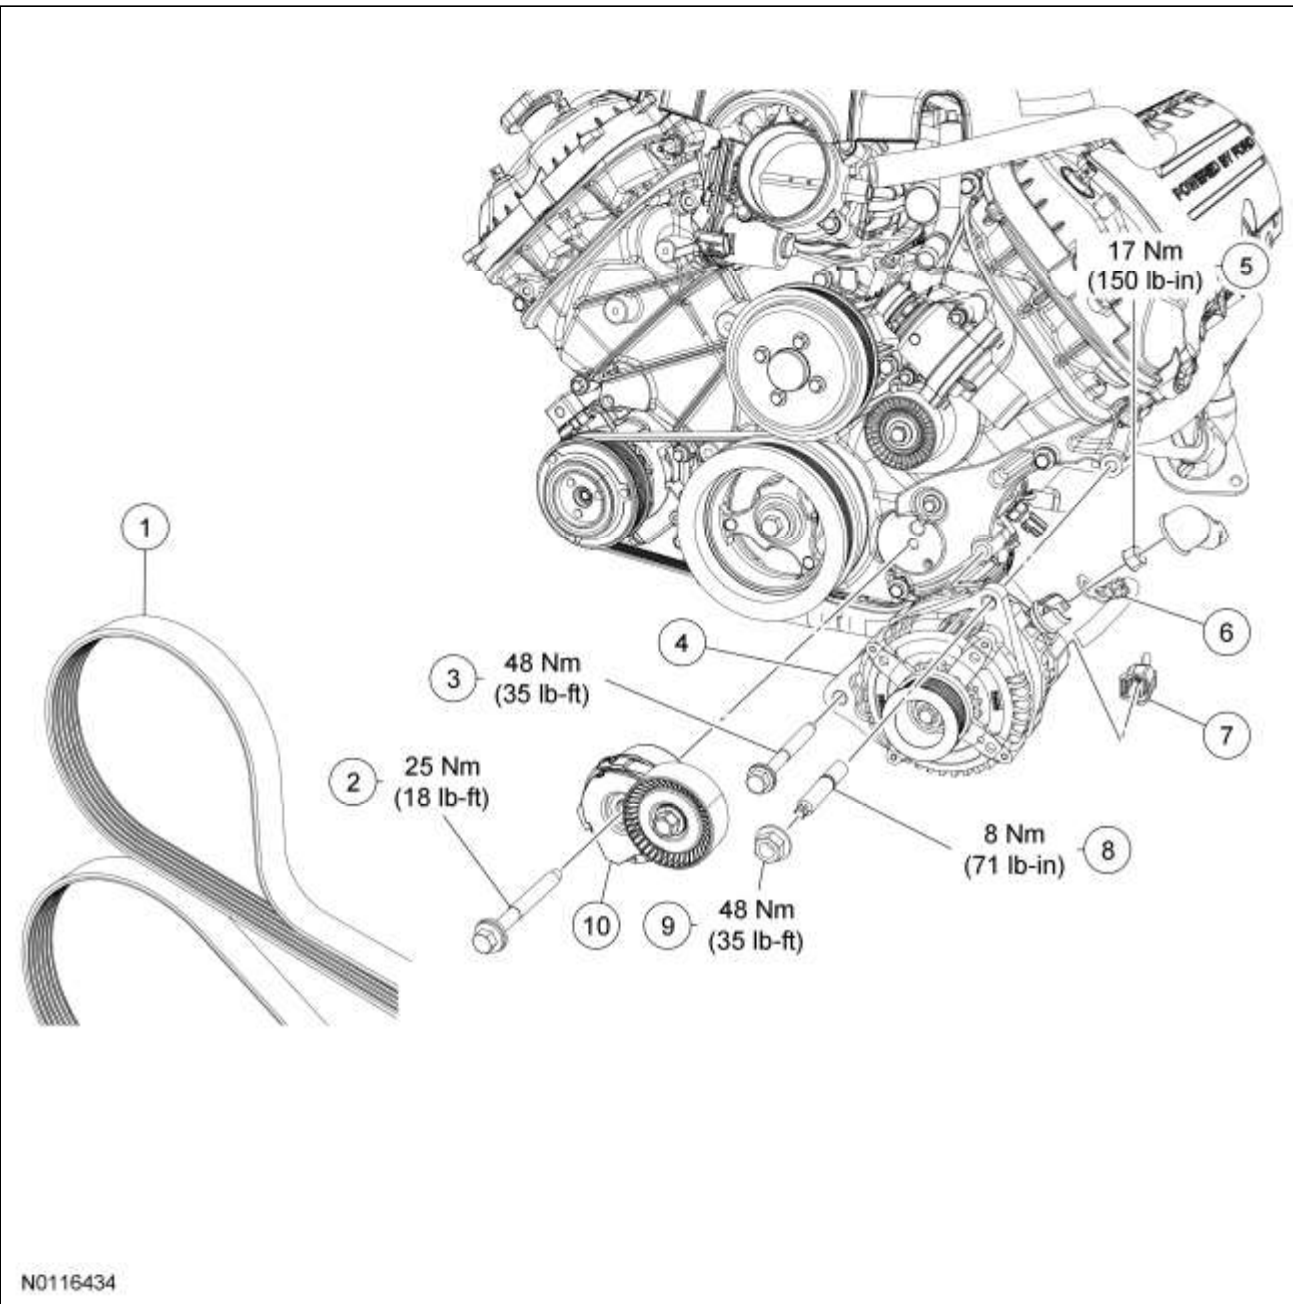

N0116434

Item	Part Number	Description
1	8620	Front End Accessory Drive (FEAD) belt
2	W707288	<u>FEAD</u> belt tensioner bolt
3	W715092	Generator bolt
4	10346	Generator
5	W711953	Generator B+ terminal nut
6	—	Generator B+ terminal (part of 14B060)
7	—	Generator electrical connector (part of 14B060)
8	W710217	Generator stud
9	W520414	Generator stud nut
10	6B209	<u>FEAD</u> belt tensioner

## Removal and Installation

1. Disconnect the battery. For additional information, refer to [Section 414-01](#).
2. Remove the Air Cleaner (ACL) outlet pipe and ACL assembly. For additional information, refer to [Section 303-12](#).
3. Remove the ACL inlet pipe from the radiator support. For additional information, refer to [Section 303-12](#).
4. Remove the Front End Accessory Drive (FEAD) belt tensioner. For additional information, refer to [Section 303-05](#).
5. Position the generator B+ protective boot aside, remove the B+ nut and position the B+ terminal aside.
  - To install, tighten to 17 Nm (150 lb-in).
6. Disconnect the generator electrical connector.
7. Remove the upper generator stud nut.
  - To install, tighten to 48 Nm (35 lb-ft).
8. Remove the upper generator stud.
  - To install, tighten to 8 Nm (71 lb-in).
9. Remove the lower generator bolt and the generator.
  - To install, tighten to 48 Nm (35 lb-ft).
10. To install, reverse the removal procedure.