


Engine Cooling - Component Location

NOTE: Coolant temperature will vary with ambient temperature and load. Temperatures shown are for ambient temperature of 38° C (100° F). Red arrows indicate a temperature over 87.5° C (190° F), Orange arrows indicate a temperature of approximately 87.5° C (190° F), Blue arrows indicate a temperature below 87.5° C (190° F).

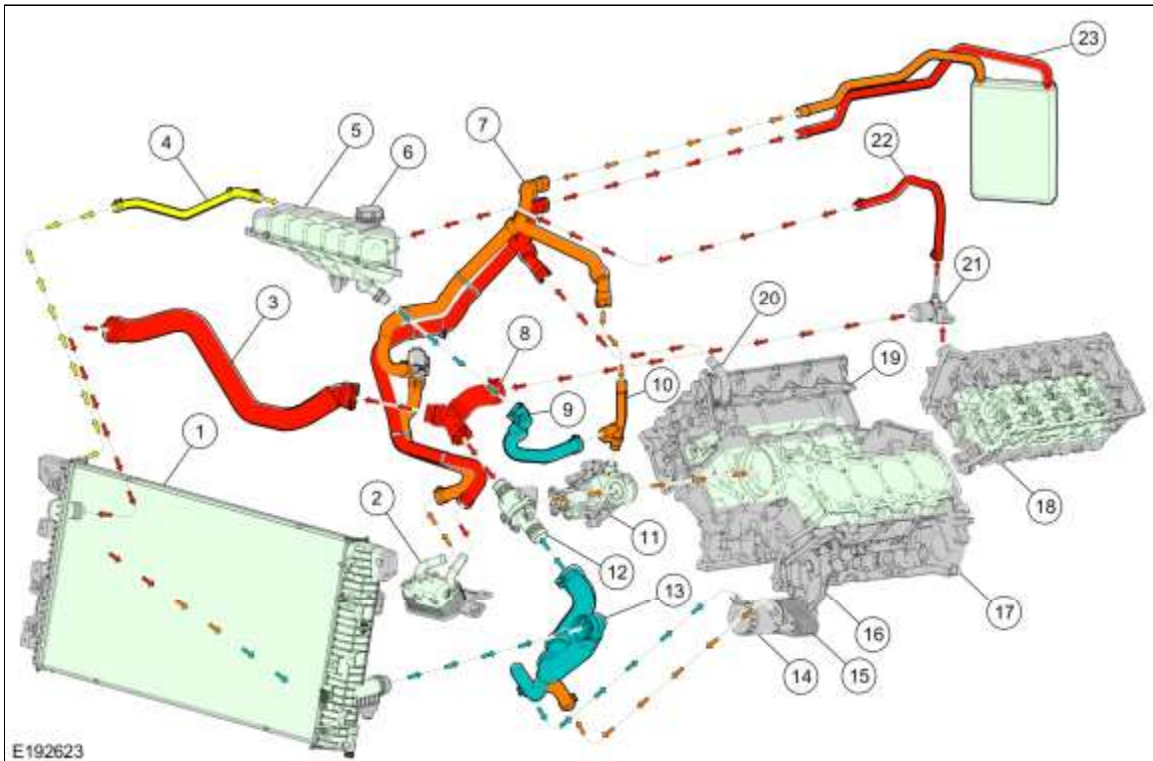

Item	Description
1	Radiator
2	Transmission Fluid Warmer
3	Upper radiator hose
4	Radiator-to-degas bottle hose
5	Degas bottle
6	Pressure relief cap
7	Heater outlet hose
8	Coolant bypass T assembly
9	Degas bottle-to-engine hose
10	Heater outlet tube
11	Coolant pump
12	Thermostat housing
13	Lower radiator hose
14	Oil filter
15	Oil cooler
16	Oil filter adapter
17	Cylinder block
18	Cylinder head <u>LH</u>

19	Cylinder head <u>RH</u>
20	Heater inlet tube
21	Coolant outlet connector
22	Degas bottle-to-engine hose
23	Heater core