


Engine Cooling - Component Location

NOTE: Coolant temperature will vary with ambient temperature and load. Temperatures shown are for ambient temperature of 38° C (100° F). Red arrows indicate a temperature over 82.2° C (180° F), Orange arrows indicate a temperature of approximately 82.2° C (180° F), Blue arrows indicate a temperature below 82.2° C (180° F).

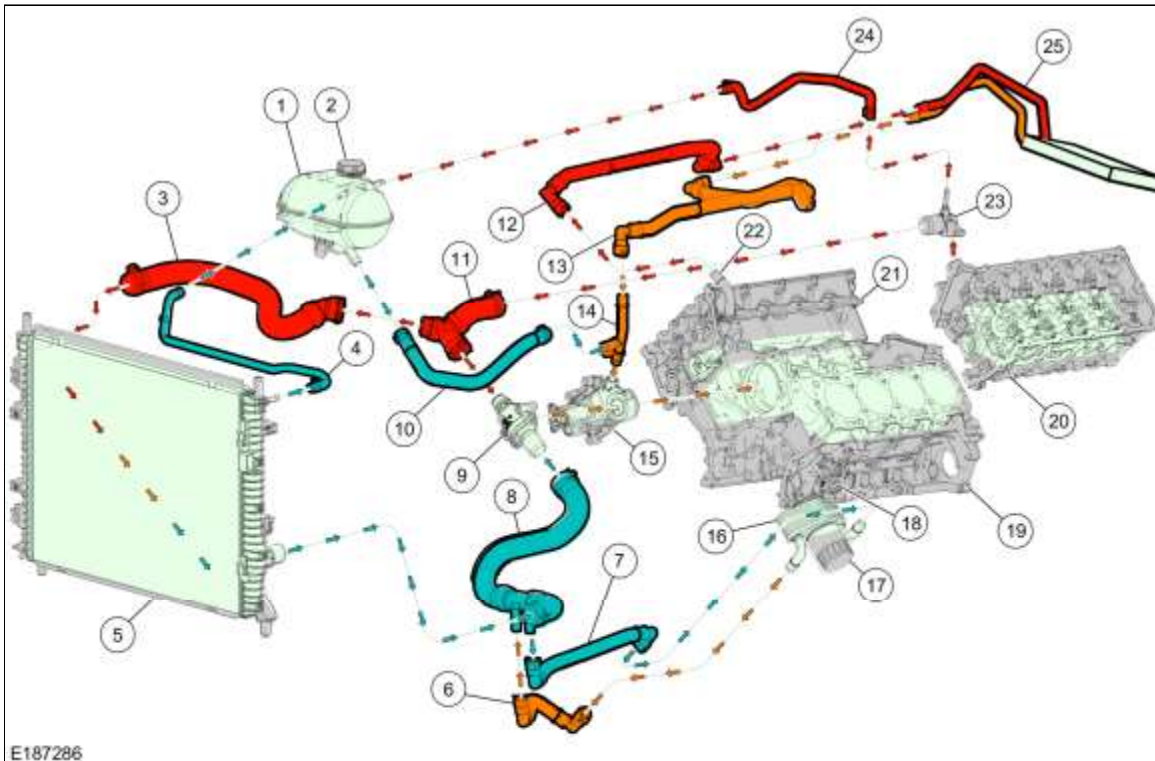

E187286

Item	Description
1	Degas bottle
2	Pressure relief cap
3	Upper radiator hose
4	Radiator-to-degas bottle hose
5	Radiator
6	Oil cooler outlet hose
7	Oil cooler inlet hose
8	Lower radiator hose
9	Thermostat housing
10	Degas bottle-to-engine hose
11	Coolant bypass T assembly
12	Heater inlet hose
13	Heater outlet hose
14	Heater outlet tube
15	Coolant pump
16	Oil cooler
17	Oil filter
18	Oil filter adapter

19	Cylinder block
20	Cylinder head <u>LH</u>
21	Cylinder head <u>RH</u>
22	Heater inlet tube
23	Coolant outlet connector
24	Coolant outlet connector-to-degas bottle hose
25	Heater core