



Cabin Air Filter

Removal


1. Remove the retainers and the RH lower instrument panel insulator.

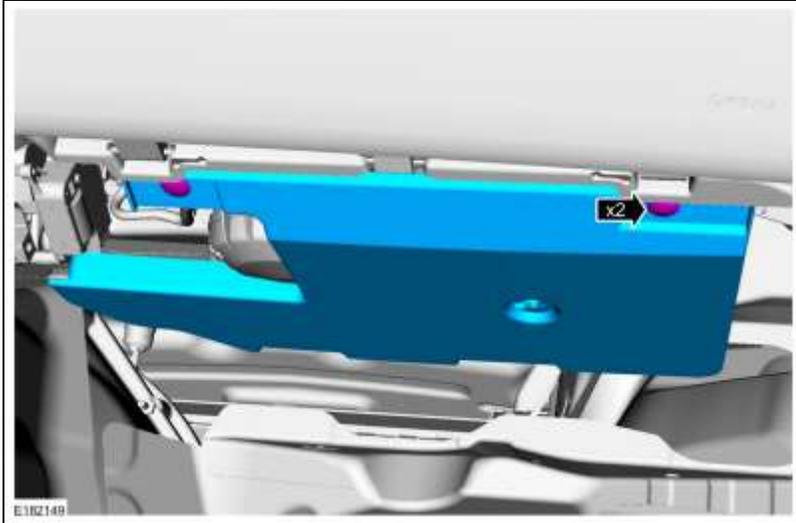

2. Remove the retainer and the cabin air filter cover.

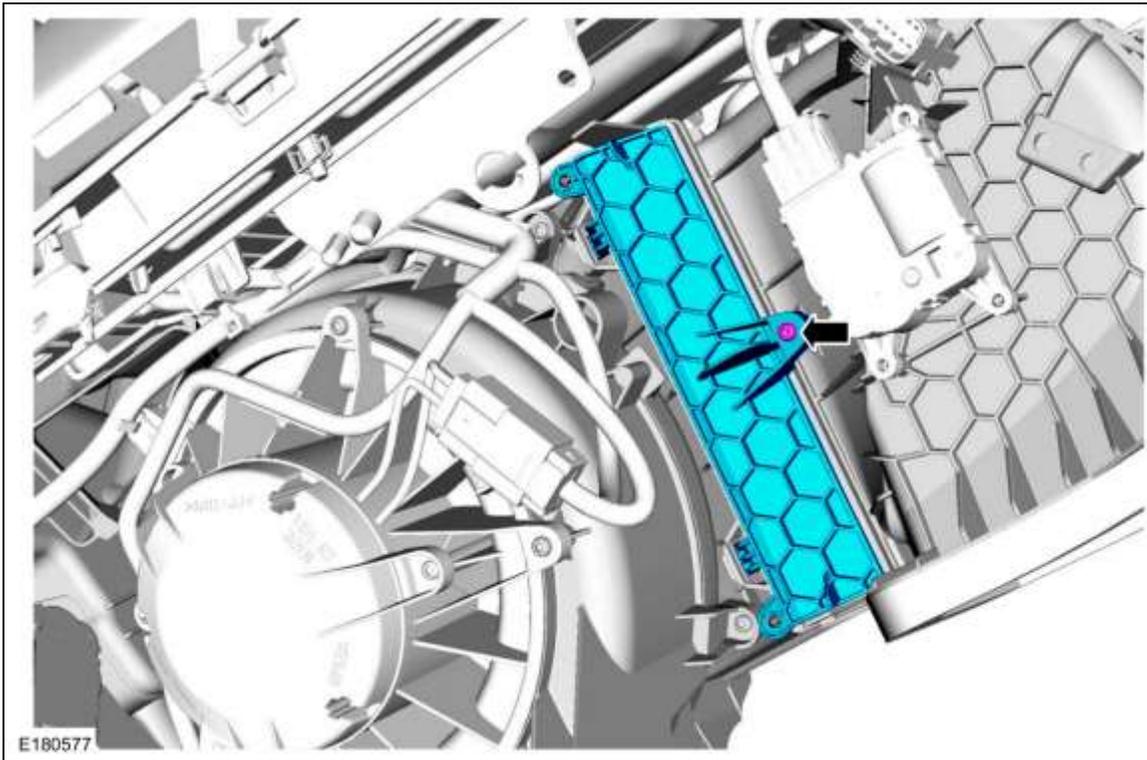

3. Remove the cabin air filter.

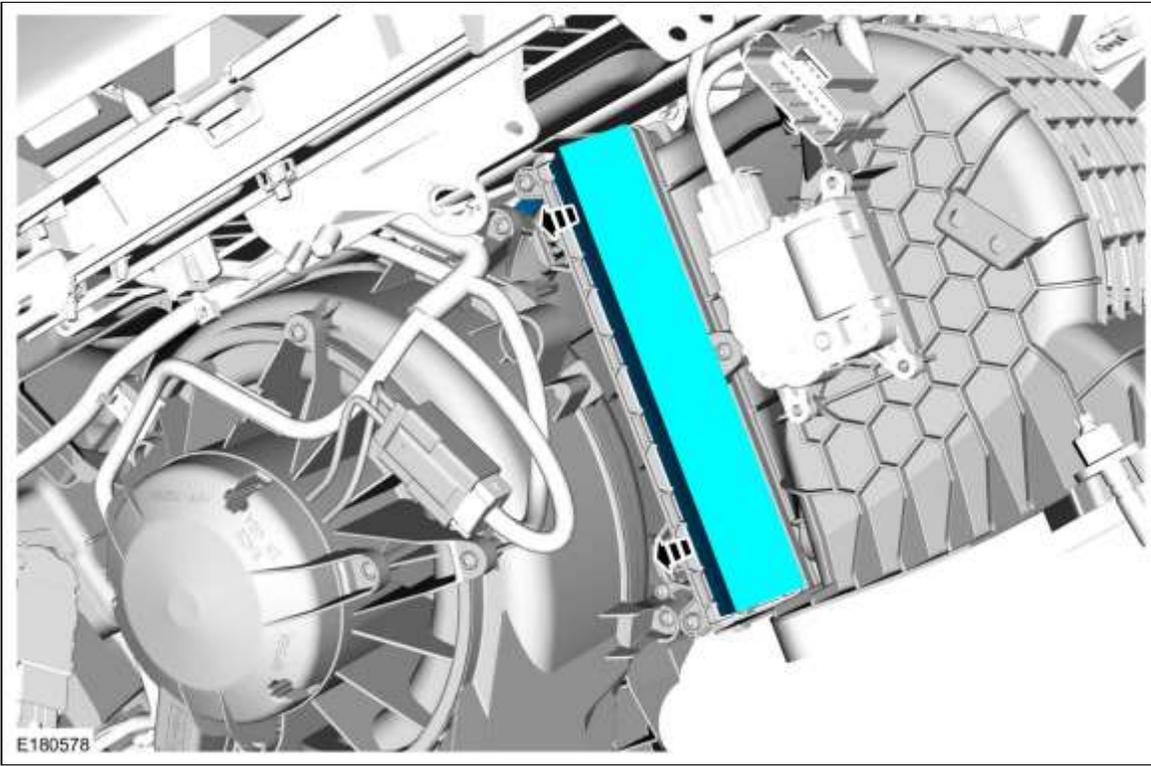

Installation

- 1. To install, reverse the removal procedure.