

## Windshield Wiper Pivot Arm - LHD

### Special Tool(s) / General Equipment


Two Leg Puller

### Removal


**NOTE:** Removal steps in this procedure may contain installation details.

**NOTE:** The hood is removed in this procedure for clarity.


1. Remove the windshield wiper pivot arm nut covers.

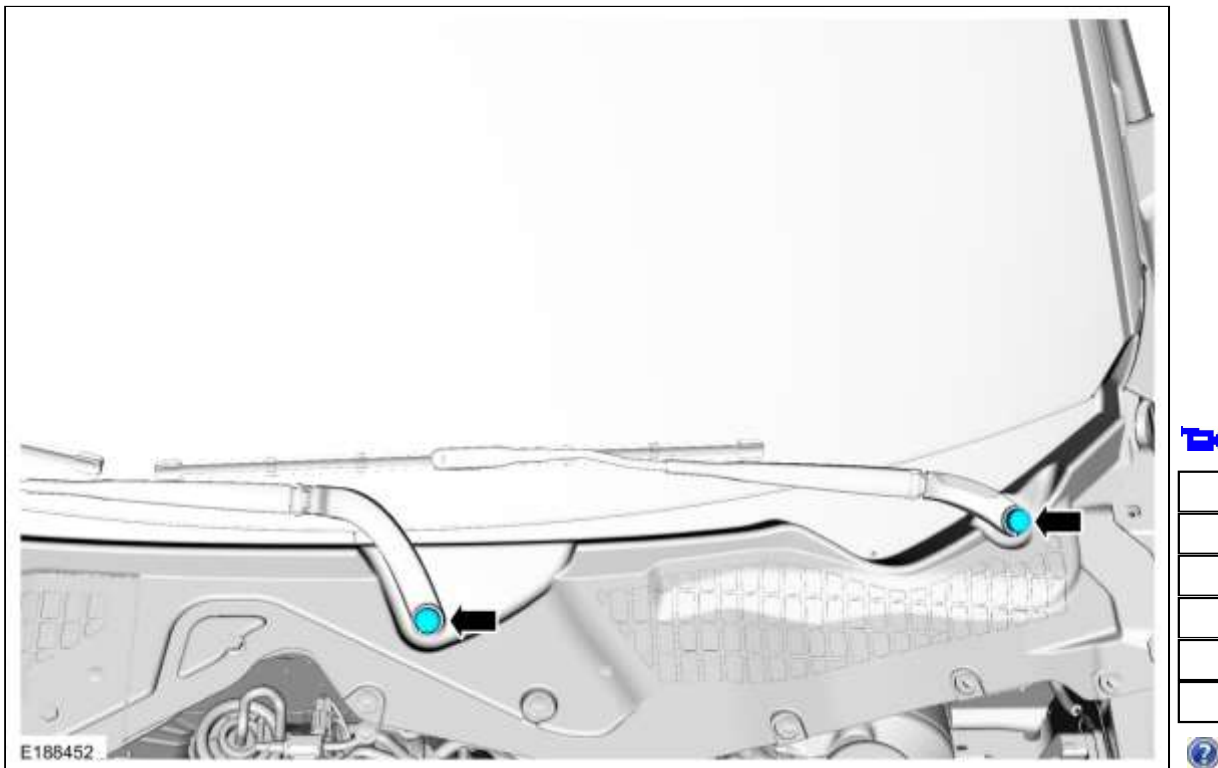

2. Remove the windshield wiper pivot arm nuts.  
*Torque: 26 lb.ft (35 Nm)*

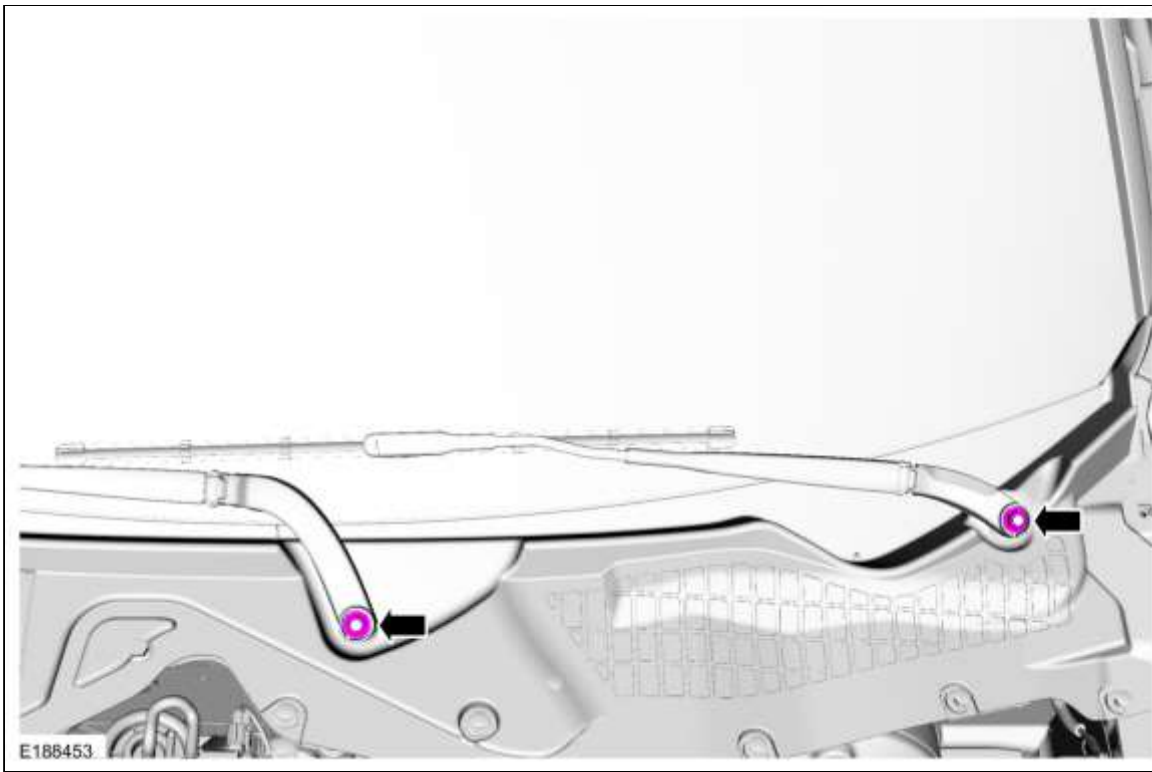


3. Remove the windshield wiper pivot arms.  
Use the General Equipment: Two Leg Puller


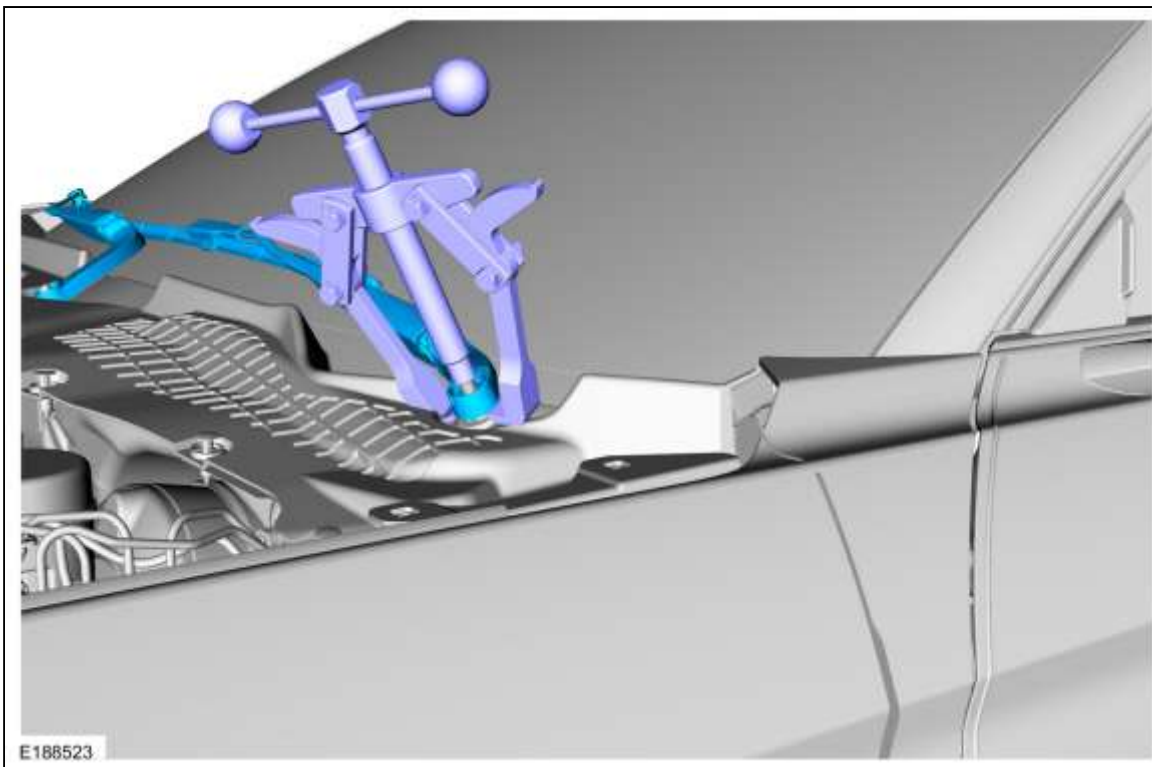


## Installation


1. Verify the windshield wiper motor is in the PARK position.
  1. Set the ignition switch to the ON position.
  2. Set the windshield wiper switch to run the wipers one complete cycle.

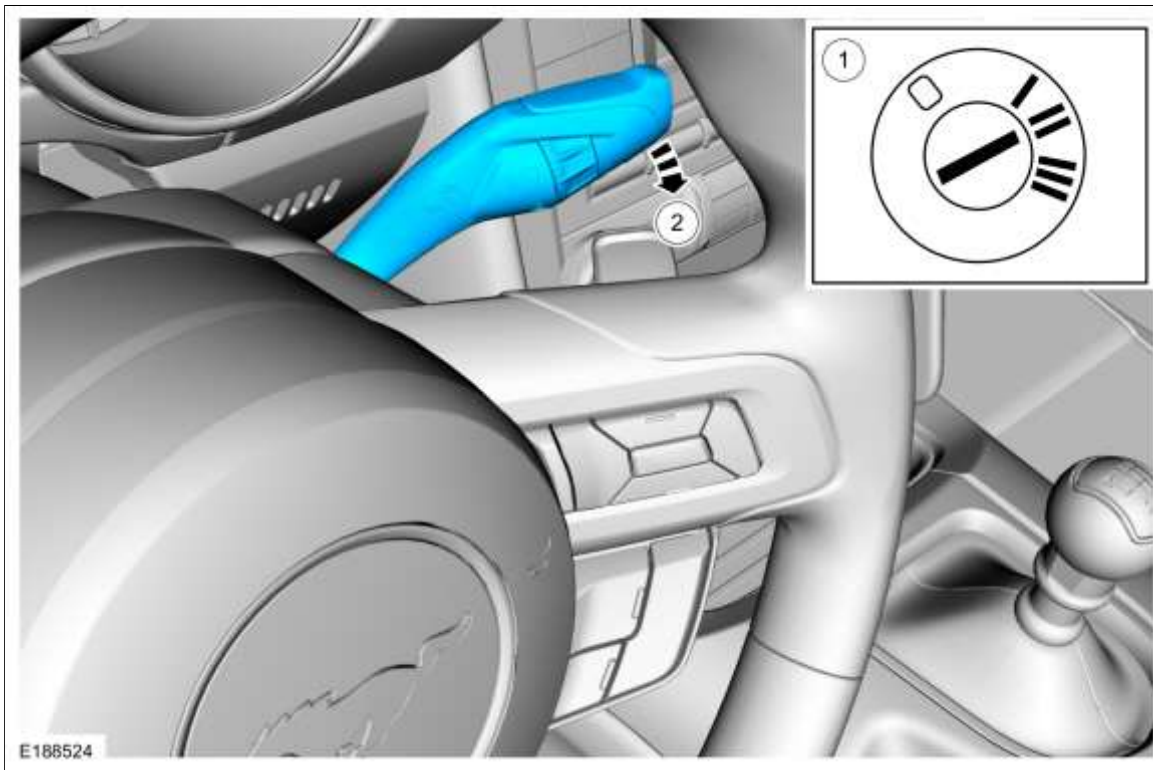

 2. Install the windshield wiper pivot arms.
1. Align the windshield wiper blades inside the marks on the windshield.
  2. Install the windshield wiper pivot arm nuts.  
*Torque: 26 lb.ft (35 Nm)*
  3. Turn the ignition switch off.

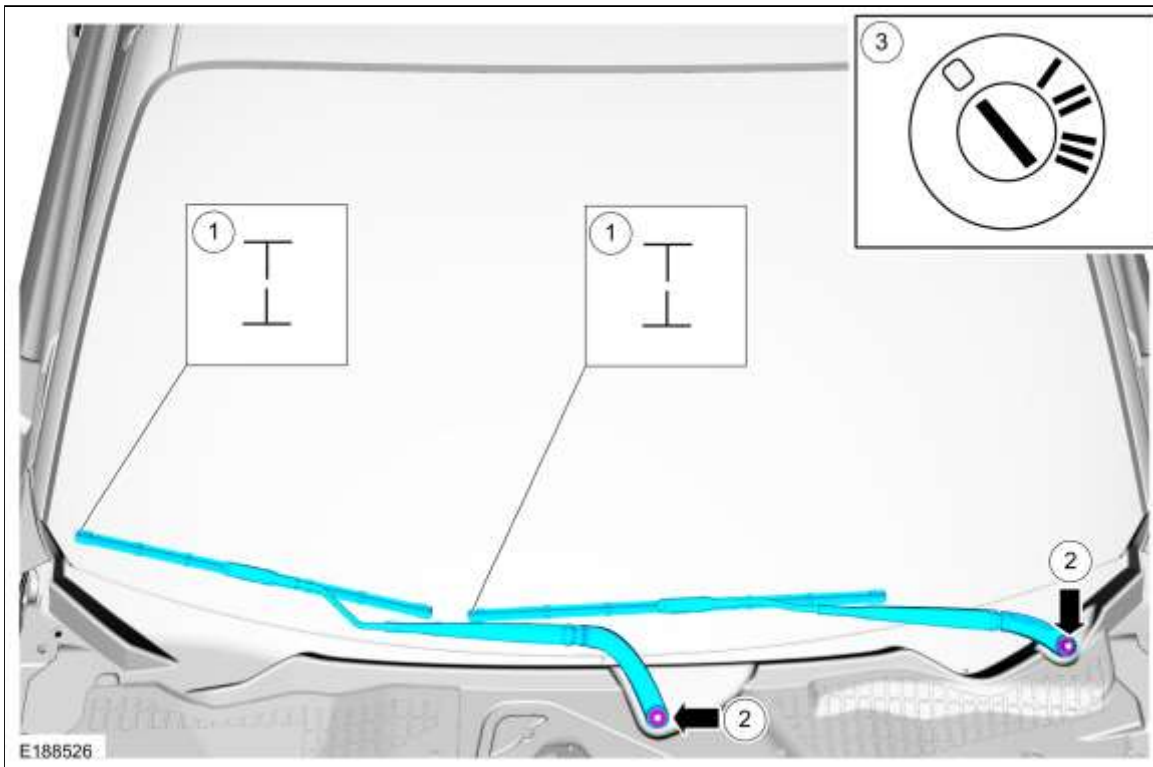

3. Install the windshield wiper pivot arm nut covers.

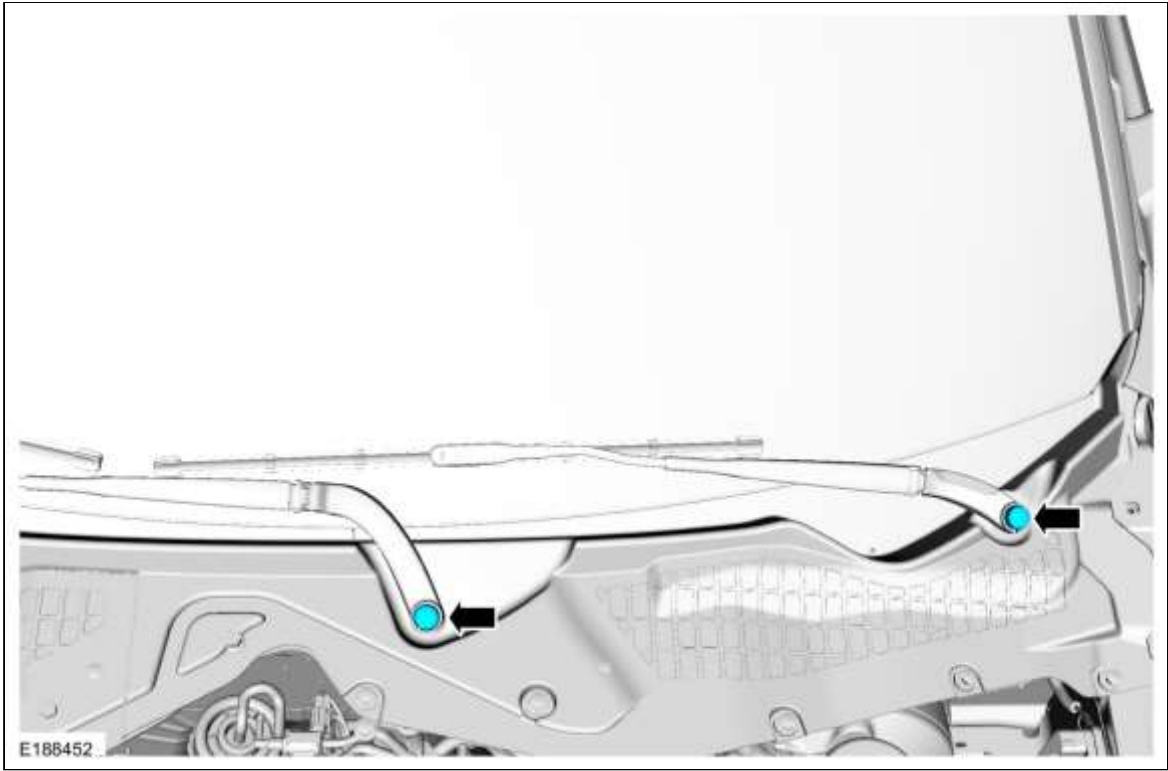

E188452

