


Cowl Panel Grille


Removal

NOTE: LHD shown, RHD similar.


1. Remove the wiper pivot arms.
Refer to: [Windshield Wiper Pivot Arm - LHD](#) (501-16 Wipers and Washers, Removal and Installation).
2. Remove the retainers and the battery cover.

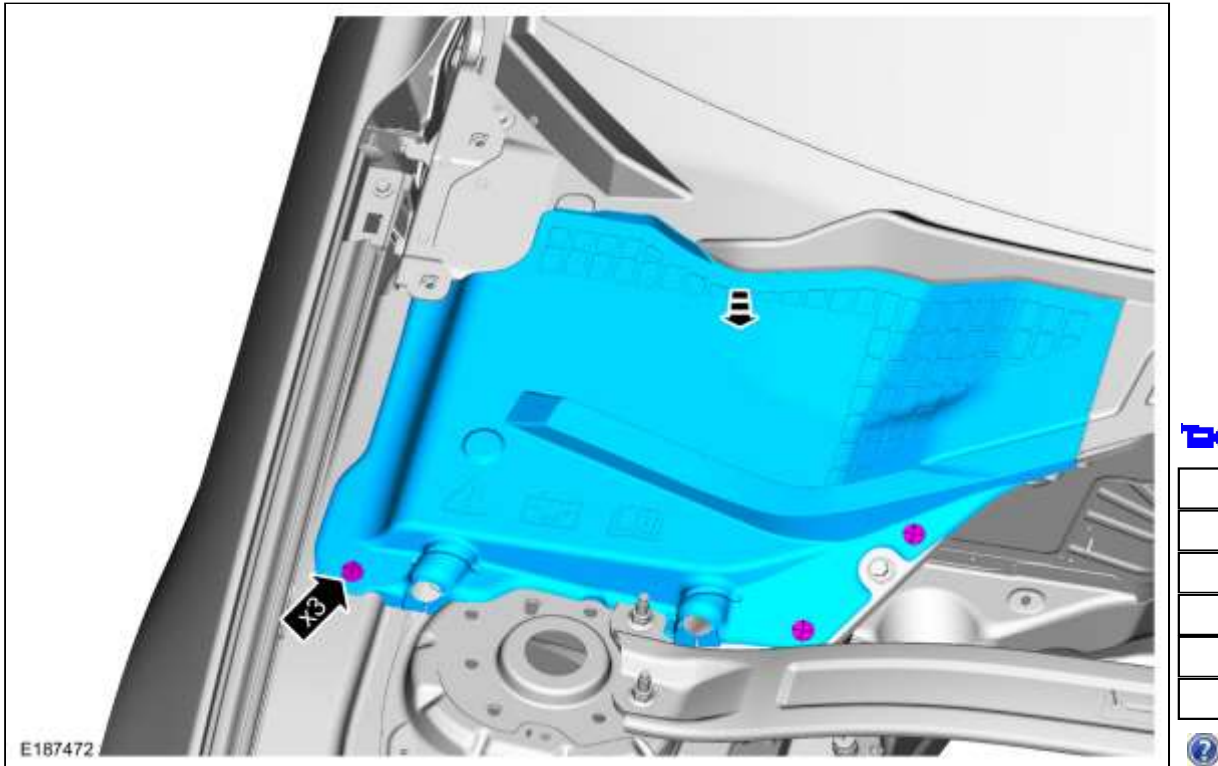

3. Remove the retainers and the clips.
 1. Remove the retainers.
 2. Depress and remove the clips.

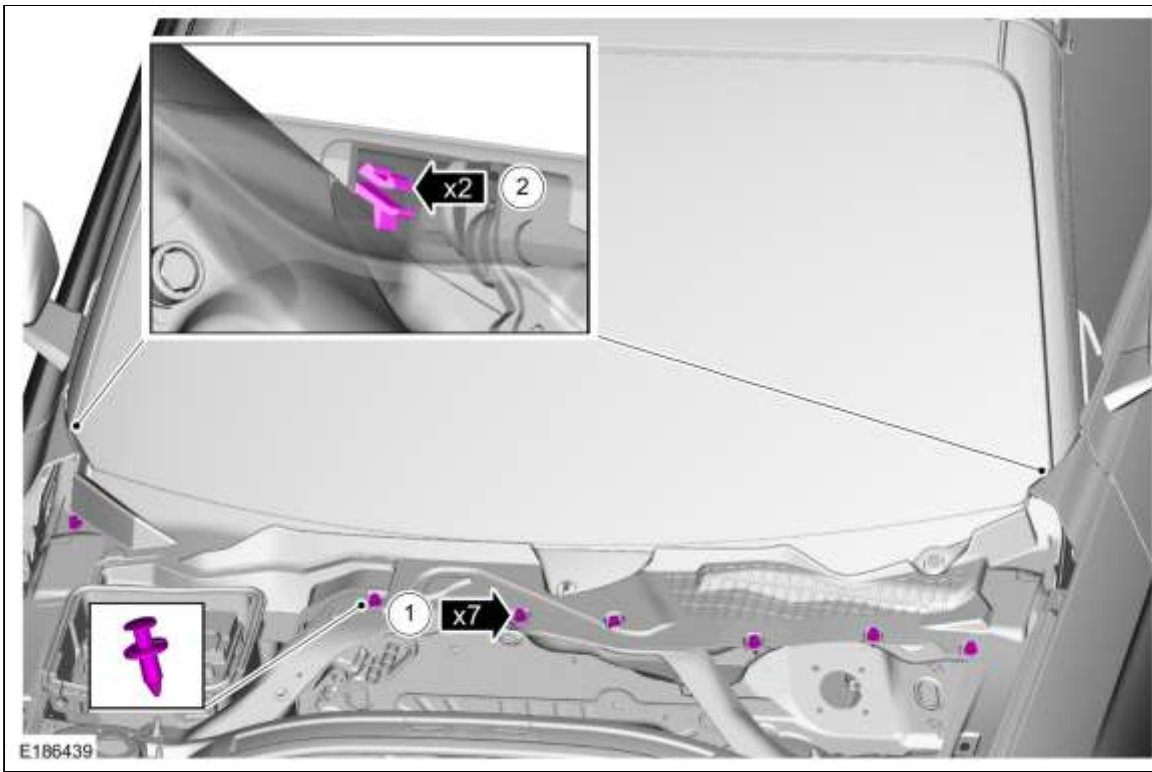

4. 1. Lift the cowl panel grille up.
2. Pull the cowl panel grille out and remove.

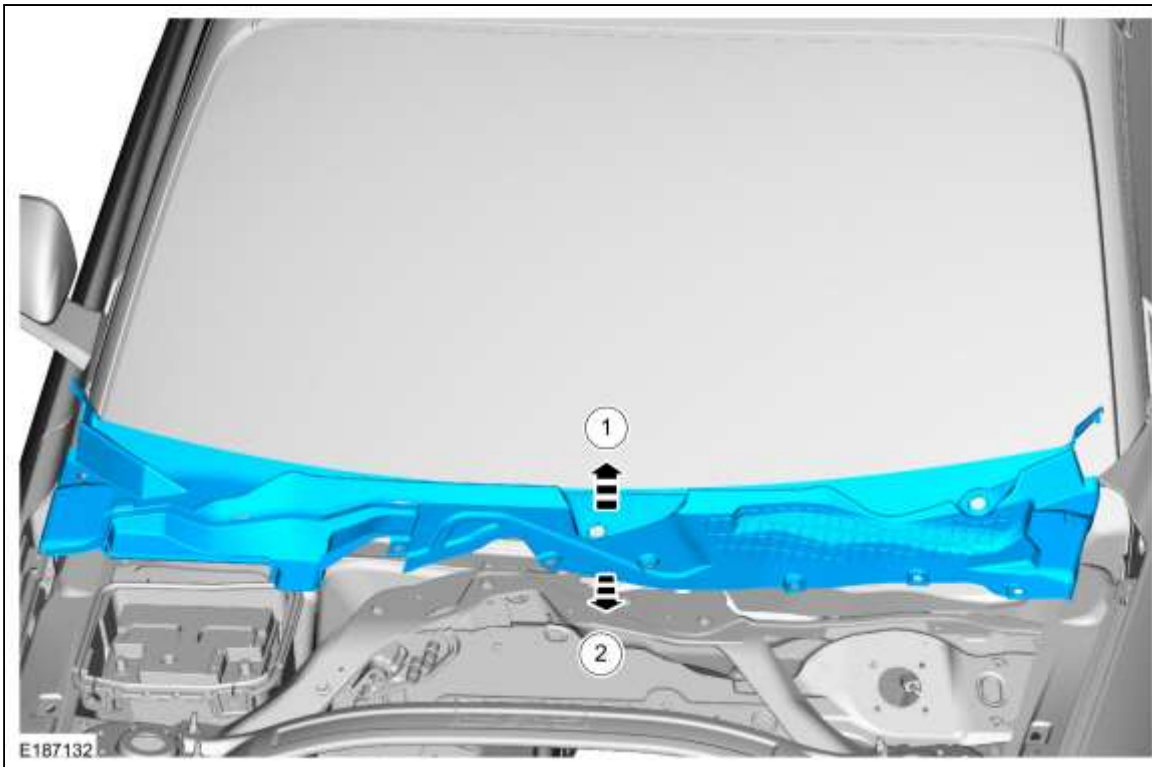

Installation

1. To install, reverse the removal procedure.

