

REMOVAL AND INSTALLATION

Accessory Drive Belt Tensioner — 4.6L (3V)

Removal and Installation

1. Using a suitable belt tensioner release tool, rotate the accessory drive belt tensioner clockwise and remove the accessory drive belt.
2. Remove the bolt and the accessory drive belt tensioner.
 - To install, tighten to 25 Nm (18 lb-ft).
3. **NOTE:** Refer to the illustration for correct drive belt routing.

To install, reverse the removal procedure.

