


Generator — 5.0L

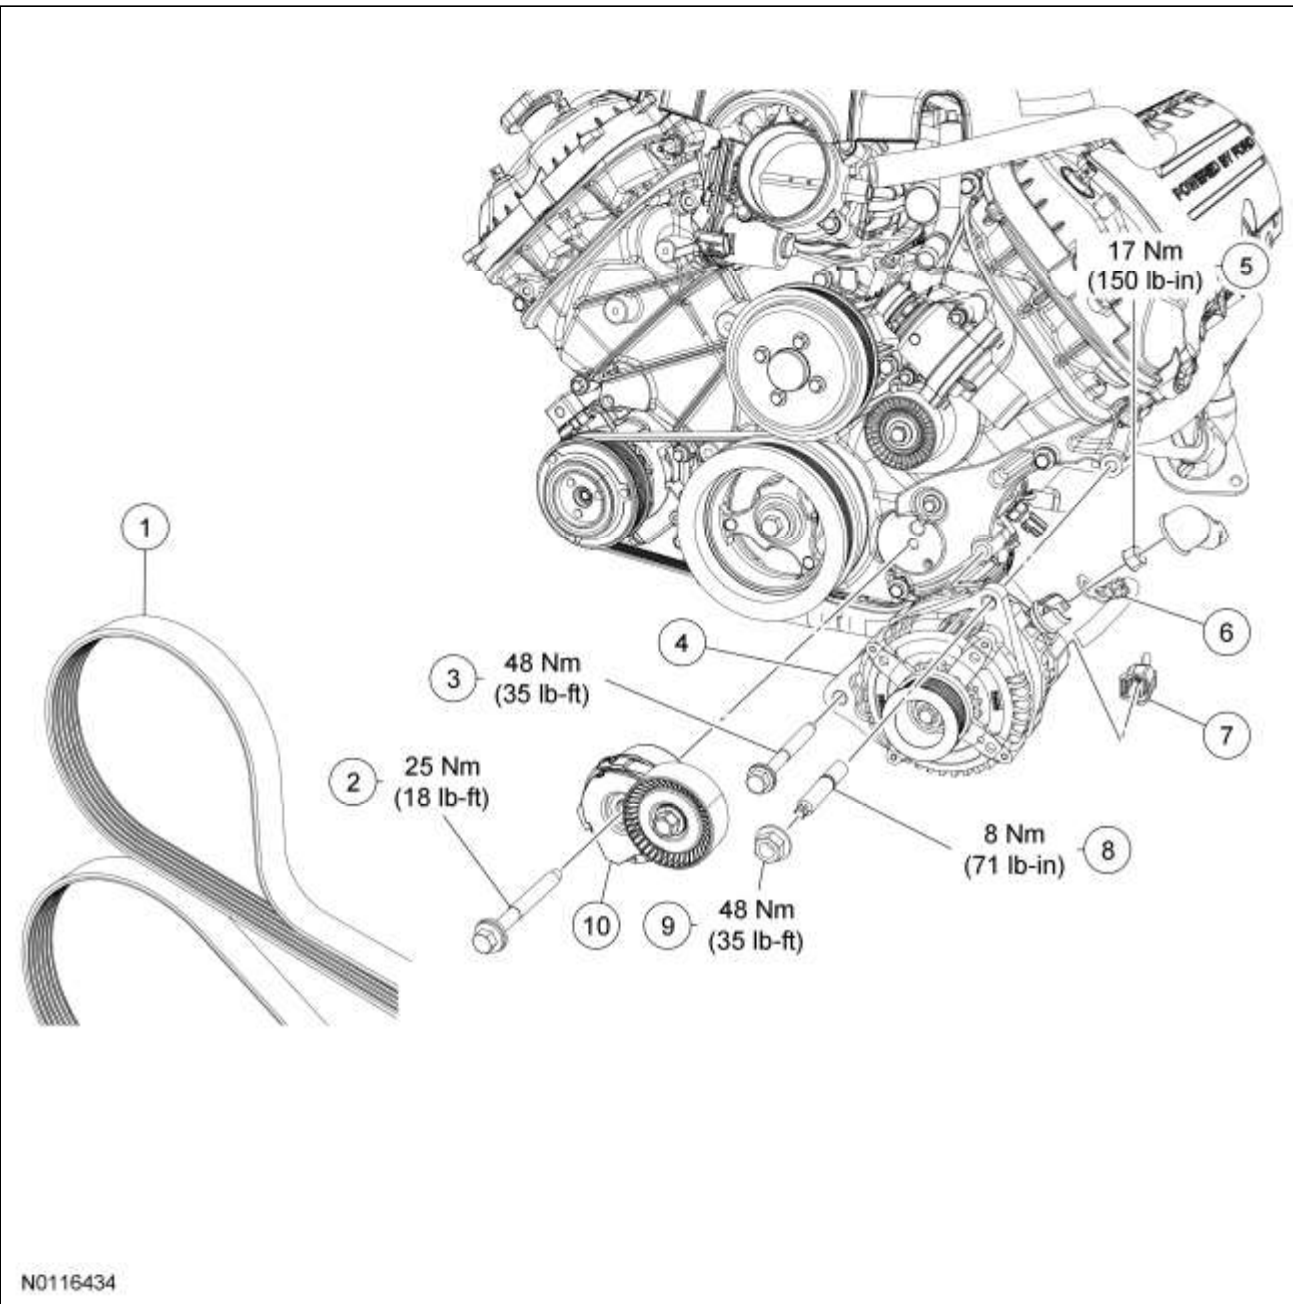

N0116434

| Item | Part Number | Description                                     |
|------|-------------|---|
| 1    | 8620        | Front End Accessory Drive (FEAD) belt           |
| 2    | W707288     | <u>FEAD</u> belt tensioner bolt                 |
| 3    | W715092     | Generator bolt                                  |
| 4    | 10346       | Generator                                       |
| 5    | W711953     | Generator B+ terminal nut                       |
| 6    | —           | Generator B+ terminal (part of 14B060)          |
| 7    | —           | Generator electrical connector (part of 14B060) |
| 8    | W710217     | Generator stud                                  |
| 9    | W520414     | Generator stud nut                              |
| 10   | 6B209       | <u>FEAD</u> belt tensioner                      |

## Removal and Installation

1. Disconnect the battery. For additional information, refer to [Section 414-01](#).
2. Remove the Air Cleaner (ACL) outlet pipe and ACL assembly. For additional information, refer to [Section 303-12](#).
3. Remove the ACL inlet pipe from the radiator support. For additional information, refer to [Section 303-12](#).
4. Remove the Front End Accessory Drive (FEAD) belt tensioner. For additional information, refer to [Section 303-05](#).
5. Position the generator B+ protective boot aside, remove the B+ nut and position the B+ terminal aside.
  - To install, tighten to 17 Nm (150 lb-in).
6. Disconnect the generator electrical connector.
7. Remove the upper generator stud nut.
  - To install, tighten to 48 Nm (35 lb-ft).
8. Remove the upper generator stud.
  - To install, tighten to 8 Nm (71 lb-in).
9. Remove the lower generator bolt and the generator.
  - To install, tighten to 48 Nm (35 lb-ft).
10. To install, reverse the removal procedure.