


150-59 Connector Views

C1100b

14B060

Battery (10655)

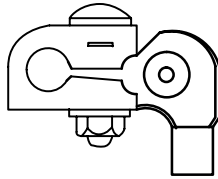


Pin	Circuit	Circuit function
1	2057 (BK)	Battery cable –
	2057 (BK)	Battery cable –

C1183

12B637

Fuel injector 3
(9F593)

(BK)
*(GY)

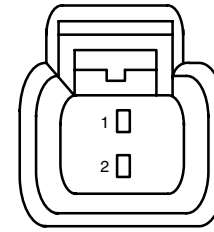

FEMALE

Pin	Circuit	Circuit function
1	557 (BN/YE)	Fuel injector 3, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)


* 4.6L

C1181

12B637

Fuel injector 1
(9F593)

(BK)
*(GY)

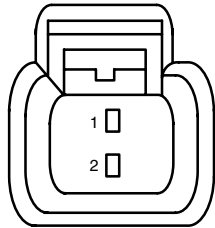

FEMALE

Pin	Circuit	Circuit function
1	555 (TN)	Fuel injector 1, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)


* 4.6L

C1184

12B637

Fuel injector 4
(9F593)

(BK)
*(GY)

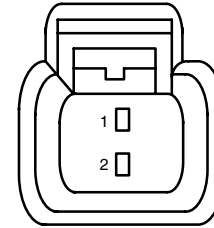

FEMALE

Pin	Circuit	Circuit function
1	558 (BN/LB)	Fuel injector 4, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)


* 4.6L

C1182

12B637

Fuel injector 2
(9F593)

(BK)
*(GY)

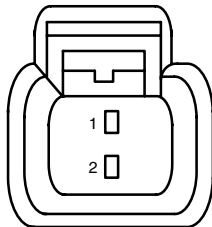

FEMALE

Pin	Circuit	Circuit function
1	556 (WH)	Fuel injector 2, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)


* 4.6L

C1185

12B637

Fuel injector 5
(9F593)

(BK)
*(GY)

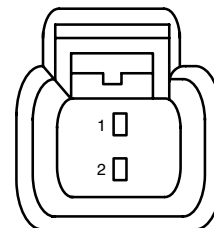

FEMALE

Pin	Circuit	Circuit function
1	559 (TN/BK)	Fuel injector 5, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

* 4.6L