


Thermostat and Thermostat Housing — Exploded View

4.0L (SOHC)

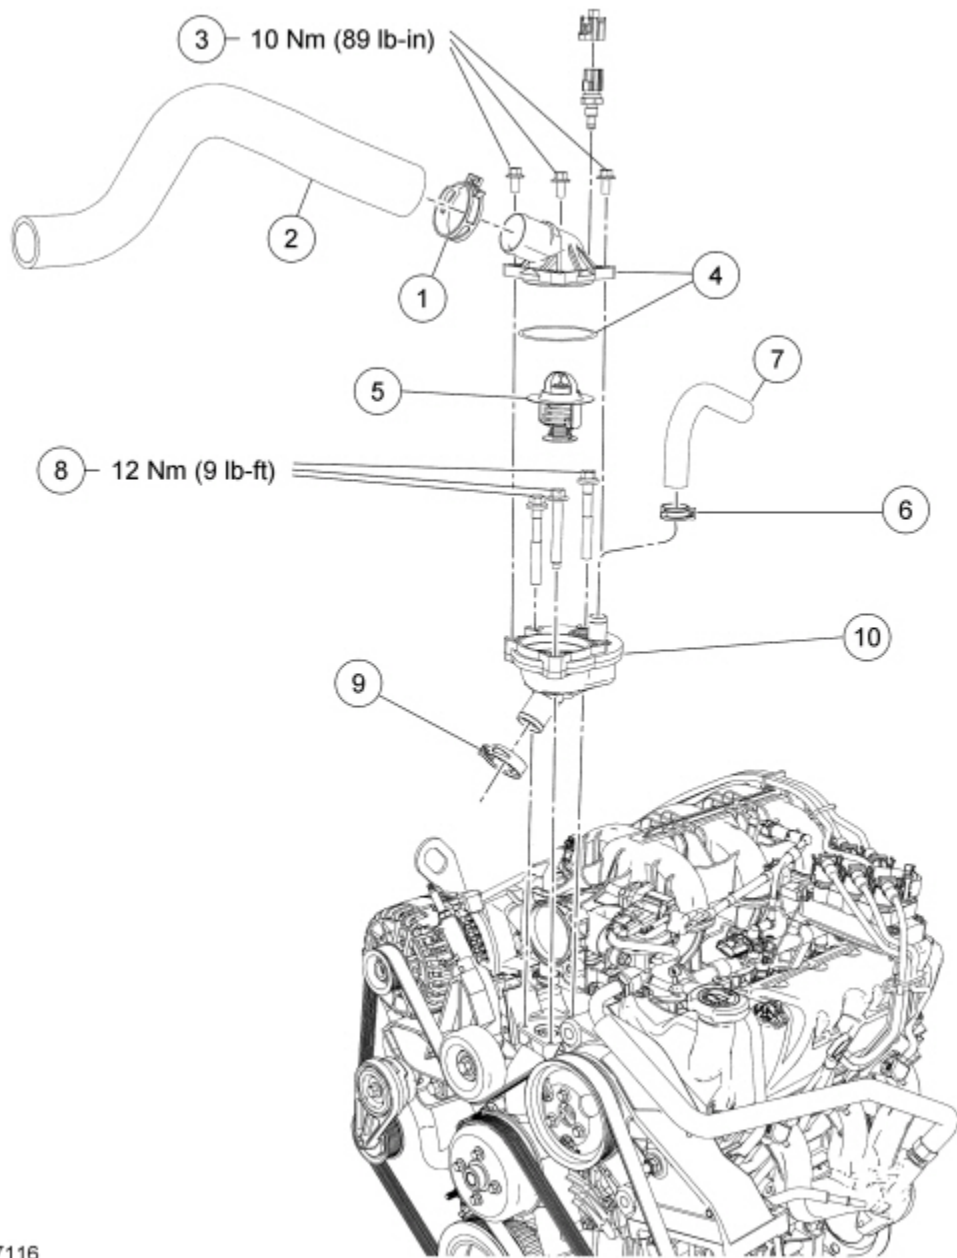


N0037116

Item	Part Number	Description
1	W525966	Radiator hose clamp
2	8260	Upper radiator hose
3	W500015	Upper thermostat housing bolts (3 required)
4	8A586	Thermostat housing cover and gasket

5	8575	Thermostat
6	—	Heater inlet hose clamp (part of 18472)
7	18472	Heater inlet hose
8	W702527	Lower thermostat housing bolts (3 required)
9	W525966	Bypass hose clamp
10	8A586	Thermostat housing

4.6L (3V)

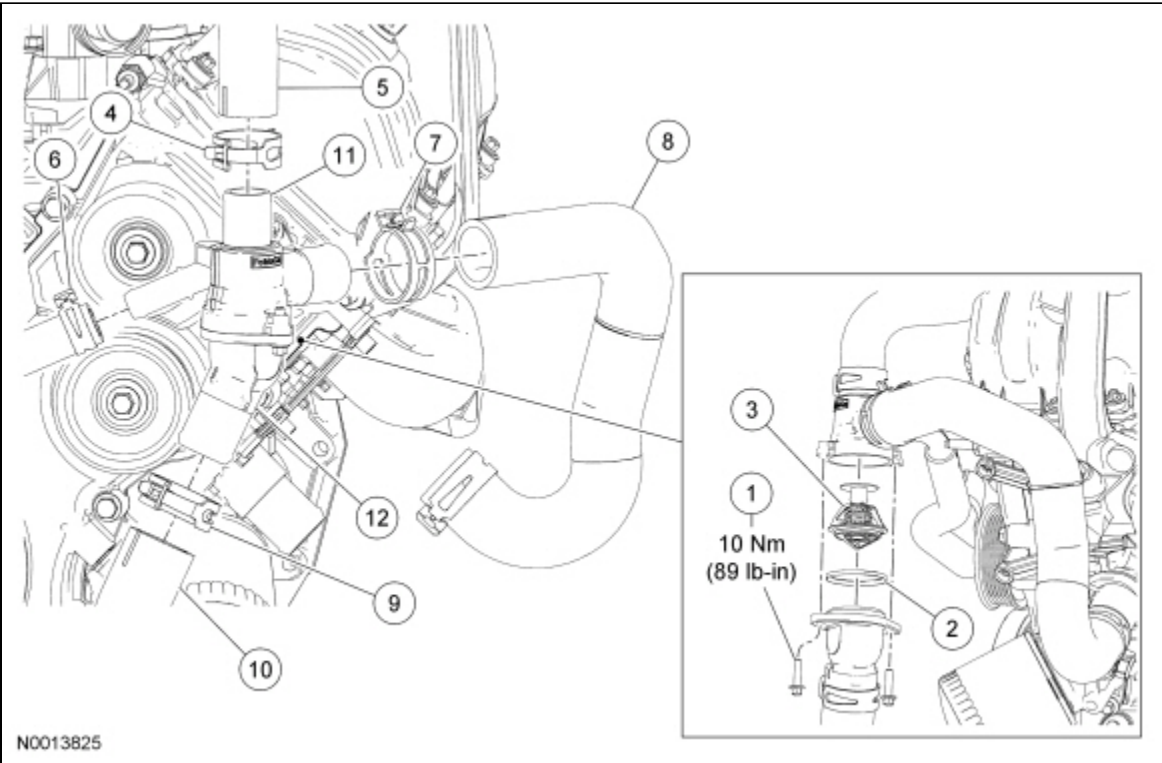

N0013825

Item	Part Number	Description
1	W500015	Thermostat housing bolt (2 required)
2	N806807	Thermostat O-ring seal
3	8575	Thermostat
4	8287	Hose clamp
5	8A594	Thermostat housing-to-coolant crossover assembly hose
6	8C351	Thermostat housing-to-degas bottle hose

7	15161	Hose clamp
8	8A595	Thermostat housing-to-oil filter adapter hose
9	8287	Hose clamp
10	8B273	Thermostat housing-to-radiator hose
11	8A587	Thermostat housing
12	8K528	Coolant inlet housing

1. For additional information, refer to the procedures in this section.