

### Diagnostic Trouble Code (DTC) Chart

**NOTE:** Most powertrain (P-code) DTCs are diagnosed in the Powertrain Control/Emissions Diagnosis (PC/ED) manual. If the P-code retrieved is not listed below, refer to the Powertrain Control/Emissions Diagnosis (PC/ED) manual to continue diagnostics.

**NOTE:** The Smart Junction Box (SJB) is also known as the Generic Electronic Module (GEM) .

DTC	Description	Source	Action
B1031	<u>SDARS</u> Satellite Antenna Open	Satellite Digital Audio Receiver System (SDARS) module	REFER to <a href="#">Section 415-00</a> .
B1032	<u>SDARS</u> Satellite Antenna Short	<u>SDARS</u> module	REFER to <a href="#">Section 415-00</a> .
B106A	<u>TPMS</u> Sensor Pressure Range Bit Incorrect State	Smart Junction Box (SJB)	REFER to <a href="#">Section 204-04</a> .
B106B	Tire Pressure Sensor Low Battery	<u>SJB</u>	REFER to <a href="#">Section 204-04</a> .
B1084	Trunk Lamp Circuit Failure	<u>SJB</u>	REFER to <a href="#">Section 417-02</a> .
B1117	Audio Steering Wheel Button Stuck	Audio Control Module (ACM)	REFER to <a href="#">Section 415-00</a> .
B1119	Audio Disc DVD Player Thermal Shutdown	<u>ACM</u>	REFER to <a href="#">Section 415-00</a> .
B1136	Audio Steering Wheel Switch #2 Circuit Failure	<u>ACM</u>	REFER to <a href="#">Section 415-00</a> .
B1140	Map Disk Invalid	<u>ACM</u>	REFER to <a href="#">Section 415-00</a> .
B1141	Convertible Top Full Down Position Switch Circuit Failure	<u>SJB</u>	REFER to <a href="#">Section 501-11</a> .
B1142	Convertible Top Full Up Position Switch Circuit Failure	<u>SJB</u>	REFER to <a href="#">Section 501-11</a> .
B1201	Fuel Sender Circuit Failure	<u>SJB</u>	REFER to <a href="#">Section 413-01</a> .
B1202	Fuel Sender Circuit Open	<u>IC</u>	REFER to <a href="#">Section 413-01</a> .
B1202	Fuel Sender Circuit Open	<u>SJB</u>	REFER to <a href="#">Section 413-01</a> .
B1204	Fuel Sender Circuit Short To Ground	<u>IC</u>	REFER to <a href="#">Section 413-01</a> .
B1205	EIC Switch-1 Assembly Circuit Failure	<u>IC</u>	REFER to <a href="#">Section 413-01</a> .
B1213	Anti-Theft Number of Programmed Keys is Below Minimum	PCM	REFER to <a href="#">Section 419-01B</a> .
B1217	Horn Relay Coil Circuit Failure	<u>SJB</u>	REFER to <a href="#">Section 413-06</a> .
B1231	Event Threshold Exceeded	Restraints Control Module (RCM)	REFER to <a href="#">Section 501-20B</a> .
B1247	Panel Dim Switch Circuit Open	<u>SJB</u>	REFER to <a href="#">Section 413-00</a> .
B1300	Power Door Lock Circuit Failure	<u>SJB</u>	REFER to <a href="#">Section 501-14</a> .
B1301	Power Door Lock Circuit Open	<u>SJB</u>	REFER to <a href="#">Section 501-14</a> .

<b>DTC</b>	<b>Description</b>	<b>Source</b>	<b>Action</b>
B1309	Power Door Lock Circuit Short To Ground	<a href="#">SJB</a>	REFER to <a href="#">Section 501-14.</a>
B1310	Power Door Unlock Circuit Failure	<a href="#">SJB</a>	REFER to <a href="#">Section 501-14.</a>
B1317	Battery Voltage High	ABS module	REFER to <a href="#">Section 206-09.</a>
B1317	Battery Voltage High	<a href="#">IC</a>	REFER to <a href="#">Section 413-01.</a>
B1317	Battery Voltage High	<a href="#">RCM</a>	REFER to <a href="#">Section 501-20B.</a>
B1318	Battery Voltage Low	ABS module	REFER to <a href="#">Section 206-09.</a>
B1318	Battery Voltage Low	<a href="#">ACM</a>	REFER to <a href="#">Section 414-00.</a>
B1318	Battery Voltage Low	<a href="#">IC</a>	REFER to <a href="#">Section 413-01.</a>
B1318	Battery Voltage Low	<a href="#">RCM</a>	REFER to <a href="#">Section 414-00.</a>
B1318	Battery Voltage Low	<a href="#">SDARS</a> module	REFER to <a href="#">Section 415-00.</a>
B1319	Driver Door Ajar Circuit Failure	<a href="#">SJB</a>	REFER to <a href="#">Section 417-02.</a>
B1327	Passenger Door Ajar Circuit Failure	<a href="#">SJB</a>	REFER to <a href="#">Section 417-02.</a>
B1341	Power Door Unlock Circuit Short To Ground	<a href="#">SJB</a>	REFER to <a href="#">Section 501-14.</a>
B1342	<a href="#">ECU</a> is Faulted	ABS module	REFER to <a href="#">Section 206-09.</a>
B1342	<a href="#">ECU</a> is Faulted	<a href="#">ACM</a>	REFER to <a href="#">Section 415-00.</a>
B1342	<a href="#">ECU</a> is Faulted	<a href="#">IC</a>	REFER to <a href="#">Section 413-01.</a>
B1342	<a href="#">ECU</a> is Faulted	PCM	REFER to <a href="#">Section 303-14.</a>
B1342	<a href="#">ECU</a> is Faulted	<a href="#">RCM</a>	REFER to <a href="#">Section 501-20B.</a>
B1342	<a href="#">ECU</a> is Faulted	<a href="#">SDARS</a> module	REFER to <a href="#">Section 415-00.</a>
B1342	<a href="#">ECU</a> is Faulted	<a href="#">SJB</a>	REFER to <a href="#">Smart Junction Box (SJB)</a> in this section.
B1345	Heated Backlite Input Circuit Short To Ground	<a href="#">SJB</a>	REFER to <a href="#">Section 501-11.</a>
B1348	Heated Backlite Relay Circuit Open	<a href="#">SJB</a>	REFER to <a href="#">Section 501-11.</a>
B1349	Heated Backlite Relay Short To Battery	<a href="#">SJB</a>	REFER to <a href="#">Section 501-11.</a>
B1353	Ignition Key-In Circuit Open	<a href="#">IC</a>	REFER to <a href="#">Section 413-01.</a>
B1356	Ignition Run Circuit Open	<a href="#">SJB</a>	REFER to <a href="#">Section 211-05.</a>
B1360	Ignition Run/Acc Circuit Open	<a href="#">SJB</a>	REFER to <a href="#">Section 211-05.</a>
B1365	Ignition Start Circuit Short To Battery		REFER to <a href="#">Section 211-05.</a>
B1402	Driver Power Window Down Switch Circuit Failure	<a href="#">SJB</a>	REFER to <a href="#">Section 501-18.</a>
B1470	Lamp Headlamp Input Circuit Failure	<a href="#">SJB</a>	REFER to <a href="#">Section 417-01.</a>
B1475	Accessory Delay Relay Short To Battery	<a href="#">SJB</a>	REFER to <a href="#">Section 501-11.</a>
B1485	Brake Pedal Input Short To Battery	<a href="#">SJB</a>	REFER to <a href="#">Section 417-01.</a>
B1499	Lamp Turn Signal Left Circuit Failure	<a href="#">SJB</a>	REFER to <a href="#">Section 417-01.</a>

<b>DTC</b>	<b>Description</b>	<b>Source</b>	<b>Action</b>
B1502	Lamp Turn Signal Left Circuit Short To Ground	<u>SJB</u>	REFER to <a href="#">Section 417-01.</a>
B1503	Lamp Turn Signal Right Circuit Failure	<u>SJB</u>	REFER to <a href="#">Section 417-01.</a>
B1506	Lamp Turn Signal Right Circuit Short To Ground	<u>SJB</u>	REFER to <a href="#">Section 417-01.</a>
B1519	Hood Switch Circuit Failure	<u>SJB</u>	REFER to <a href="#">Section 419-01A.</a>
B1551	Latch/Deck Lid Release Circuit Failure	<u>SJB</u>	REFER to <a href="#">Section 501-14.</a>
B1556	Ignition Run/Start Circuit Open	<u>IC</u>	REFER to <a href="#">Section 413-01.</a>
B1557	Ignition Run/Start Circuit Short To Battery	<u>IC</u>	REFER to <a href="#">Section 413-01.</a>
B1600	<u>PATS</u> Ignition Key Transponder Signal Is Not Received	PCM	REFER to <a href="#">Section 419-01B.</a>
B1601	<u>PATS</u> Received Incorrect Key-Code From Ignition Key Transponder	PCM	REFER to <a href="#">Section 419-01B.</a>
B1602	<u>PATS</u> Received Invalid Format Of Key-Code From Ignition Key Transponder	PCM	REFER to <a href="#">Section 419-01B.</a>
B1676	Battery Pack Voltage Out Of Range	<u>SJB</u>	REFER to <a href="#">Section 414-00.</a>
B1681	<u>PATS</u> Transceiver Module Signal Is Not Received	PCM	REFER to <a href="#">Section 419-01B.</a>
B1833	Door Unlock Disarm Switch Circuit Short To Ground	<u>SJB</u>	REFER to <a href="#">Section 419-01A.</a>
B1869	Lamp Air Bag Warning Indicator Circuit Open	<u>RCM</u>	REFER to <a href="#">Section 501-20B.</a>
B1870	Lamp Air Bag Warning Indicator Circuit Short To Battery	<u>RCM</u>	REFER to <a href="#">Section 501-20B.</a>
B1884	<u>PAD</u> Warning Lamp Circuit Failure	<u>RCM</u>	REFER to <a href="#">Section 501-20B.</a>
B1890	<u>PAD</u> Warning Lamp Circuit Short To Battery	<u>RCM</u>	REFER to <a href="#">Section 501-20B.</a>
B1891	Air Bag Tone Warning Indicator Circuit Short To Battery	<u>RCM</u>	REFER to <a href="#">Section 501-20B.</a>
B1892	Air Bag Tone Warning Indicator Circuit Failure	<u>RCM</u>	REFER to <a href="#">Section 501-20B.</a>
B1897	Horn Switch Circuit Failure	<u>SJB</u>	REFER to <a href="#">Section 413-06.</a>
B1921	Air Bag Diagnostic Monitor Ground Circuit Open	<u>RCM</u>	REFER to <a href="#">Section 501-20B.</a>
B1982	Driver's Door Unlock Relay Circuit Failure	<u>SJB</u>	REFER to <a href="#">Section 501-14.</a>
B200A	<u>VSM</u> Inclination Failure	<u>SJB</u>	REFER to <a href="#">Section 419-01A.</a>
B200B	<u>VSM</u> Ultrasonic Failure	<u>SJB</u>	REFER to <a href="#">Section 419-01A.</a>
B200C	<u>VSM</u> Module Failure	<u>SJB</u>	REFER to <a href="#">Section 419-01A.</a>
B2021	Dome Lamp Output Return Circuit Failure	<u>SJB</u>	REFER to <a href="#">Section 417-02.</a>
B2027	LED Backlighting Output Circuit Failure	<u>SJB</u>	REFER to <a href="#">Section 413-00.</a>
B2030	Front Fog Lamp Relay Ckt Failure	<u>SJB</u>	REFER to <a href="#">Section 417-01.</a>
B2035	LF Side Repeater Lamp Output Ckt Failure	<u>SJB</u>	REFER to <a href="#">Section 417-01.</a>
B2044	Left Rear Stop Lamp Circuit Short To Ground	<u>SJB</u>	REFER to <a href="#">Section 417-01.</a>
B2046	Right Rear Stop Lamp Circuit Short To Ground	<u>SJB</u>	REFER to <a href="#">Section 417-01.</a>

<b>DTC</b>	<b>Description</b>	<b>Source</b>	<b>Action</b>
B2048	Left Rear Turn Lamp Circuit Short To Ground	<u>SJB</u>	REFER to <a href="#">Section 417-01.</a>
B2049	Left Rear Turn Lamp Circuit Open	<u>SJB</u>	REFER to <a href="#">Section 417-01.</a>
B2050	Right Rear Turn Lamp Circuit Short To Ground	<u>SJB</u>	REFER to <a href="#">Section 417-01.</a>
B2051	Right Rear Turn Lamp Circuit Open	<u>SJB</u>	REFER to <a href="#">Section 417-01.</a>
B2052	Accessory Delay Relay Output Failure	<u>SJB</u>	REFER to <a href="#">Section 501-11.</a>
B2060	Heated Backlite Indicator Circuit Failure	<u>SJB</u>	REFER to <a href="#">Section 501-11.</a>
B2061	Heated Backlite Indicator Circuit Shorted To Ground	<u>SJB</u>	REFER to <a href="#">Section 501-11.</a>
B2068	Convertible Top Up Output Circuit Failure	<u>SJB</u>	REFER to <a href="#">Section 501-18.</a>
B2069	Convertible Top Down Output Circuit Failure	<u>SJB</u>	REFER to <a href="#">Section 501-18.</a>
B2071	Hazard Switch Signal Short To Ground	<u>SJB</u>	REFER to <a href="#">Section 417-01.</a>
B2103	Antenna Not Connected	<u>ACM</u>	REFER to <a href="#">Section 415-00.</a>
B2103	Antenna Not Connected	PCM	REFER to <a href="#">Section 419-01B.</a>
B2132	Dimmer Switch Circuit Short To Gnd	<u>SJB</u>	REFER to <a href="#">Section 413-00.</a>
B2143	<u>NVM</u> Memory Failure	<u>IC</u>	REFER to <a href="#">Section 413-01.</a>
B2175	A/C Request Signal Circuit Short To Ground	<u>SJB</u>	REFER to <a href="#">Section 412-00.</a>
B2204	<u>GPS</u> Antenna Connection Open or Short	<u>ACM</u>	REFER to <a href="#">Section 415-00.</a>
B2254	Front Fog Lamp Switch Failure	<u>SJB</u>	REFER to <a href="#">Section 417-01.</a>
B2274	Phone Transceiver Active Circuit Failure	<u>ACM</u>	REFER to <a href="#">Section 415-00.</a>
B2276	Less Than 2 Transmitters Programmed	<u>SJB</u>	REFER to <a href="#">Section 501-14.</a>
B2281	Right Turn Switch Short To Ground	<u>SJB</u>	REFER to <a href="#">Section 417-01.</a>
B2282	Left Turn Switch Short To Ground	<u>SJB</u>	REFER to <a href="#">Section 417-01.</a>
B2290	Occupant Classification System Fault	<u>RCM</u>	REFER to <a href="#">Section 501-20B.</a>
B2291	Occupant Position System Fault	<u>RCM</u>	REFER to <a href="#">Section 501-20B.</a>
B2292	Restraint System - Seatbelt Pretensioner Fault	<u>RCM</u>	REFER to <a href="#">Section 501-20B.</a>
B2293	Restraint System - Airbag Fault	<u>RCM</u>	REFER to <a href="#">Section 501-20B.</a>
B2295	Restraint System - Side Airbag Fault	<u>RCM</u>	REFER to <a href="#">Section 501-20B.</a>
B2296	Restraint System - Impact Sensor Fault	<u>RCM</u>	REFER to <a href="#">Section 501-20B.</a>
B2360	Window Motor Control Output Circuit Failure	<u>SJB</u>	REFER to <a href="#">Section 501-11.</a>
B236A	Chime Output Circuit Open	<u>IC</u>	REFER to <a href="#">Section 413-01.</a>
B2384	Audio Reverse Aid Mute Input Ckt. Failure	<u>ACM</u>	REFER to <a href="#">Section 415-00.</a>
B2404	Audio Steering Wheel Switch Circuit Fault	<u>ACM</u>	REFER to <a href="#">Section 415-00.</a>
B2405	Audio Disc CD Player Thermal Shutdown Fault	<u>ACM</u>	REFER to <a href="#">Section 415-00.</a>

<b>DTC</b>	<b>Description</b>	<b>Source</b>	<b>Action</b>
B2406	Audio Disc CD Player Internal Fault	<u>ACM</u>	REFER to <a href="#">Section 415-00.</a>
B2425	Remote Keyless Entry Out of Synchronization	<u>SJB</u>	REFER to <a href="#">Section 501-14.</a>
B2431	Transponder Programming Failed	PCM	REFER to <a href="#">Section 419-01B.</a>
B2434	Drivers Seat Belt Buckle Switch Circuit Short To Ground	<u>RCM</u>	REFER to <a href="#">Section 501-20B.</a>
B2435	Drivers Seat Belt Buckle Switch Resistance Out of Range	<u>RCM</u>	REFER to <a href="#">Section 501-20B.</a>
B2438	Passengers Seat Belt Buckle Switch Circuit Short To Ground	<u>RCM</u>	REFER to <a href="#">Section 501-20B.</a>
B2439	Passengers Seat Belt Buckle Switch Resistance Out of Range	<u>RCM</u>	REFER to <a href="#">Section 501-20B.</a>
B2474	Passenger Door Lock Switch Ckt Short To Ground	<u>SJB</u>	REFER to <a href="#">Section 501-14.</a>
B2475	Passenger Door Unlock Switch Circuit Short To Ground	<u>SJB</u>	REFER to <a href="#">Section 501-14.</a>
B2477	Module Configuration Failure	<u>ACM</u>	REFER to <a href="#">Section 418-01.</a>
B2477	Module Configuration Failure	<u>IC</u>	REFER to <a href="#">Section 418-01.</a>
B2477	Module Configuration Failure	<u>RCM</u>	REFER to <a href="#">Section 418-01.</a>
B2477	Module Configuration Failure	<u>SDARS</u> module	REFER to <a href="#">Section 418-01.</a>
B2477	Module Configuration Failure	<u>SJB</u>	REFER to <a href="#">Section 418-01.</a>
B2479	Park Brake Switch Circuit Short To Ground	<u>SJB</u>	REFER to <a href="#">Section 413-01.</a>
B2481	Convertible Top Up/Down Switch Fault	<u>SJB</u>	REFER to <a href="#">Section 501-18.</a>
B2491	RF Park Lamp Output Circuit Short To Battery	<u>SJB</u>	REFER to <a href="#">Section 417-01.</a>
B2493	LF Park Lamp Output Circuit Short To Battery	<u>SJB</u>	REFER to <a href="#">Section 417-01.</a>
B2501	LF Lamp Low Beam Circuit Failure	<u>SJB</u>	REFER to <a href="#">Section 417-01.</a>
B2503	RF Lamp Low Beam Circuit Failure	<u>SJB</u>	REFER to <a href="#">Section 417-01.</a>
B2519	High Mount Stop Lamp Circuit Failure	<u>SJB</u>	REFER to <a href="#">Section 417-01.</a>
B2523	License Lamp Circuit Failure	<u>SJB</u>	REFER to <a href="#">Section 417-01.</a>
B2525	Left Rear Backup Lamp Circuit Failure	<u>SJB</u>	REFER to <a href="#">Section 417-01.</a>
B2527	Left Rear Stop Lamp Circuit Failure	<u>SJB</u>	REFER to <a href="#">Section 417-01.</a>
B2528	Left Rear Stop Lamp Circuit Short To Battery	<u>SJB</u>	REFER to <a href="#">Section 417-01.</a>
B2529	Left Rear Turn Lamp Circuit Failure	<u>SJB</u>	REFER to <a href="#">Section 417-01.</a>
B2532	Right Rear Backup Lamp Circuit Short To Battery	<u>SJB</u>	REFER to <a href="#">Section 417-01.</a>
B2533	Right Rear Stop Lamp Circuit Failure	<u>SJB</u>	REFER to <a href="#">Section 417-01.</a>
B2534	Right Rear Stop Lamp Circuit Short To Battery	<u>SJB</u>	REFER to <a href="#">Section 417-01.</a>
B2550	Dome Lamp Output Circuit Short To Ground	<u>SJB</u>	REFER to <a href="#">Section 417-02.</a>
B2554	Dome Lamp Output Circuit Failure	<u>SJB</u>	REFER to <a href="#">Section 417-02.</a>

<b>DTC</b>	<b>Description</b>	<b>Source</b>	<b>Action</b>
B2567	Reverse Mirror Output Circuit Failure	<u>SJB</u>	REFER to <a href="#">Section 501-09</a> .
B2568	Reverse Mirror Output Circuit Short To Ground	<u>SJB</u>	REFER to <a href="#">Section 501-09</a> .
B2569	Liftgate Disarm Switch Circuit Short To Ground	<u>SJB</u>	REFER to <a href="#">Section 419-01A</a> .
B2572	Brake Shift Interlock Output Circuit Failure	<u>SJB</u>	REFER to <a href="#">Section 307-05</a> .
B2578	Passenger Power Window Down Switch Circuit Failure	<u>SJB</u>	REFER to <a href="#">Section 501-18</a> .
B2586	Headlamp Mode Select Circuit Failure	<u>SJB</u>	REFER to <a href="#">Section 417-01</a> .
B2598	Headlamp Relay Circuit Failure	<u>SJB</u>	REFER to <a href="#">Section 417-01</a> .
B2627	Fuel Sender Circuit Open #2	<u>IC</u>	REFER to <a href="#">Section 413-01</a> .
B2627	Fuel Sender Circuit Open #2	<u>SJB</u>	REFER to <a href="#">Section 413-01</a> .
B2628	Fuel Sender Circuit Short To Ground #2	<u>IC</u>	REFER to <a href="#">Section 413-01</a> .
B2628	Fuel Sender Circuit Short To Ground #2	<u>SJB</u>	REFER to <a href="#">Section 413-01</a> .
B2633	Driver-Front Microphone Circuit Failure	<u>ACM</u>	REFER to <a href="#">Section 415-00</a> .
B2656	DVD (Digital Versatile Disk) Error	<u>ACM</u>	REFER to <a href="#">Section 415-00</a> .
B2691	Seat Belt Buckle Switch Circuit Fault, Front Driver's Side	<u>RCM</u>	REFER to <a href="#">Section 501-20B</a> .
B2692	Front Passenger's Seat Belt Buckle Switch Circuit Fault	<u>RCM</u>	REFER to <a href="#">Section 501-20B</a> .
B2868	Left Front Tire Pressure Sensor Fault	<u>SJB</u>	REFER to <a href="#">Section 204-04</a> .
B2869	Right Front Tire Pressure Sensor Fault	<u>SJB</u>	REFER to <a href="#">Section 204-04</a> .
B2870	Right Rear Tire Pressure Sensor Fault	<u>SJB</u>	REFER to <a href="#">Section 204-04</a> .
B2871	Left Rear Tire Pressure Sensor Fault	<u>SJB</u>	REFER to <a href="#">Section 204-04</a> .
B2872	Tire Pressure Sensor Fault	<u>SJB</u>	REFER to <a href="#">Section 204-04</a> .
B2879	Fuel Tank Jet Pump Fault	<u>IC</u>	REFER to <a href="#">Section 413-01</a> .
B287A	Tire Pressure System Fault	<u>SJB</u>	REFER to <a href="#">Section 204-04</a> .
B2885	Spare Tire Pressure Sensor Fault	<u>SJB</u>	REFER to <a href="#">Section 204-04</a> .
B2903	Chime Output Circuit Short To Battery	<u>IC</u>	REFER to <a href="#">Section 413-01</a> .
B2909	Belt Tension Sensor Fault	<u>RCM</u>	REFER to <a href="#">Section 501-20B</a> .
B2924	Audio Button Stuck	<u>ACM</u>	REFER to <a href="#">Section 415-00</a> .
B2940	Chime Output Circuit Short To Ground	<u>IC</u>	REFER to <a href="#">Section 413-01</a> .
B2965	Audio System Speaker Circuit Fault	<u>ACM</u>	REFER to <a href="#">Section 415-00</a> .
C1093	Traction Control Disable Switch Circuit Failure	<u>IC</u>	REFER to <a href="#">Section 206-09</a> .
C1095	ABS Hydraulic Pump Motor Circuit Failure	ABS module	REFER to <a href="#">Section 206-09</a> .
C1096	ABS Hydraulic Pump Motor Circuit Open	ABS module	REFER to <a href="#">Section 206-09</a> .
C1115	ABS Power Relay Output Short Circuit To Battery	ABS module	REFER to <a href="#">Section 206-09</a> .

<b>DTC</b>	<b>Description</b>	<b>Source</b>	<b>Action</b>
C1145	Speed Wheel Sensor RF Input Circuit Failure	ABS module	REFER to <a href="#">Section 206-09</a> .
C1155	Speed Wheel Sensor LF Input Circuit Failure	ABS module	REFER to <a href="#">Section 206-09</a> .
C1165	Speed Wheel Sensor RR Input Circuit Failure	ABS module	REFER to <a href="#">Section 206-09</a> .
C1175	Speed Wheel Sensor LR Input Circuit Failure	ABS module	REFER to <a href="#">Section 206-09</a> .
C1185	ABS Power Relay Output Circuit Failure	ABS module	REFER to <a href="#">Section 206-09</a> .
C1189	Brake Fluid Level Sensor Input Short Circuit To Ground	<u>SJB</u>	REFER to <a href="#">Section 413-01</a> .
C1194	ABS Outlet Valve Coil LF Circuit Failure	ABS module	REFER to <a href="#">Section 206-09</a> .
C1198	ABS Inlet Valve Coil LF Circuit Failure	ABS module	REFER to <a href="#">Section 206-09</a> .
C1210	ABS Outlet Valve Coil RF Circuit Failure	ABS module	REFER to <a href="#">Section 206-09</a> .
C1214	ABS Inlet Valve Coil RF Circuit Failure	ABS module	REFER to <a href="#">Section 206-09</a> .
C1222	Speed Wheel Mismatch	ABS module	REFER to <a href="#">Section 206-09</a> .
C1233	Speed Wheel LF Input Signal Missing	ABS module	REFER to <a href="#">Section 206-09</a> .
C1234	Speed Wheel RF Input Signal Missing	ABS module	REFER to <a href="#">Section 206-09</a> .
C1235	Speed Wheel RR Input Signal Missing	ABS module	REFER to <a href="#">Section 206-09</a> .
C1236	Speed Wheel LR Input Signal Missing	ABS module	REFER to <a href="#">Section 206-09</a> .
C1242	ABS Outlet Valve Coil LR Circuit Failure	ABS module	REFER to <a href="#">Section 206-09</a> .
C1246	ABS Outlet Valve Coil RR Circuit Failure	ABS module	REFER to <a href="#">Section 206-09</a> .
C1250	ABS Inlet Valve Coil LR Circuit Failure	ABS module	REFER to <a href="#">Section 206-09</a> .
C1254	ABS Inlet Valve Coil RR Circuit Failure	ABS module	REFER to <a href="#">Section 206-09</a> .
C1329	ABS Outlet Valve Coil RF Circuit Excessive Temperature	ABS module	REFER to <a href="#">Section 206-09</a> .
C1330	ABS Outlet Valve Coil LR Circuit Excessive Temperature	ABS module	REFER to <a href="#">Section 206-09</a> .
C1331	ABS Outlet Valve Coil RR Circuit Excessive Temperature	ABS module	REFER to <a href="#">Section 206-09</a> .
C1332	ABS Outlet Valve Coil LF Circuit Excessive Temperature	ABS module	REFER to <a href="#">Section 206-09</a> .
C1333	ABS Inlet Valve Coil LR Circuit Excessive Temperature	ABS module	REFER to <a href="#">Section 206-09</a> .
C1334	ABS Inlet Valve Coil LF Circuit Excessive Temperature	ABS module	REFER to <a href="#">Section 206-09</a> .
C1335	ABS Inlet Valve Coil RF Circuit Excessive Temperature	ABS module	REFER to <a href="#">Section 206-09</a> .
C1336	ABS Inlet Valve Coil RR Circuit Excessive Temperature	ABS module	REFER to <a href="#">Section 206-09</a> .
C1404	Traction Control Valve Rear Circuit Failure	ABS module	REFER to <a href="#">Section 206-09</a> .
C1414	Incorrect Module Design Level	<u>RCM</u>	REFER to <a href="#">Section 501-20B</a> .
C1446	Brake Switch Circuit Failure	ABS module	REFER to <a href="#">Section 206-09</a> .
C1527	Traction Control Rear Valve Circuit Excessive Temperature	ABS module	REFER to <a href="#">Section 206-09</a> .
C1531	Dynamic Stability Control LF Valve Circuit Excessive Temperature	ABS module	REFER to <a href="#">Section 206-09</a> .

<b>DTC</b>	<b>Description</b>	<b>Source</b>	<b>Action</b>
C1730	Reference Voltage Out of Range (+5 v)	ABS module	REFER to <a href="#">Section 206-09</a> .
C1947	Front Driver's Seat Track Position Switch Circuit Short To Ground	<u>RCM</u>	REFER to <a href="#">Section 501-20B</a> .
C1948	Front Driver's Seat Track Position Switch Circuit Resistance Out of Range	<u>RCM</u>	REFER to <a href="#">Section 501-20B</a> .
C1958	Dynamic Stability Control Valve LF Circuit Failure	ABS module	REFER to <a href="#">Section 206-09</a> .
C1981	Front Driver's Seat Track Position Switch Circuit Fault	<u>RCM</u>	REFER to <a href="#">Section 501-20B</a> .
C1992	Vehicle Speed Circuit Failure	<u>ACM</u>	REFER to <a href="#">Section 418-01</a> .
C2780	<u>ECU</u> in Manufacturer Sub-State	<u>SJB</u>	REFER to <a href="#">Section 204-04</a> .
P0622	Generator Field Terminal Circuit	PCM	REFER to <a href="#">Section 414-00</a> .
P0812	Reverse Input Circuit	<u>ACM</u>	REFER to <a href="#">Section 418-01</a> .
P1260	Theft Detected, Vehicle Immobilized	PCM	REFER to <a href="#">Section 419-01B</a> .
PXXXX	All other DTCs	PCM	REFER to the Powertrain Control/Emissions Diagnosis (PC/ED) manual.
U0073	Control Module Communication Bus A Off	ABS module	REFER to <a href="#">Section 418-00</a> .
U0073	Control Module Communication Bus A Off	<u>IC</u>	REFER to <a href="#">Section 418-00</a> .
U0073	Control Module Communication Bus A Off	<u>SJB</u>	REFER to <a href="#">Section 418-00</a> .
U0140	Lost Communication With Body Control Module ( <u>GEM</u> )	<u>ACM</u>	REFER to <a href="#">Section 415-00</a> .
U0155	Lost Communication With Instrument Panel Cluster ( <u>IC</u> ) Control Module	<u>ACM</u>	REFER to <a href="#">Section 415-00</a> .
U0159	Lost Communication With Parking Assist Control Module ( <u>PAM</u> )	<u>ACM</u>	REFER to <a href="#">Section 415-00</a> .
U0184	Lost Communication With Radio ( <u>ACM</u> )	<u>SDARS</u> module	REFER to <a href="#">Section 415-00</a> .
U0193	Lost Communication With Digital Audio Control Module ( <u>SDARS</u> )	<u>ACM</u>	REFER to <a href="#">Section 415-00</a> .
U0196	Lost Communication With Entertainment Control Module - Rear (AUX)	<u>ACM</u>	REFER to <a href="#">Section 415-00</a> .
U0196	Lost Communication With Entertainment Control Module - Rear (AUX)	<u>SDARS</u> module	REFER to <a href="#">Section 415-00</a> .
U0197	Lost Communication With Telephone Control Module	<u>ACM</u>	REFER to <a href="#">Section 415-00</a> .
U0197	Lost Communication With Telephone Control Module	<u>SDARS</u> module	REFER to <a href="#">Section 415-00</a> .
U0238	Lost Communication With Digital Audio Control Module "D" ( <u>DSP</u> )	<u>ACM</u>	REFER to <a href="#">Section 415-00</a> .
U0249	Lost Communication With Entertainment Control Module - Rear "B" ( <u>RCU</u> )	<u>ACM</u>	REFER to <a href="#">Section 415-00</a> .

<b>DTC</b>	<b>Description</b>	<b>Source</b>	<b>Action</b>
U0249	Lost Communication With Entertainment Control Module - Rear "B" (RCU )	<u>SDARS</u> module	REFER to <a href="#">Section 415-00.</a>
U1900	<u>CAN</u> Communication Bus Fault - Receive Error	ABS module	REFER to <a href="#">Section 418-00.</a>
U1900	<u>CAN</u> Communication Bus Fault - Receive Error	<u>IC</u>	REFER to <a href="#">Section 418-00.</a>
U1900	<u>CAN</u> Communication Bus Fault - Receive Error	<u>SJB</u>	REFER to <a href="#">Section 418-00.</a>
U2011	Module Transmitted Invalid Data (Non <u>SCP</u> )	ABS module	REFER to <a href="#">Section 206-09.</a>
U2023	Fault Received From External Node	<u>IC</u>	REFER to <a href="#">Section 413-01.</a>
U2033	<u>VSM</u> Communication Link Failure	<u>SJB</u>	REFER to <a href="#">Section 419-01A.</a>
U2050	No Application Present	ABS module	REFER to <a href="#">Section 418-01.</a>
U2050	No Application Present	<u>ACM</u>	REFER to <a href="#">Section 415-00.</a>
U2050	No Application Present	<u>IC</u>	REFER to <a href="#">Section 418-01.</a>
U2050	No Application Present	<u>SDARS</u> module	REFER to <a href="#">Section 415-00.</a>
U2050	No Application Present	<u>SJB</u>	REFER to <a href="#">Section 418-01.</a>
U2051	One or More Calibration Files Missing / Corrupt	ABS module	REFER to <a href="#">Section 418-01.</a>
U2051	One or More Calibration Files Missing / Corrupt	<u>ACM</u>	REFER to <a href="#">Section 415-00.</a>
U2473	Unexpected Vehicle Speed ( <u>VSS</u> )	<u>ACM</u>	REFER to <a href="#">Section 415-00.</a>