


Battery Cables — 4.6L (3V)

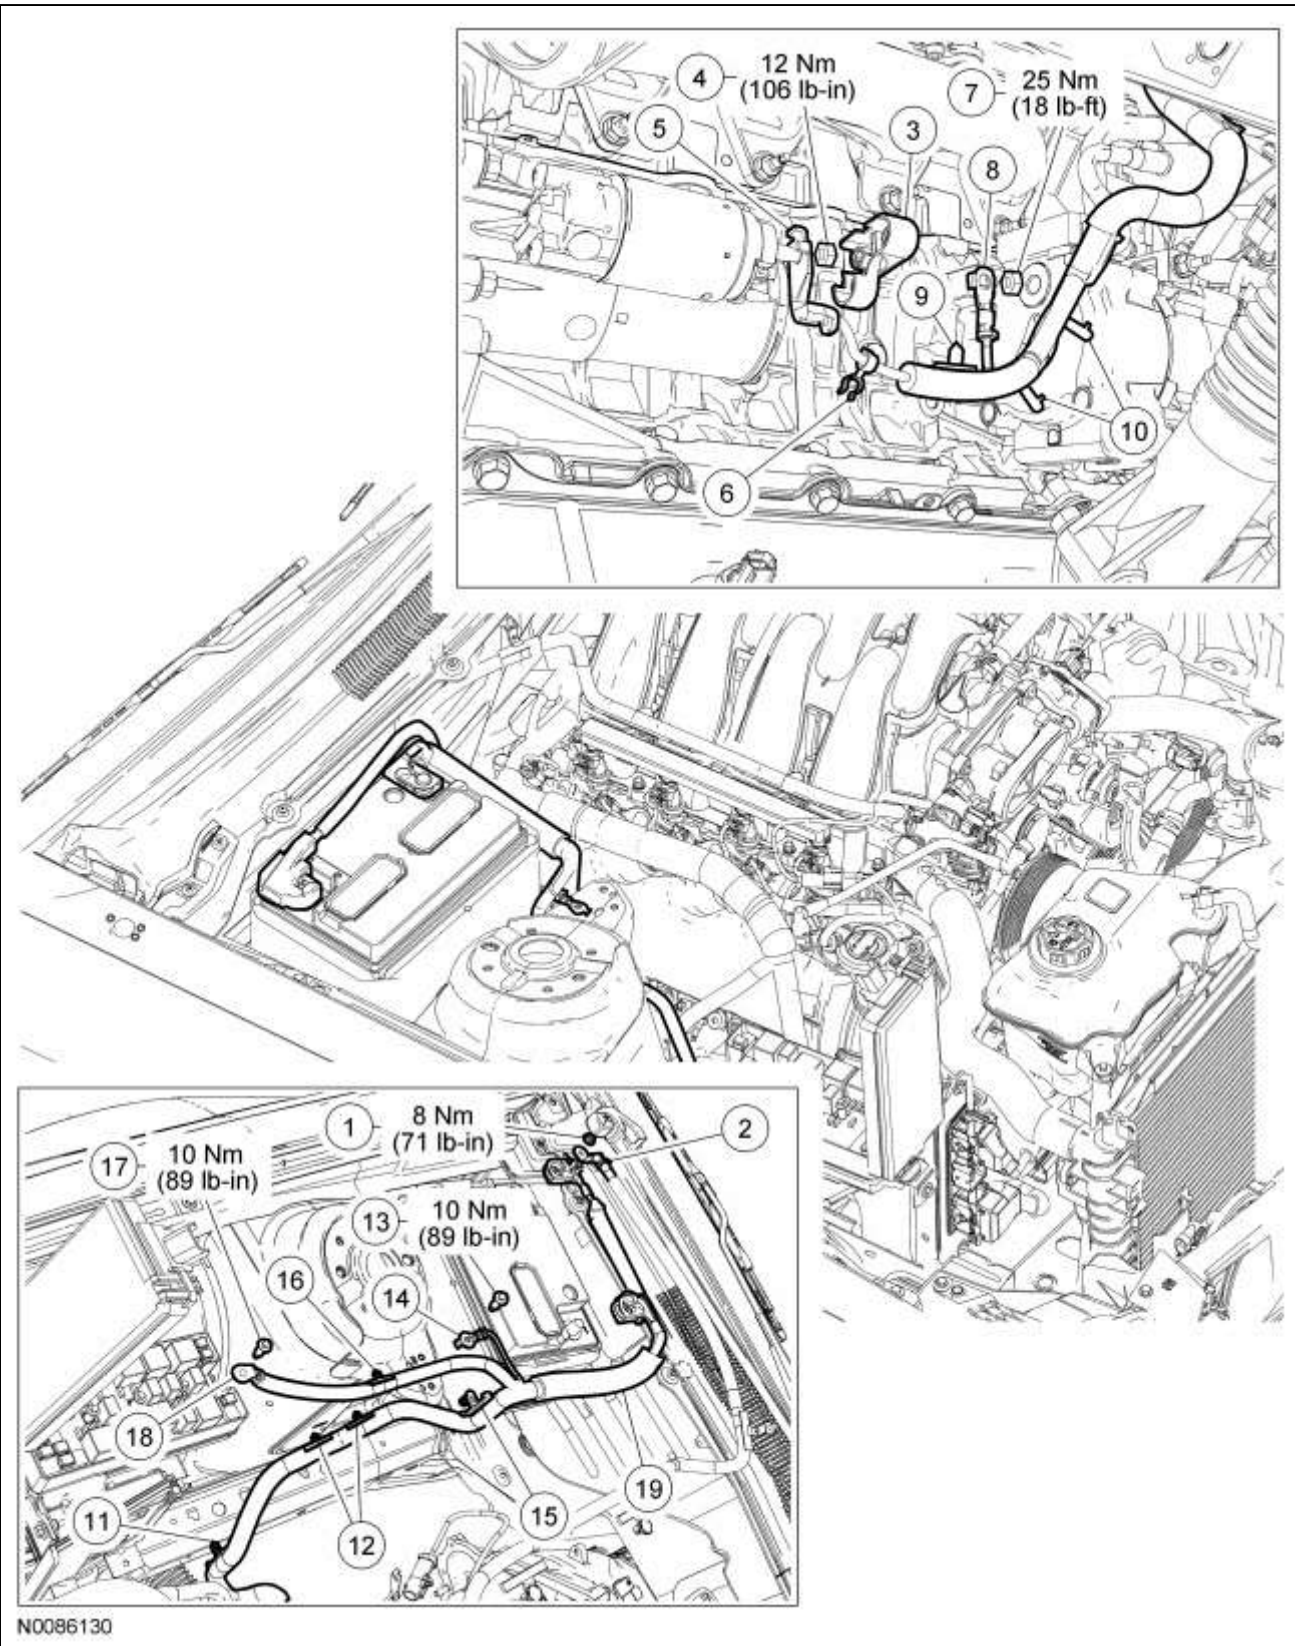

N0086130

Item	Part Number	Description
1	W711953	Generator harness B+ terminal nut
2	—	Generator harness terminal (part of 14305)

3	11N087	Starter solenoid terminal cover
4	W706414	Starter solenoid positive cable terminal nut
5	—	Starter solenoid positive cable terminal (part of 14300)
6	—	Battery cable clip (part of 14300)
7	W520213	Battery ground cable engine terminal nut
8	—	Battery ground cable engine terminal (part of 14300)
9	—	Starter solenoid wire harness locator
10	—	Battery cable harness locators (2 required) (part of 14300)
11	—	Battery cable harness locator (part of 14300)
12	—	Battery cable harness locators (2 required) (RH tower) (part of 14300)
13	W712583	Battery ground cable body terminal bolt
14	—	Battery ground cable body terminal (part of 14300)
15	—	Battery cable harness locator (part of 14300)
16	—	Bussed Electrical Center (BEC) harness locator (part of 14300)
17	—	<u>BEC</u> terminal bolt
18	—	<u>BEC</u> terminal (part of 14300)
19	14300	Battery cable

Removal and Installation

1. With the vehicle in NEUTRAL, position it on a hoist. For additional information, refer to [Section 100-02](#).
2. Disconnect the battery. For additional information, refer to [Battery Disconnect](#) in this section.
3. Position the positive battery terminal cover aside, remove the nut and position the generator harness terminal aside.
 - To install, tighten to 8 Nm (71 lb-in).
4. Remove the starter solenoid terminal cover.
5. Remove the nut and position the starter solenoid positive cable terminal aside.
 - To install, tighten to 12 Nm (106 lb-in).
6. Remove the battery cable clip from the transmission cooler lines.
7. Remove the nut and position the battery ground cable engine terminal aside.
 - To install, tighten to 25 Nm (18 lb-ft).
8. Remove the starter solenoid wire harness locator from the battery cable harness.
9. Remove the 2 battery cable harness locators from the subframe.
10. Remove the battery cable harness locator from the body.
11. Remove the 2 battery cable harness locators from the RH strut tower.
12. Remove the bolt and position the battery ground cable body terminal aside.
 - To install, tighten to 10 Nm (89 lb-in).
13. Remove the battery cable harness locator from the battery tray.
14. Remove the battery cable harness locator from the RH strut tower.
15. Open the Bussed Electrical Center (BEC) cover, remove the bolt and position the BEC terminal aside.
 - To install, tighten to 10 Nm (89 lb-in).
16. Remove the battery cables.
17. To install, reverse the removal procedure.

