


### Stabilizer Bar Bushing

#### Material

Item	Specification
Motorcraft® Silicone Spray Lubricant XL-6	ESR-M13P4-A

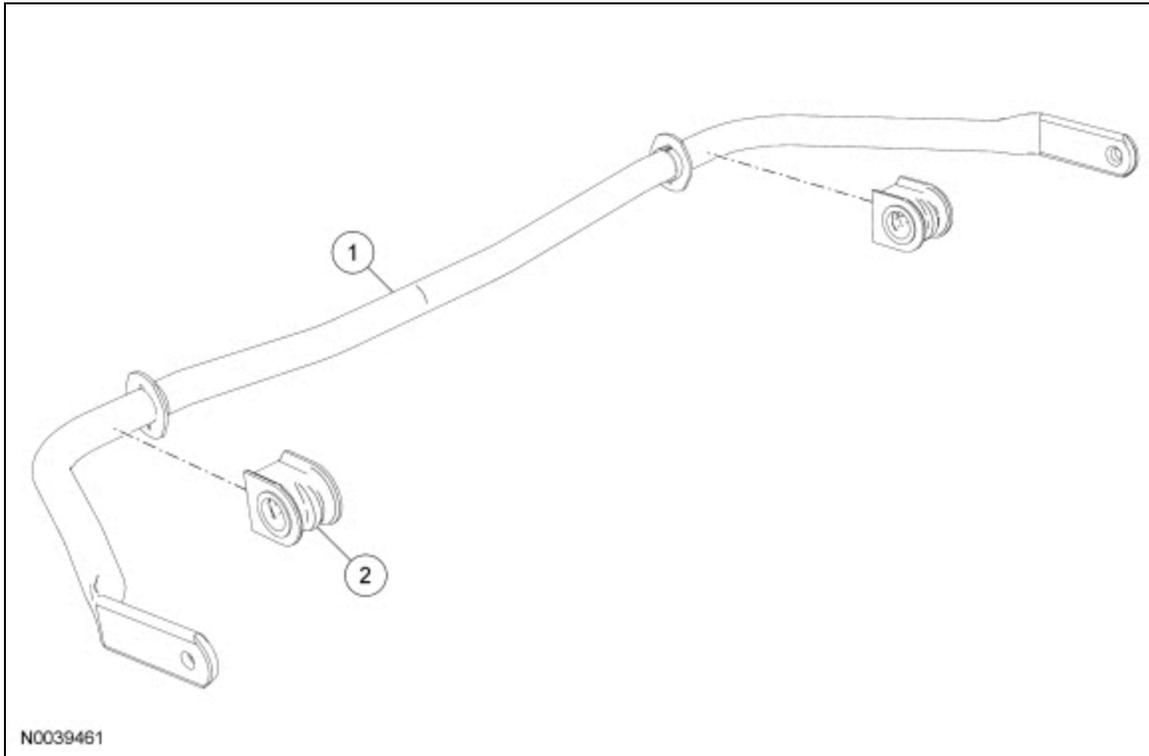


Item	Part Number	Description
1	5482	Stabilizer bar
2	5484	Stabilizer bar bushing

#### Removal and Installation


1. Remove the stabilizer bar. For additional information, refer to [Stabilizer Bar](#) in this section.
2. **NOTE:** To aid removal, apply a light coat of lubricant to the necessary parts of the front stabilizer bar.

Remove the stabilizer bar bushing by sliding it off the stabilizer bar.

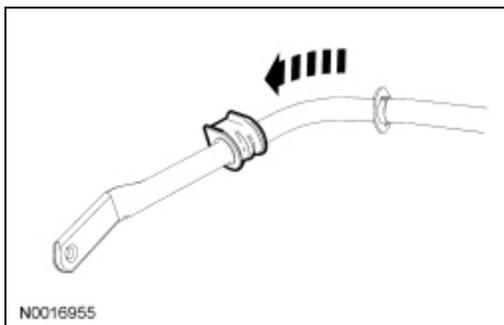

3. **NOTE:** To aid installation, apply a light coat of lubricant to the necessary parts of the front stabilizer bar and the inside diameter of the stabilizer bar bushing.

To install, reverse the removal procedure.

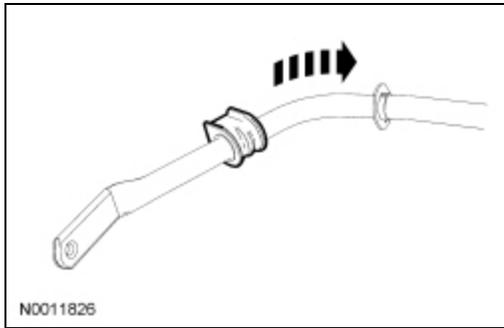

© Copyright 2024, Ford Motor Company.