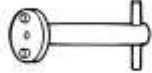


## Brake Pads

### Special Tool(s)

 ST1112-A	Adapter, Rear Brake Caliper Piston Adjuster <a href="#">206-026</a> (T87P-2588-A) or equivalent
--	--

### Material

Item	Specification
Silicone Brake Caliper Grease and Dielectric Compound XG-3-A	ESE-M1C171-A

### Removal

 **WARNING:** Use of any other than approved DOT 3 motor vehicle brake fluid will cause permanent damage to brake components and will render the brakes inoperative. Failure to follow these instructions may result in personal injury.

 **WARNING:** Carefully read cautionary information on product label. For EMERGENCY MEDICAL INFORMATION seek medical advice. In the USA or Canada on Ford/Motorcraft products call: 1-800-959-3673. For additional information, consult the product Material Safety Data Sheet (MSDS) if available. Failure to follow these instructions may result in personal injury.

**NOTICE:** Brake fluid is harmful to painted and plastic surfaces. If brake fluid is spilled onto a painted or plastic surface, immediately wash it with water.

1. With the vehicle in NEUTRAL, position it on a hoist. For additional information, refer to [Section 100-02](#).

2. **NOTICE:** Do not use caliper sight hole to retract pistons as this can damage the pistons and boots.

**NOTICE:** When removing the brake caliper, never allow it to hang from the brake hose. Provide a suitable support.

Remove the 2 brake caliper guide pin bolts and position the brake caliper aside.

3. **NOTICE:** Install new pads if worn to or past the specified thickness above the metal backing plate or rivets. Install pads in complete axle sets.

Remove the brake pads and discard the spring clips.

4. Measure the brake disc thickness.

- Install a new brake disc if not within specification. For additional information, refer to [Brake Disc](#) in this section.

5. Inspect the brake caliper.


- If leaks or damaged boots are found, install a new brake caliper. For additional information, refer to [Brake Caliper](#) in this section.

6. Inspect the brake caliper anchor plate assembly.

- Check the guide pins and boots for binding and damage.
- Replace worn or damaged pins. Lubricate the pins with the specified grease.
- Install a new brake caliper anchor plate if it is worn or damaged.

### Installation

1. Using the special tool, compress the brake caliper piston into the brake caliper bore.

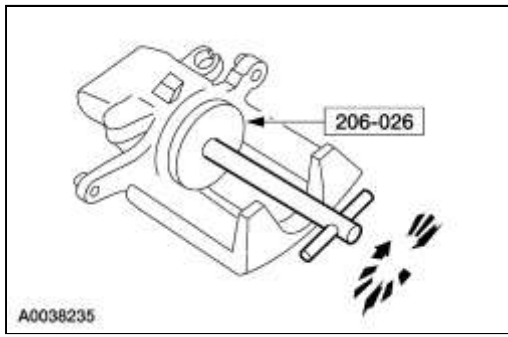

2. Position the notch in the caliper piston up and down to align with the alignment pin on the brake pad.
3. **NOTICE: Do not allow grease, oil, brake fluid or other contaminants to contact the pad lining material. Do not install contaminated pads.**  
**NOTE:** *Install all hardware supplied with the pad kit.*  
Install the 2 new spring clips and the brake pads.
4. Position the brake caliper on the anchor plate and install the 2 brake caliper guide pin bolts until snug.
5. Tighten the brake caliper guide pin bolts to 33 Nm (24 lb-ft) in the following sequence:
  - LH caliper: tighten the top guide pin bolt, then tighten the bottom guide pin bolt.
  - RH caliper: tighten the bottom guide pin bolt, then tighten the top guide pin bolt.
6. Test the brakes for normal operation.