

Specifications

Torque Specifications

Description	Nm	lb-ft	lb-in
Crossmember brace nuts	48	35	—
Crossmember brace bolts	48	35	—
Ground strap bolt	6	—	53
Inner tie rod	120	89	—
LH engine mount nut	63	46	—
Lower steering column shaft-to-upper steering column shaft bolt	25	18	—
Rearward subframe crossmember brace nuts	48	35	—
Starter motor solenoid B+ terminal nut	12	—	106
Starter motor solenoid S-terminal nut	5	—	44
Steering column shaft coupling bolts	25	18	—
Steering gear bolts	115	85	—
Strut tower cross brace bolts	35	26	—
Tie-rod end nuts	80	59	—
Tie-rod jam nuts	55	41	—
Transmission cooler tube bracket-to-engine mount nut	48	35	—
Transmission cooler tube bracket-to-transmission nut	12	—	106