


Window Regulator Motor — Front Door

Removal and Installation

NOTE: The LH or RH front window motor must be de-initialized, then initialized whenever the front window motor is removed from the window regulator, a new window regulator and motor is installed, a new window glass is installed or for any operation in which grease or lubricants are applied to the window regulator or glass run.

1. Remove the front door window regulator and motor assembly. For additional information, refer to [Window Regulator and Motor — Front Door](#) in this section.
2. Remove the 3 door window motor screws and the door window motor.

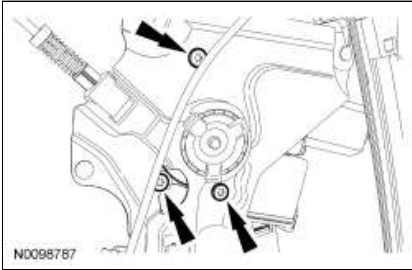

3. To install, reverse the removal procedure.
 - Adjust the door window glass as necessary. For additional information, refer to [Window Glass Adjustment — Front Door](#) in this section.
 - Initialize the window motor. For additional information, refer to [Window Motor Initialization](#) in this section.