


### Front Display Interface Module (FDIM)

**NOTE:** With navigation shown, without navigation similar.

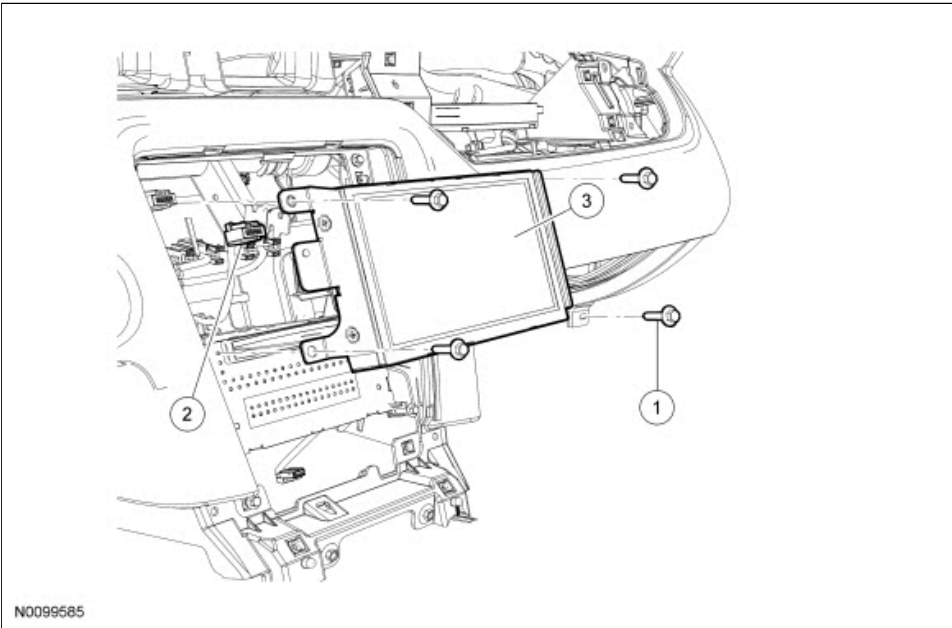

N0099585

Item	Part Number	Description
1	W705314 -S	Front Display Interface Module (FDIM) screws (4 required)
2	—	FDIM electrical connectors (Part of 14401)
3	10D885 /10E899	FDIM (without navigation/with navigation)

#### Removal and Installation

1. **NOTE:** Module configuration is required when a new Front Display Interface Module (FDIM) is being installed.

Upload the FDIM configuration information to the scan tool. For additional information, refer to [Section 418-01](#) to carry out Programmable Module Installation (PMI) .

2. Remove the center instrument panel finish panel. For additional information, refer to the [Section 501-12](#).

3. Remove the 4 screws and the FDIM .

- Disconnect the electrical connector.

4. To install, reverse the removal procedure.

- Download the configuration information to the FDIM . For additional information, refer to [Section 418-01](#) to carry out PMI .