


## Selector Lever Knob

### Removal


1. **NOTE:** The SelectShift™ switch is part of the selector lever knob. To install a new SelectShift™ switch, a new selector lever knob must be installed.

Remove the selector lever. Refer to [Selector Lever](#).


2.

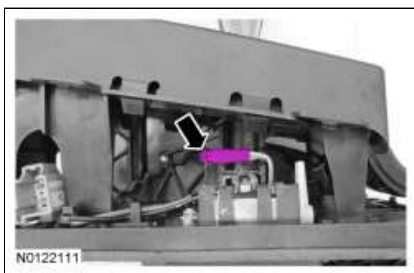

3. Interior trim remover.

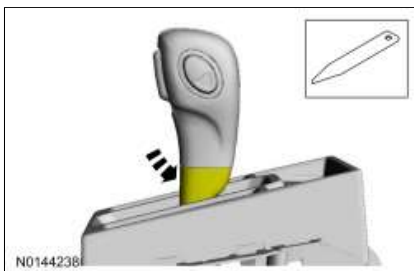


4.

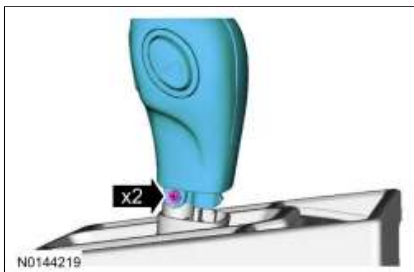

### Installation


1. **NOTE:** Keep the SelectShift™ switch wire taut while installing the selector lever knob.

1. Position the SelectShift™ switch wire towards the back right corner of the selector knob shroud.
2. Route the SelectShift™ switch wire through the selector lever opening.

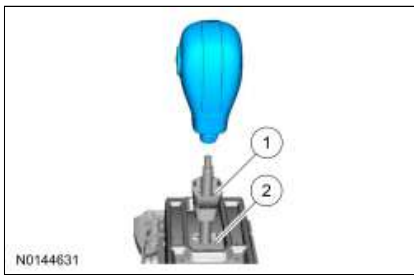


2. **NOTICE:** Tightening the transmission selector lever knob screws over 2 Nm (18 lb-in) may damage the selector lever assembly.


- Tighten to 2 Nm (18 lb-in).

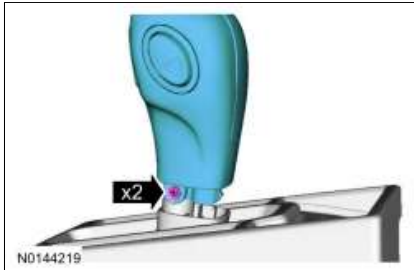

3.

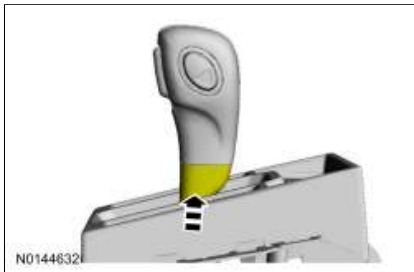

4. **NOTE:** Make sure the SelectShift™ switch wire is pulled taut prior to connecting the SelectShift™ switch.

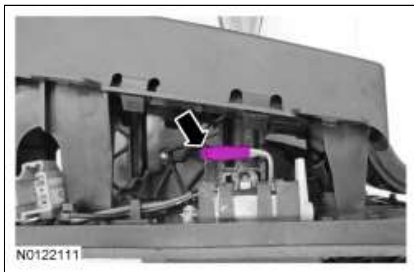

5. Install the selector lever. Refer to [Selector Lever](#).

