


Power Door Window Initialization


Initialization

1.  **WARNING:** Before beginning any service procedure in this manual, refer to health and safety warnings in section 100-00 General Information. Failure to follow this instruction may result in serious personal injury.

Refer to: [Health and Safety Precautions](#) (100-00 General Information, Description and Operation).

2. **NOTE:** *This step is only necessary for an existing window regulator motor. If installing a new window regulator motor, proceed to Step 3.*

To initialize an existing window regulator motor, the motor must first be de-initialized. This can be accomplished by disconnecting the battery cable or window motor fuse while the window is operating. After the motor has been de-initialized, reconnect the battery cable or fuse before proceeding to the following step.

3.  **WARNING:** Keep objects and body parts clear of the glass panel when carrying out the initialization procedure. During the initialization procedure, the glass panel closes with high force and cannot detect objects in its path. Failure to follow this instruction may result in serious personal injury.

START the engine.

4. **NOTE:** *The door MUST be closed during this procedure (for convertibles, the top and quarter glass must be in the CLOSED and UP position) in order for the door window motor to initialize.*

NOTE: *Carry out steps 4 - 7 within 30 seconds of starting the sequence.*

Press and hold the window control switch until the window is fully open.

5. Release the window control switch.
6. Lift and hold the window control switch until the window is fully closed. When the window auto-retracts, release the window control switch.
7. After auto-retract occurs, lift and hold the window control switch until the window is fully closed. Keep the window control switch held for a few seconds after the window stops.
8. Test for correct window operation by carrying out the one-touch up and one-touch down features.