

## REMOVAL AND INSTALLATION

### Floor Console

#### Removal and Installation

##### All vehicles

1. Disconnect the battery ground cable. For additional information, refer to Section 414-01.
2. Apply the parking brake.

##### Vehicles with automatic transmission


3. Place the selector lever in the 1 position.

##### Vehicles with manual transmission

4. Remove the gearshift lever handle.


##### All vehicles

5. Remove the floor console finish panel in the following sequence.
  - 1 Using a non-marring tool, pry evenly around the edges to release the retaining clips.
  - 2 Lift the floor console finish panel upward and outward.

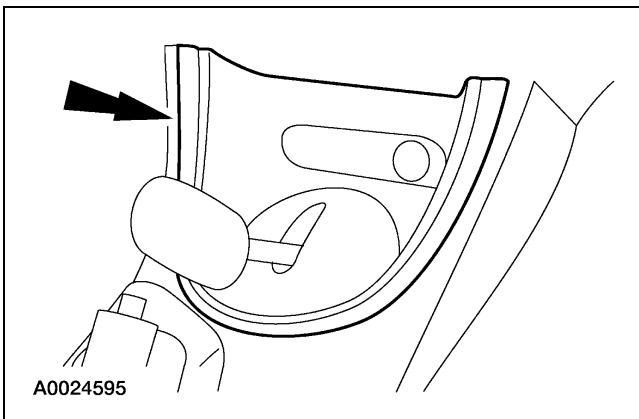


6. Disconnect the electrical connector.
7. Open the floor console glove compartment door.


8. Remove the floor console screws.

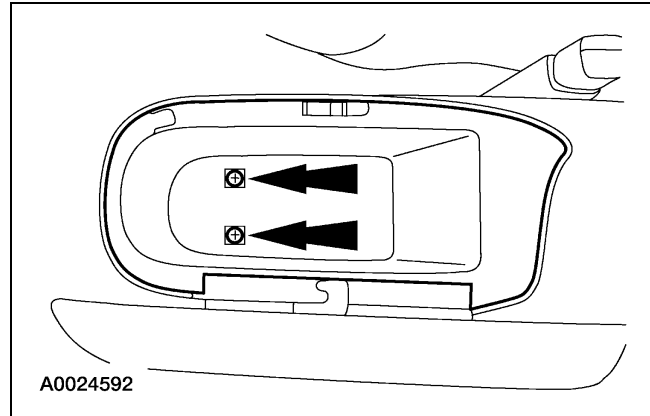

9. Disconnect the floor console electrical connector.

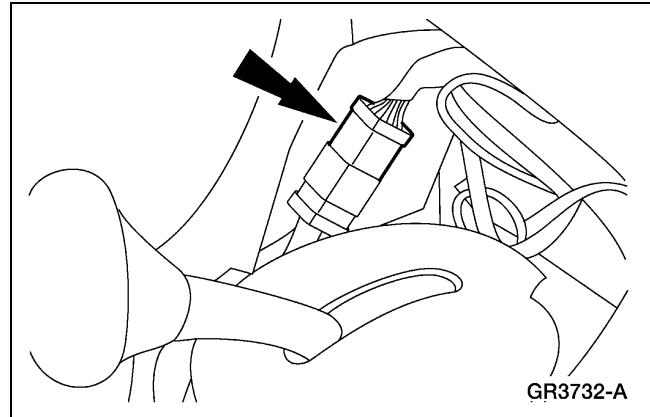

10. Remove the screws and the floor console.

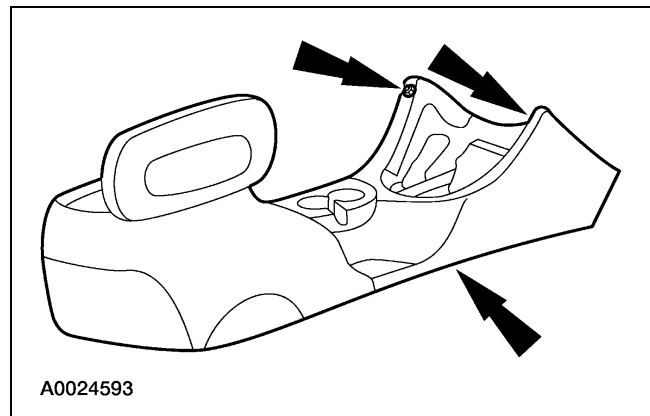

11. To install, reverse the removal procedure.