

REMOVAL AND INSTALLATION

Accessory Drive Belt — 4.0L SOHC

Removal and Installation

1. Using a suitable belt tensioner release tool, rotate the accessory drive belt tensioner counterclockwise and remove the accessory drive belt.
2. **NOTE:** Refer to the illustration for correct drive belt routing.

To install, reverse the removal procedure.

