

SPECIFICATIONS

Torque Specifications

Description	Nm	lb-ft	lb-in
Dash boot bearing nuts	9	—	80
Lower steering column shaft-to-steering column coupling bolt	47	35	—
Lower steering column shaft-to-upper steering column shaft bolt	25	18	—

Torque Specifications (Continued)

Description	Nm	lb-ft	lb-in
Steering column coupling-to-steering gear bolt	25	18	—
Steering column nuts	18	13	—
Steering column shaft-to-steering column bolt	25	18	—
Steering wheel bolt	58	43	—