

GENERAL PROCEDURES

Wheel Leaks

 **WARNING:** Wheel repairs that use welding or peening are not approved. An inner tube is not an acceptable repair for leaking wheels or tires.

If the air pressure in a tire mounted on an aluminum wheel is found to be low, perform the following procedure.

1. Remove the tire and wheel assembly, and inspect the wheel for structural damage. If the wheel is damaged, install a new wheel.
-