
GENERAL PROCEDURES

Torque Converter

1. A new or remanufactured torque converter must be installed if one or more of the following statements is true:
 - A torque converter malfunction has been determined based on complete diagnostic procedures.
 - Converter stud or studs, impeller hub or bushing are damaged.
 - Discoloration (due to overheating).
 - Evidence of transmission assembly or fluid contamination due to the following transmission or converter failure Modes:
 - Major metallic failure.
 - Multiple clutches or clutch plate failures.
 - Sufficient component wear which results in metallic contamination.
 - Internal torque converter contamination present. For additional information, refer to Torque Converter Contamination Inspection in this section.
-