

IN-VEHICLE REPAIR


Flexplate

Removal

1. Remove the transmission. For additional information, refer to Section 307-01.
2. Remove the 8 bolts, the flexplate and the flexplate-to-crankshaft spacer.

Installation

1. **NOTE:** Special bolts are used for flexplate installation. Do not use standard bolts.
Position the spacer and the flexplate. Install the 8 bolts and tighten in the sequence shown in 2 stages.
 - Stage 1: Tighten to 13 Nm (10 lb-ft).
 - Stage 2: Tighten to 71 Nm (52 lb-ft).

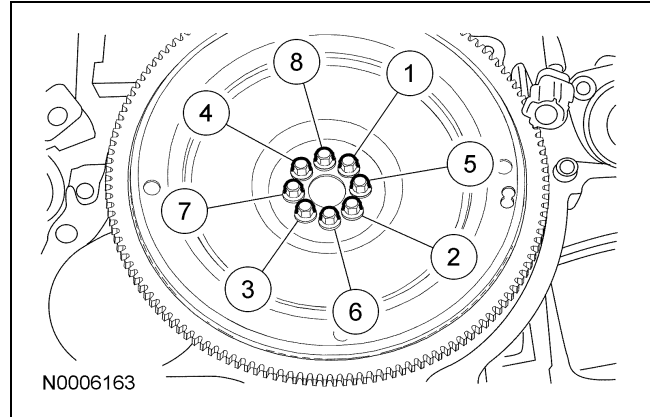

2. Install the transmission. For additional information, refer to Section 307-01.