
REMOVAL AND INSTALLATION

Radiator

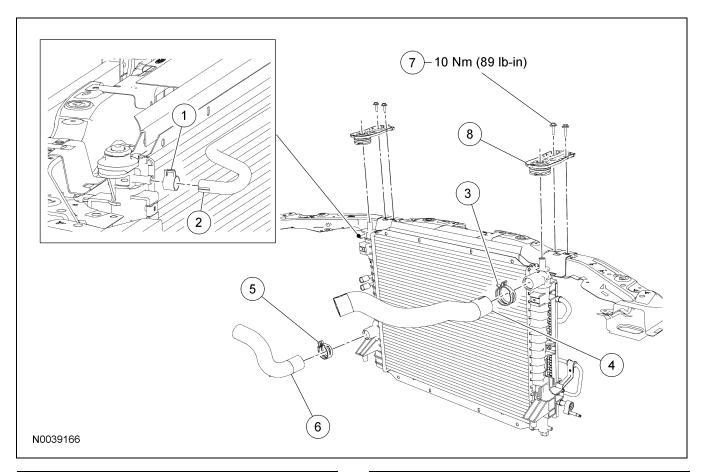


Item	Part Number	Description
1	W527383	Hose clamp
2	8C633	Degas bottle-to-radiator hose
3	8287	Hose clamp
4	8260	Upper radiator hose
5	8287	Hose clamp

Item	Part Number	Description
6	8286	Lower radiator hose
7	W505424	Radiator support bracket bolt (4 required)
8	8226	Radiator support bracket (2 required)

(Continued)

REMOVAL AND INSTALLATION (Continued)

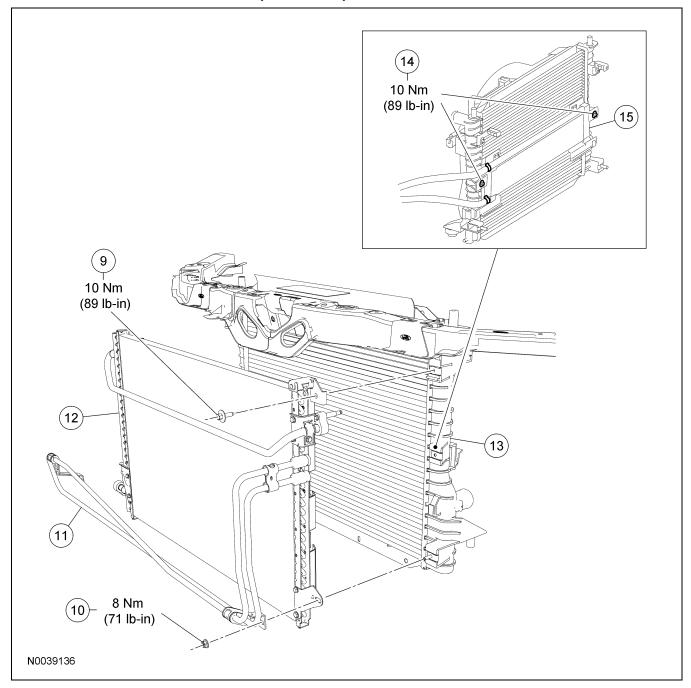

Item	Part Number	Description
9	N606676	A/C condenser bolt (2 required)
10	_	Power steering tubes and A/C condenser retaining nut (2 required)
11	3F780	Power steering tubes
12	19710	A/C condenser
13	8005	Radiator
14		Transmission cooler bolts (if equipped)

(Continued)


Item	Part Number	Description
15	7A095	Transmission cooler (if
		equipped)

Removal and Installation

- 1. Drain the cooling system. For additional information, refer to Cooling System Draining, Filling and Bleeding in this section.
- 2. Remove the lower radiator air deflector.

REMOVAL AND INSTALLATION (Continued)

3. Remove the 4 pushpin retainers and the air deflector.

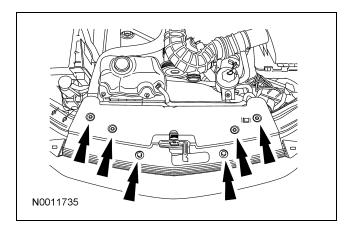

- Remove the cooling fan motor and shroud. For additional information, refer to Cooling Fan Motor and Shroud in this section.
- 5. Disconnect the degas bottle-to-radiator hose and position aside.
- 6. Disconnect the upper radiator hose from the radiator and position aside.
- 7. Disconnect the lower radiator hose from the radiator and position aside.

- 8. Remove the 4 bolts and the radiator support brackets.
 - To install, tighten to 10 Nm (89 lb-in).
- Remove the 2 power steering tubes and A/C condenser retaining nuts and position aside the power steering tubes.
 - To install, tighten to 10 Nm (89 lb-in).
- 10. Remove the 2 A/C condenser bolts.
 - To install, tighten to 10 Nm (89 lb-in).
- 11. If equipped, remove the 2 bolts and the transmission cooler and position aside.
 - To install, tighten to 10 Nm (89 lb-in).
- 12. Remove the radiator.
- 13. To install, reverse the removal procedure.
- 14. Fill and bleed the cooling system. For additional information, refer to Cooling System Draining, Filling and Bleeding in this section.