
DESCRIPTION AND OPERATION

Acceleration Control

The acceleration control consists of:

- accelerator pedal and sensor assembly.

The engine management system electronically operates the throttle of the engine in response to throttle pedal movements initiated by the driver. In the event of a system failure, the engine management system provides a ‘limp home’ mode which allows the car to be driven with limited performance.
