

IN-VEHICLE REPAIR**Valve Cover — LH****Material**

Item	Specification
Motorcraft Metal Surface Prep ZC-31	—
Silicone Gasket Remover ZC-30	—
Silicone Gasket and Sealant TA-30	WSE-M4G323-A4

IN-VEHICLE REPAIR (Continued)

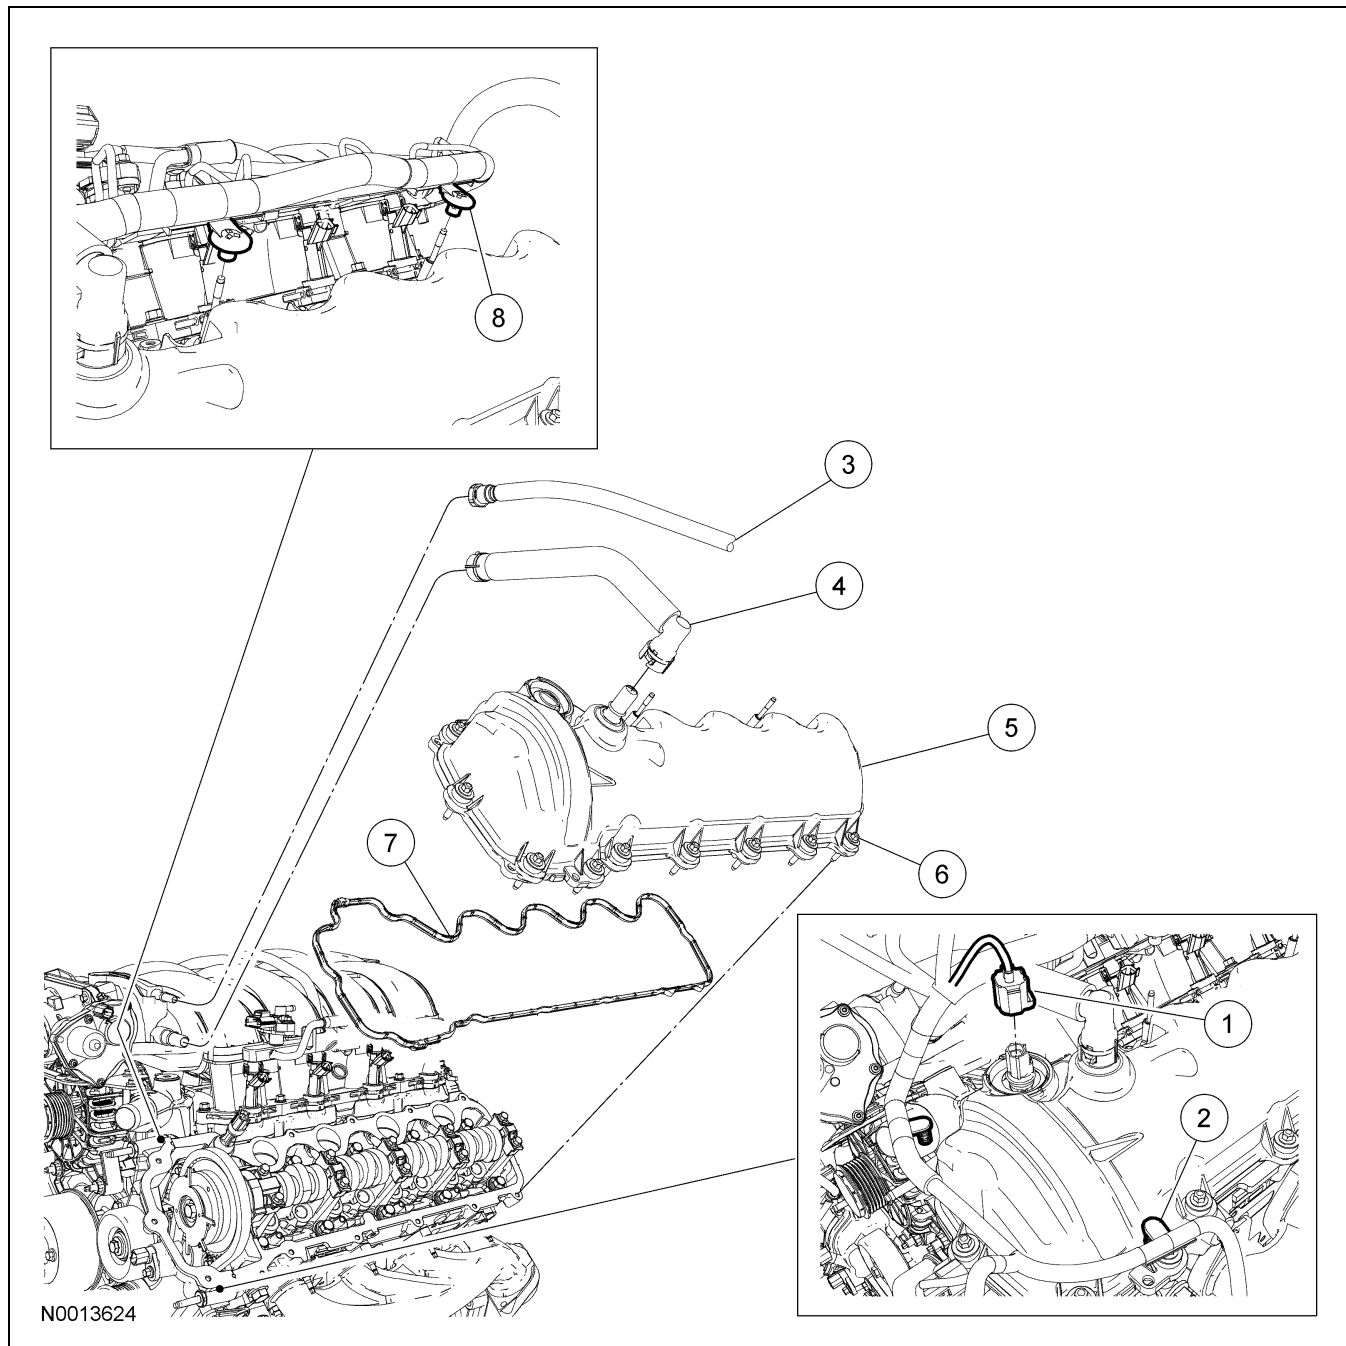

Item	Part Number	Description
1	14A464	LH variable camshaft timing (VCT) solenoid electrical connector (part of 12B637)
2	—	Engine wiring harness retainer (2 required) (part of 12B637)
3	9J274	Evaporative emissions (EVAP) tube
4	6K817	Positive crankcase ventilation (PCV) tube
5	6A505	LH valve cover

(Continued)

Item	Part Number	Description
6	6C519	LH valve cover bolt (15 required) (part of 6582)
7	6A559	LH valve cover gasket
8	—	Engine wiring harness retainer (2 required) (part of 12B637)

Removal

1. Remove the air cleaner assembly and outlet pipe. For additional information, refer to Section 303-12.

IN-VEHICLE REPAIR (Continued)


2. Remove the LH ignition coils. For additional information, refer to Section 303-07B.
3. Remove the oil level indicator and tube. For additional information, refer to Oil Level Indicator and Tube in this section.
4. Disconnect the evaporative emissions (EVAP) tube from the intake manifold.
5. Remove the positive crankcase ventilation (PCV) tube.
6. Disconnect the LH variable camshaft timing (VCT) solenoid electrical connector and detach the 2 wiring harness pin-type retainers.
7. Detach the 2 wiring harness retainers from the valve cover stud bolts.
8.  **CAUTION: Do not use metal scrapers, wire brushes, power abrasive discs or other abrasive means to clean the sealing surfaces. These tools cause scratches and gouges which make leak paths. Use a plastic scraping tool to remove all traces of old sealant.**

Loosen the 15 fasteners and remove the LH valve cover and gasket.


- Clean the valve cover mating surface of the cylinder head with silicone gasket remover and metal surface prep. Follow the directions on the packaging.
- Discard the valve cover gasket. Clean the valve cover gasket groove with soap and water or a suitable solvent.

Installation

1. **NOTE:** If the valve cover is not secured within 4 minutes, the sealant must be removed and the sealing area cleaned with metal surface cleaner. Failure to follow this procedure can cause future oil leakage.
Apply a bead of silicone gasket and sealant in 2 places where the engine front cover meets the cylinder head.

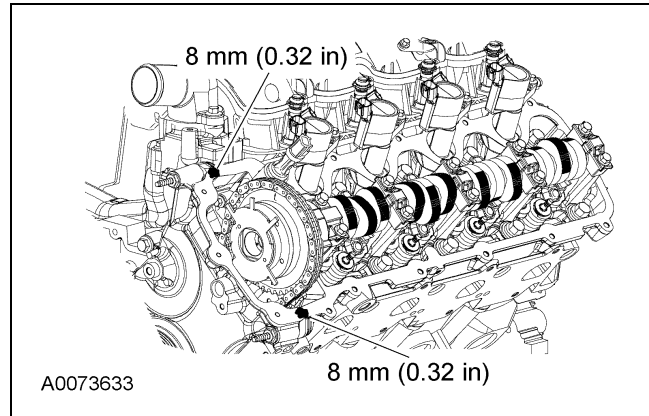

2. Position the LH valve cover and new gasket on the cylinder head and tighten the bolts in the sequence shown.
 - Tighten to 10 Nm (89 lb-in).

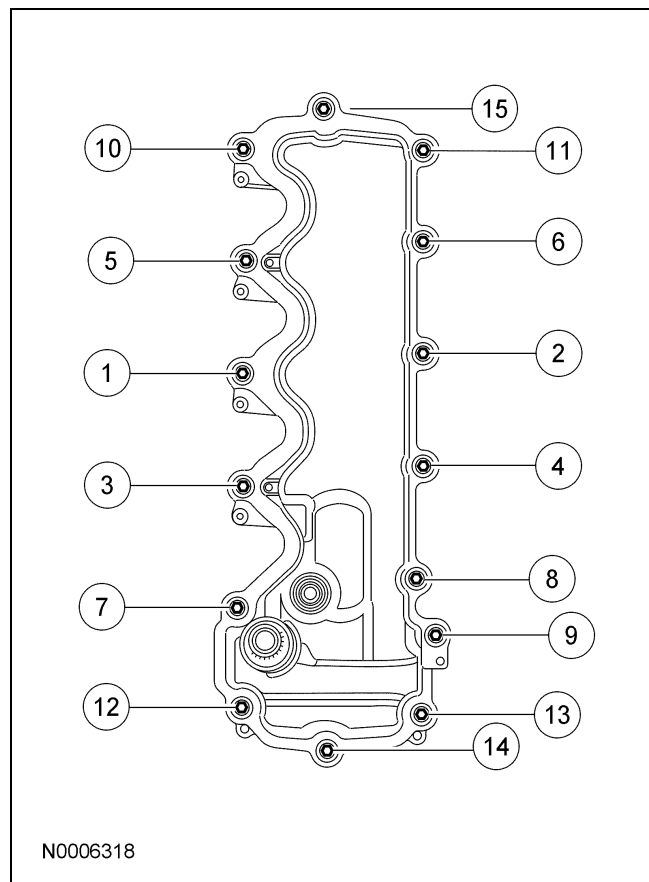

3. Attach the 2 wiring harness retainers to the valve cover stud bolts.
4. Connect the LH VCT solenoid electrical connector and attach the 2 wiring harness pin-type retainers.
5. Install the PCV tube.

IN-VEHICLE REPAIR (Continued)

- | | |
|---|---|
| 6. Connect the EVAP tube to the intake manifold. | 9. Install the air cleaner assembly and outlet pipe. For additional information, refer to Section 303-12. |
| 7. Install the oil level indicator and tube. For additional information, refer to Oil Level Indicator and Tube in this section. | |
| 8. Install the LH ignition coils. For additional information, refer to Section 303-07B. | |
-