Parking Aid Sensor

Removal

1. Remove the rear bumper cover. Refer to Section 501-19.
2.

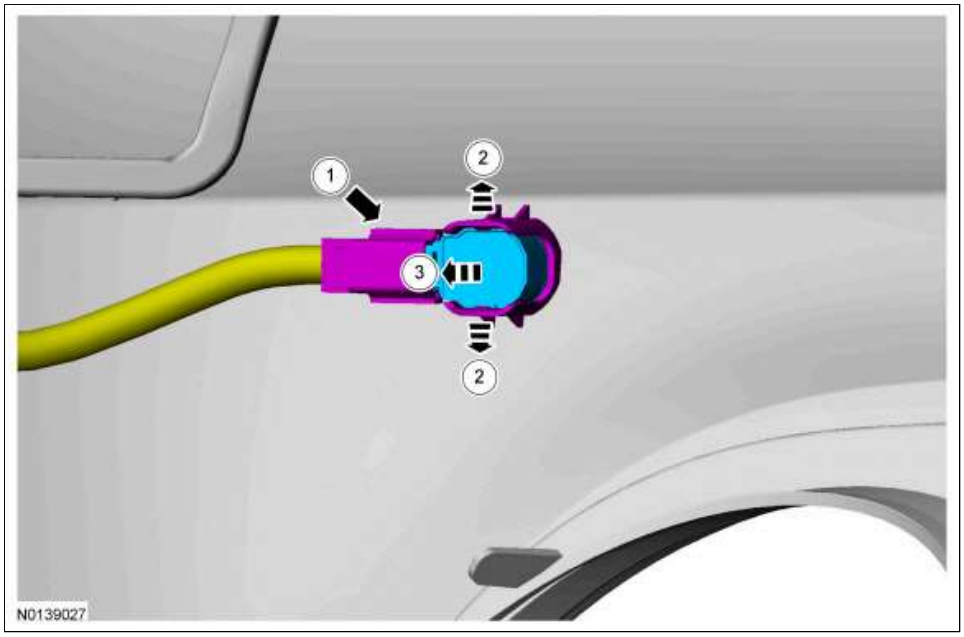

Installation

1. To install, reverse the removal procedure.
    - Carry out the azimuth and elevation system check. For additional information, refer to Azimuth System Check and Elevation System Check.

© Copyright 2025, Ford Motor Company.