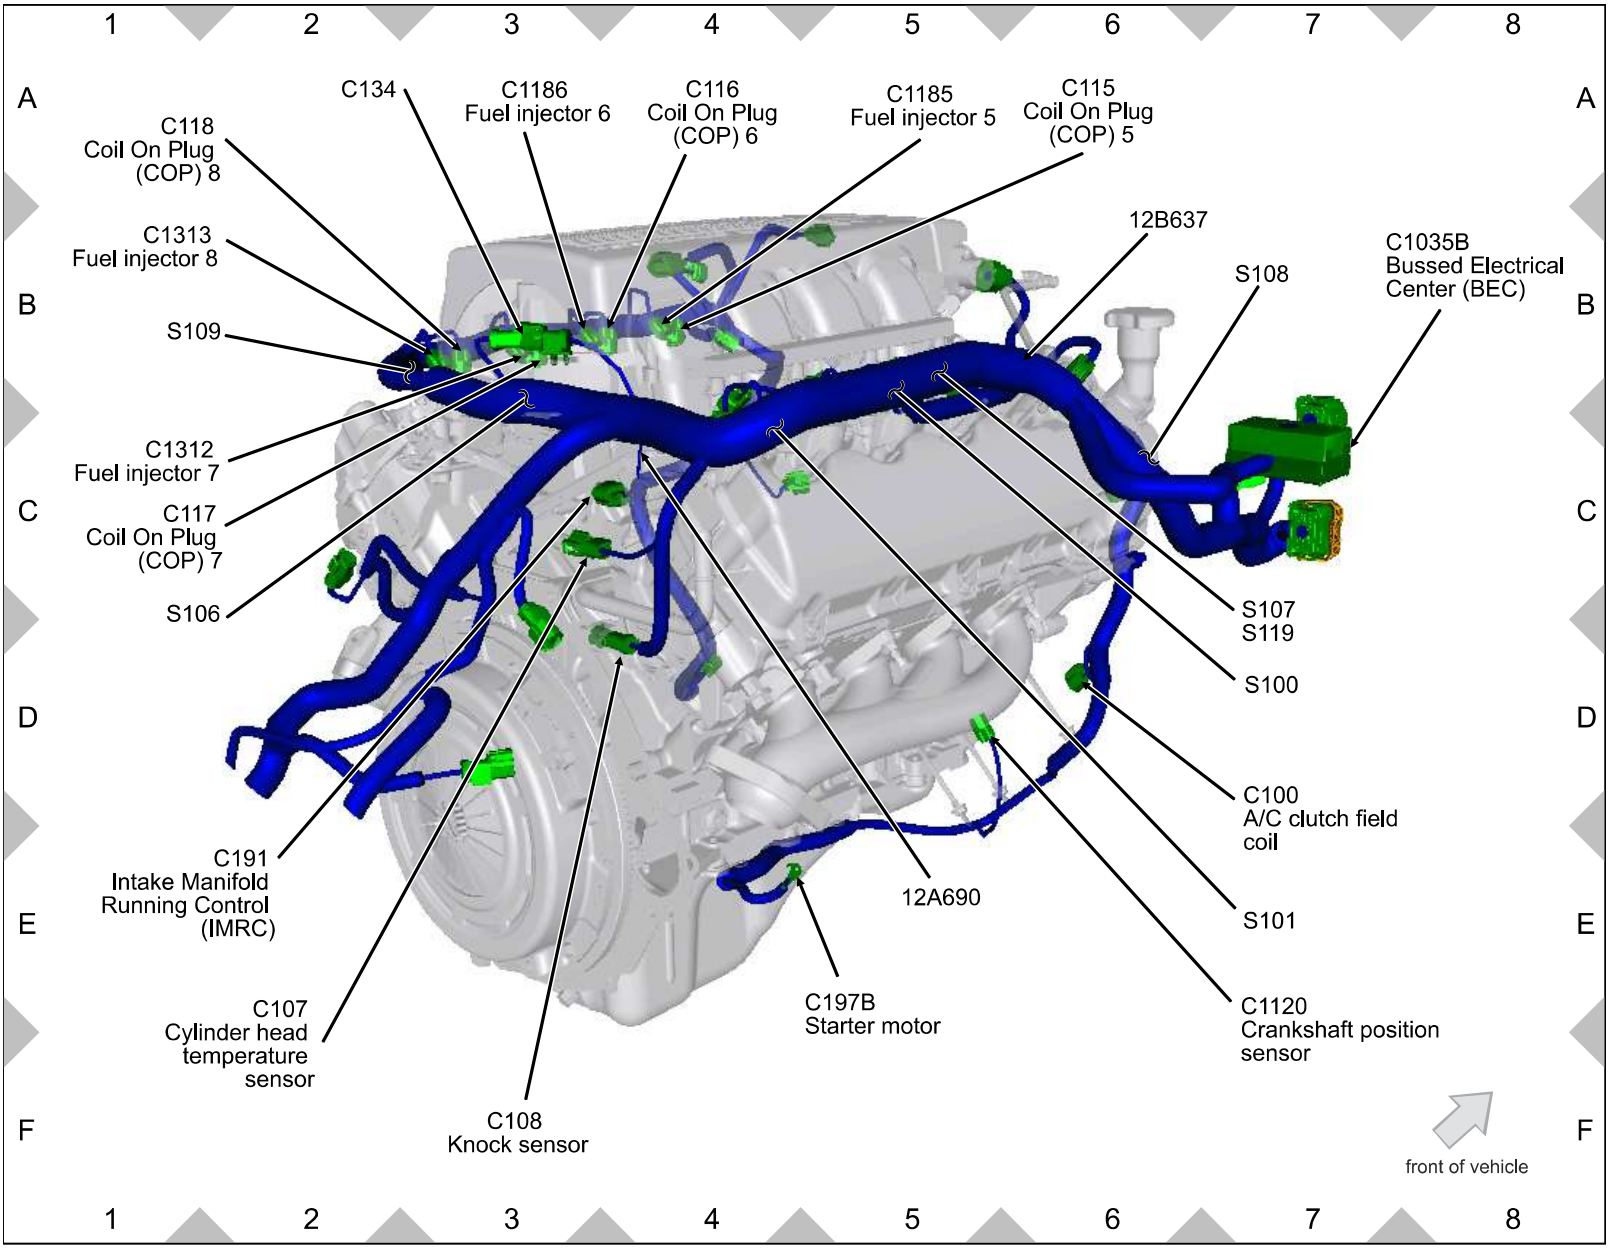
C134
C1186
Fuel injector 6
C116
Coil On Plug
(COP) 6
C1185
Fuel injector 5
C115
Coil On Plug
(COP) 5
C118
Coil On Plug
(COP) 8
C1313
Fuel injector 8
S109
12B637
S108
C1035B
Bussed Electrical
Center (BEC)
C1312
Fuel injector 7
C117
Coil On Plug
(COP) 7
S106
S107
S119
S100
C100
A/C clutch field
coil
C191
Intake Manifold
Running Control
(IMRC)
12A690
S101
C107
Cylinder head
temperature
sensor
C197B
Starter motor
C1120
Crankshaft position
sensor
C108
Knock sensor
front of vehicle