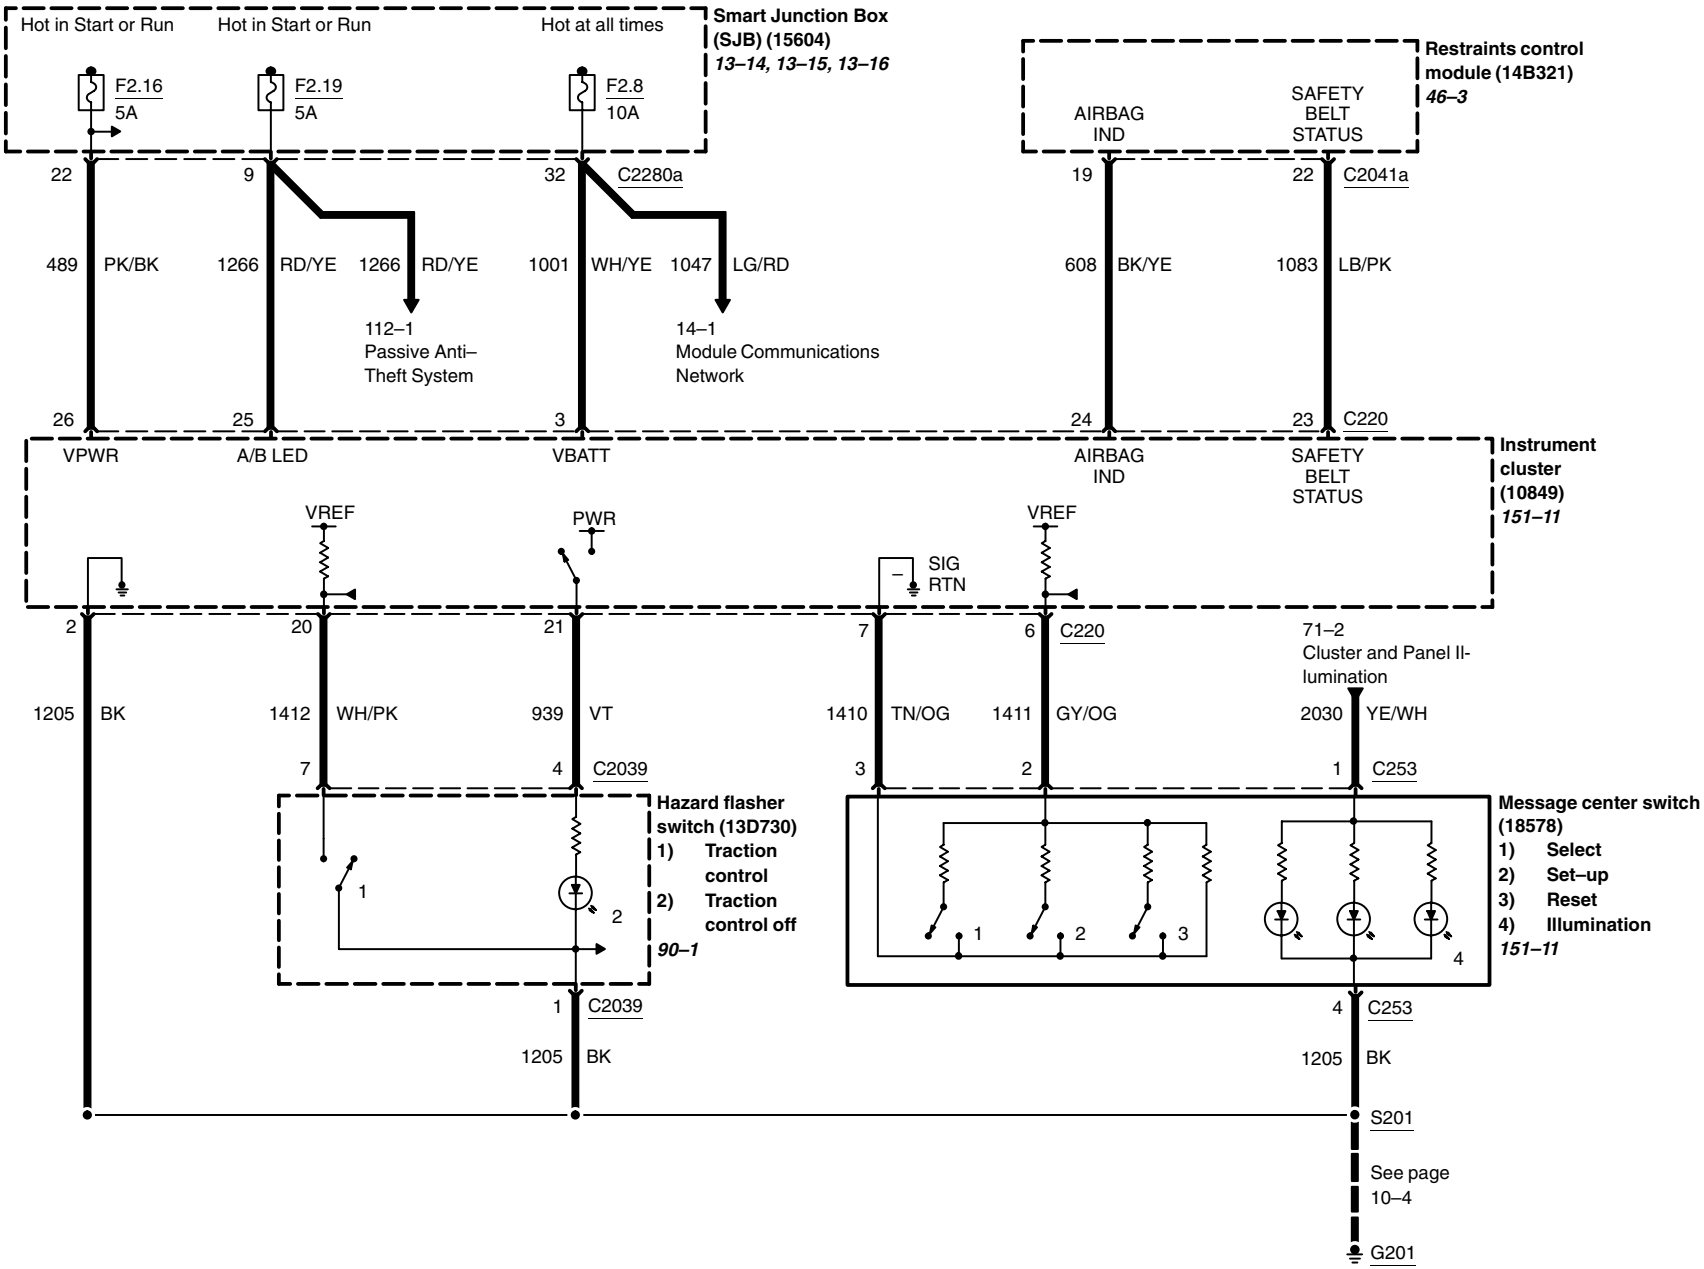
Hot in Start or Run
Hot in Start or Run
Hot at all times
Smart Junction Box (SJB) (15604)
13–14, 13–15, 13–16
F2.16
5A
F2.19
5A
F2.8
10A
22
9
32
C2280a
489 PK/BK
1266 RD/YE
1266 RD/YE
1001 WH/YE
1047 LG/RD
112–1
Passive Anti–Theft System
14–1
Module Communications Network
26
25
3
VPWR
A/B LED
VBATT
Restraints control module (14B321)
46–3
AIRBAG IND
SAFETY BELT STATUS
19
22
C2041a
608 BK/YE
1083 LB/PK
24
23
C220
AIRBAG IND
SAFETY BELT STATUS
Instrument cluster (10849)
151–11
VREF
PWR
SIG RTN
VREF
2
20
21
7
6
C220
71–2
Cluster and Panel Illumination
1205 BK
1412 WH/PK
939 VT
1410 TN/OG
1411 GY/OG
2030 YE/WH
7
4
C2039
3
2
1
C253
Hazard flasher switch (13D730)
1) Traction control
2) Traction control off
90–1
Message center switch (18578)
1) Select
2) Set–up
3) Reset
4) Illumination
151–11
1
C2039
4
C253
1205 BK
1205 BK
S201
See page 10–4
G201