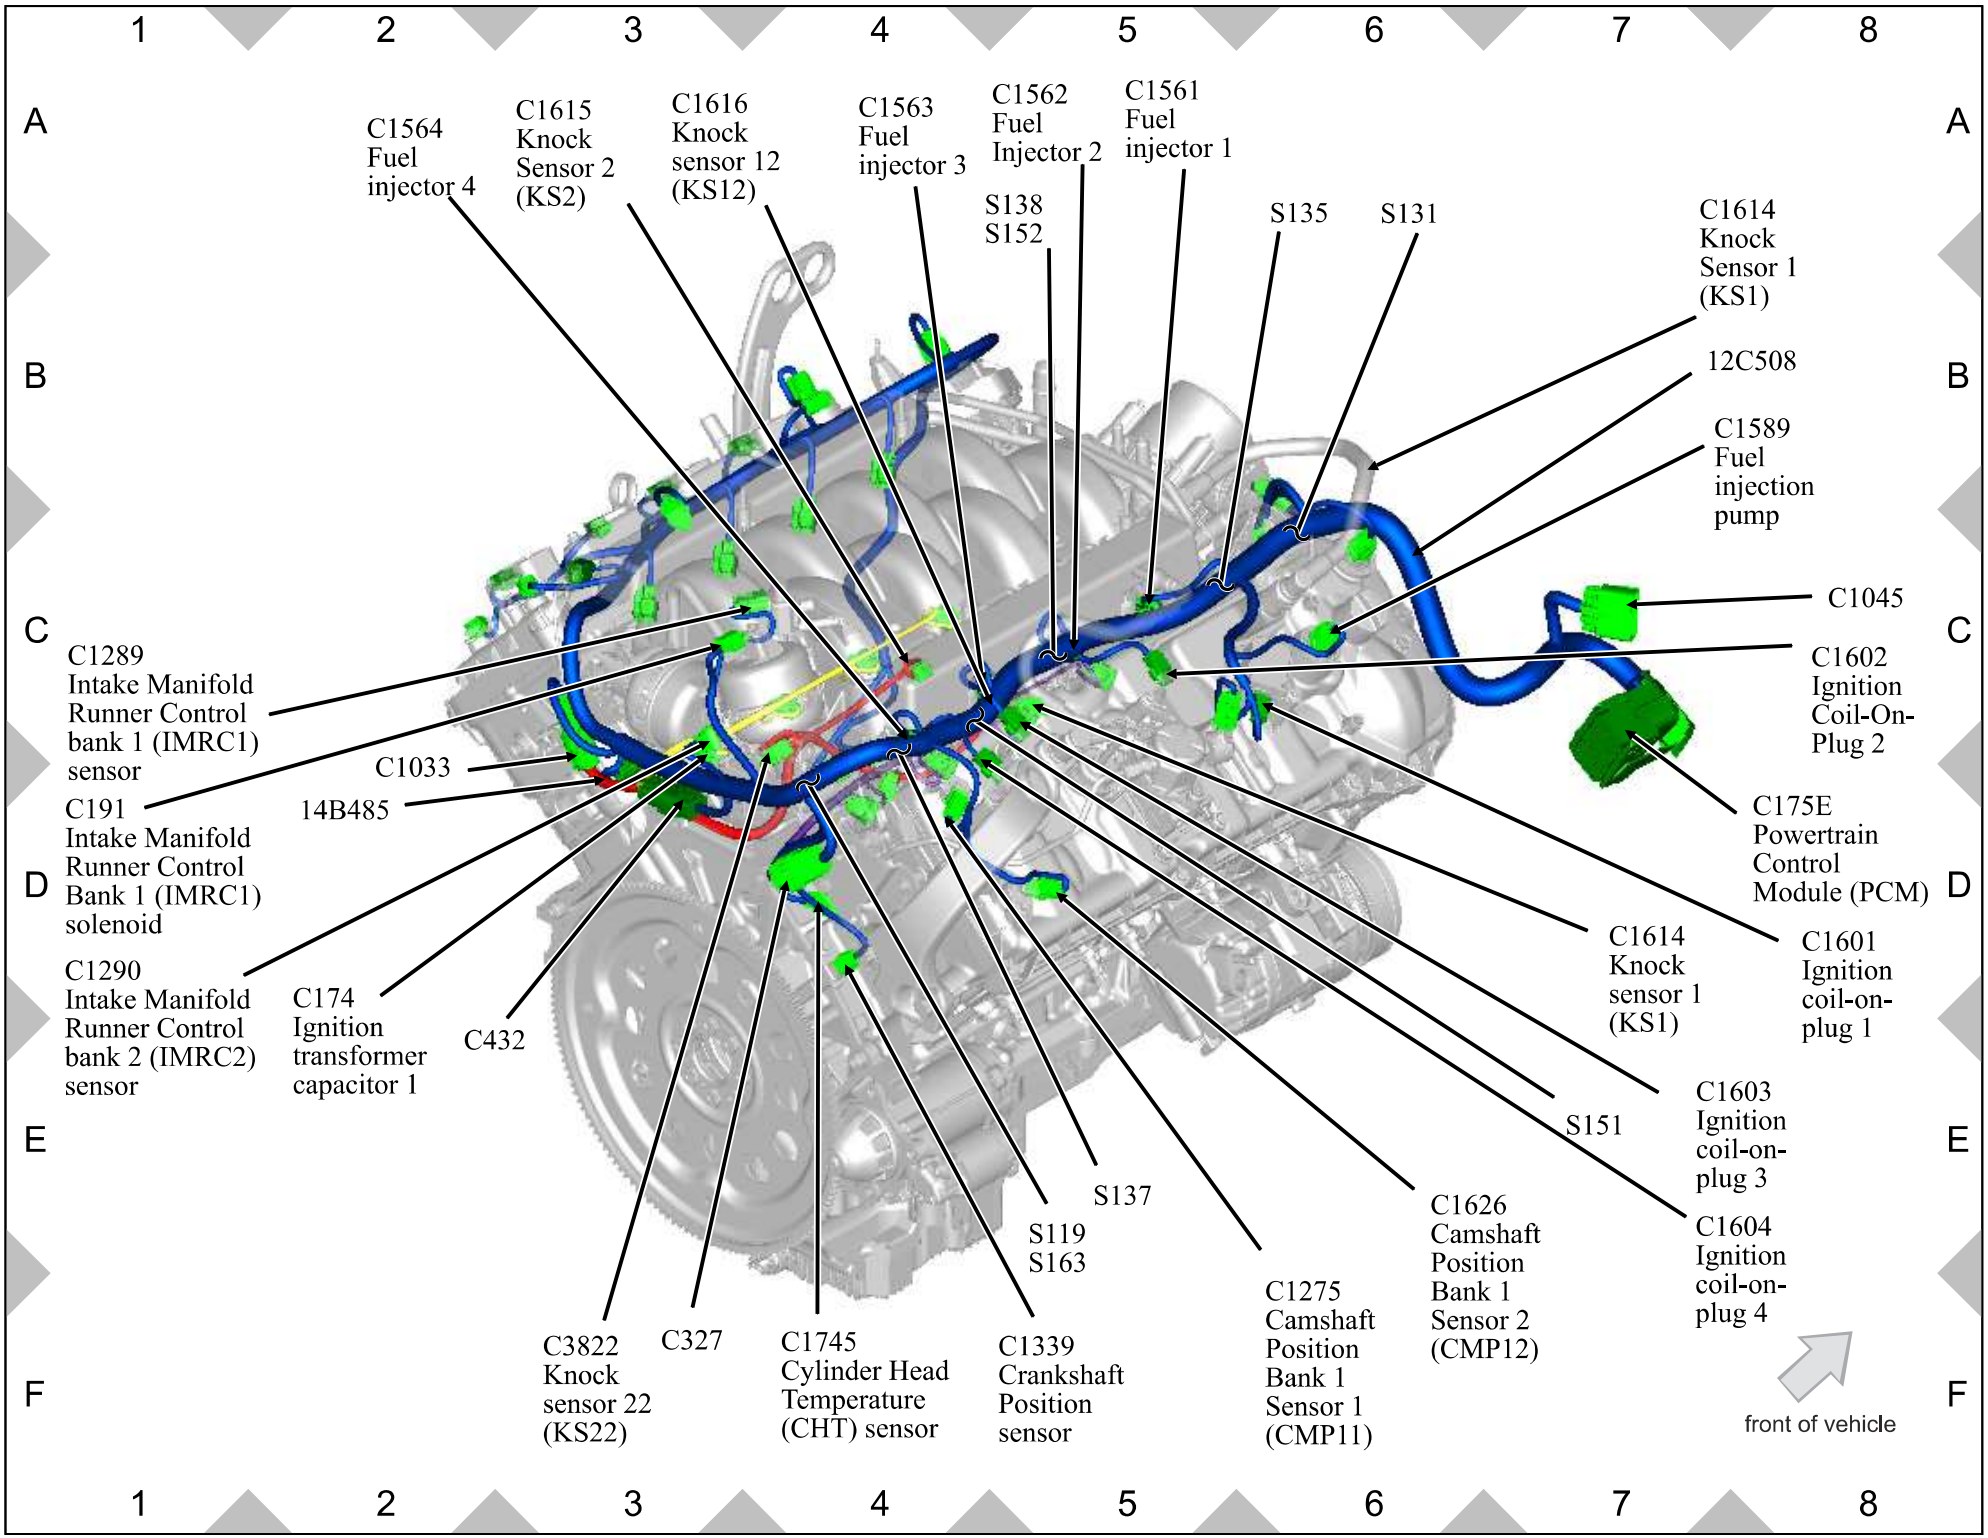
C1564 Fuel injector 4
C1615 Knock Sensor 2 (KS2)
C1616 Knock sensor 12 (KS12)
C1563 Fuel injector 3
C1562 Fuel Injector 2
C1561 Fuel injector 1
S138 S152
S135
S131
C1614 Knock Sensor 1 (KS1)
12C508
C1589 Fuel injection pump
C1045
C1602 Ignition Coil-On-Plug 2
C175E Powertrain Control Module (PCM)
C1601 Ignition coil-on-plug 1
C1614 Knock sensor 1 (KS1)
C1603 Ignition coil-on-plug 3
C1604 Ignition coil-on-plug 4
S151
C1626 Camshaft Position Bank 1 Sensor 2 (CMP12)
C1275 Camshaft Position Bank 1 Sensor 1 (CMP11)
S137
S119 S163
C1339 Crankshaft Position sensor
C1745 Cylinder Head Temperature (CHT) sensor
C327
C3822 Knock sensor 22 (KS22)
C432
C174 Ignition transformer capacitor 1
C1290 Intake Manifold Runner Control bank 2 (IMRC2) sensor
C191 Intake Manifold Runner Control Bank 1 (IMRC1) solenoid
14B485
C1033
C1289 Intake Manifold Runner Control bank 1 (IMRC1) sensor
front of vehicle