


Please note at this time this harness has only been confirmed to work with the Mach460 system.

The 01 – 04 mach radio uses Tyco/AMP wiring connectors.

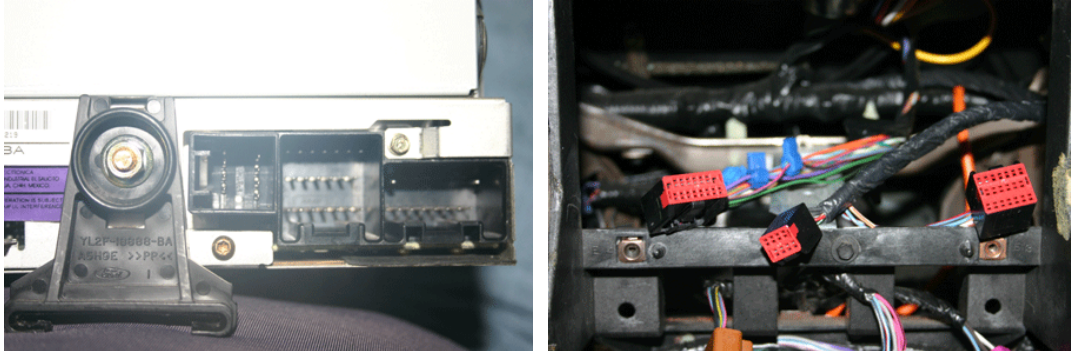

1. Remove shifter knob and shifter bezel.
2. Remove the center stack bezel.
3. Remove the two 7mm bolts that hold the radio to the dash.
4. Gently slide the radio out and disconnect the wiring harness and antenna from the radio.
5. Connect the phone harness to the left and center connectors on the radio harness. Running under the Radio support brace.



6. Connect the harness to the radio and reconnect the last connector from the radio harness to the radio. Don't forget to plug the antenna back in.

