




12

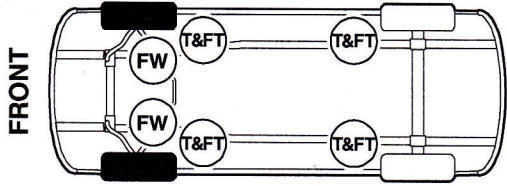


13

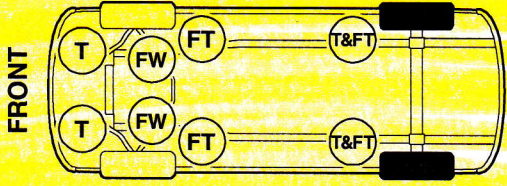


14

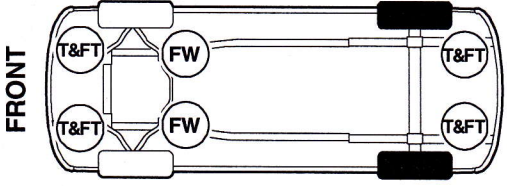


15

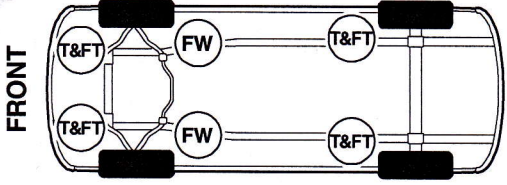

16

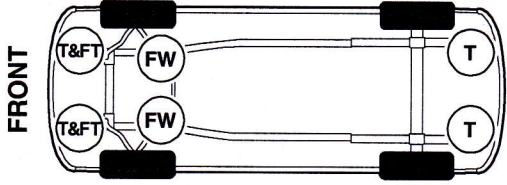


17

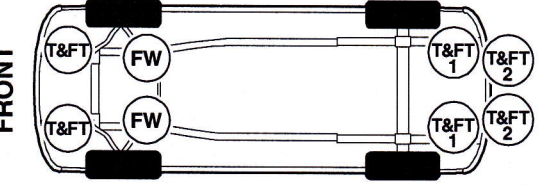


Note 1: Without class III trailer hitch
 Note 2: With class III trailer hitch


18

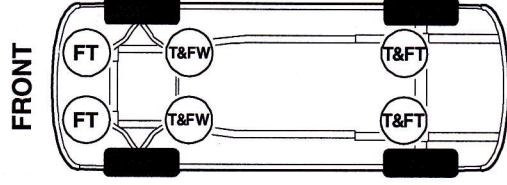


19

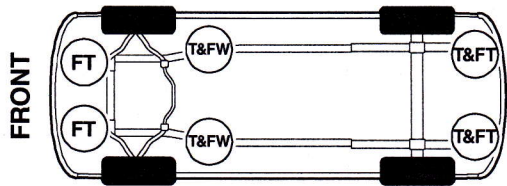



20

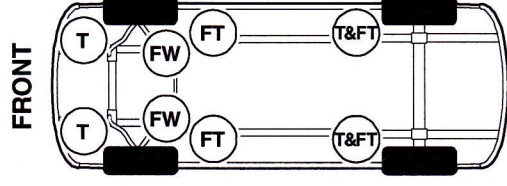



21

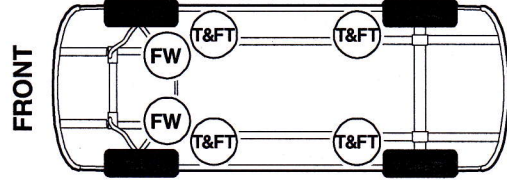

22

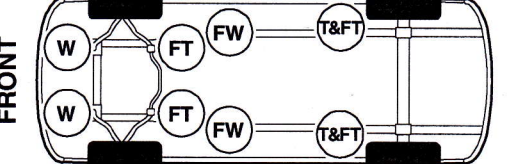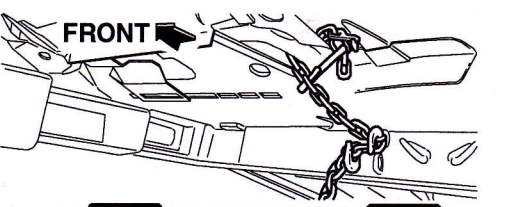

23

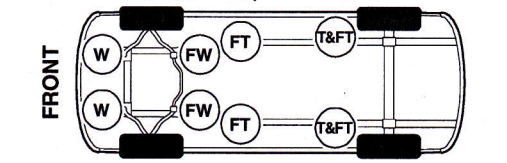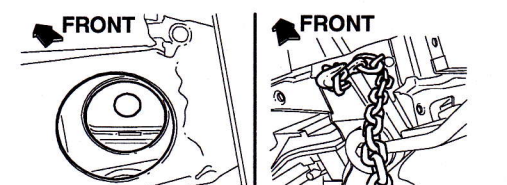

Loop safety chain through the subframe hole and then connect hook.