



2005-2012 Mustang Dead Pedal Installation Instructions CDC #: 110127

NOTE: 2005-2006 directions vary slightly from 2007-2011. Please read all instructions thoroughly before installing.



Component List:

- Dead Pedal

Tools Needed:

- 13mm Wrench (ratcheting wrench ideal)
- Panel tool (fork tool)

2005-2006 Mustang Models

1) **Disassembly:**

- a) Remove plastic door sill by lifting upward. Be careful not to twist or bend door sill or damage may occur to metallic door sill inserts (if equipped).

Note: Some 2010-11 models have Backlit Sill Plates. Unplug Sill Plate to remove.

- b) Remove plastic kick panel by first removing plastic push pin located near firewall with panel tool (see arrow). Pull rearward on the panel to release clips.



2) **Mounting bolt:**

- a) Locate the bolt shown in picture. Loosen bolt enough to allow the dead pedal notch to slide behind it.



3) **Install Dead Pedal:**

- a) Slide the notch in the Dead Pedal Bracket under head and washer of the bolt and position the pedal to desired location and tighten. Sit in the seat to verify positioning of pedal, adjust if needed. See pictures on following page.



2007-2011 Mustang Models

NOTE: 2007-2011 process is essentially the same. Ford made a slight change to the metal kick panel surface (where pedal will be bolted) and has also included a larger raised platform below the carpet, resulting in a slightly different installation process.

1) **Disassembly:**


a) Follow procedures a) and b) from Step 1 on the previous page.

2) **Dislodge Wire Harness Retainer:**

a) A Factory wire harness is attached to inner kick panel with plastic push pin-type retainers. Pull harness away from metal, using a fork tool to release push pins (Lower arrow in picture below). It may be helpful to use a zip tie to temporarily tie the harness to the hood release cable.

3) **Loosen bolt for pedal:**

a) The factory sheet metal directly below the bolt has a larger bend than the 2005-2006 Mustangs and requires you to loosen the mounting bolt 1/2-inch in order for the Bracket to fit behind the bolt (Upper arrow in picture below).

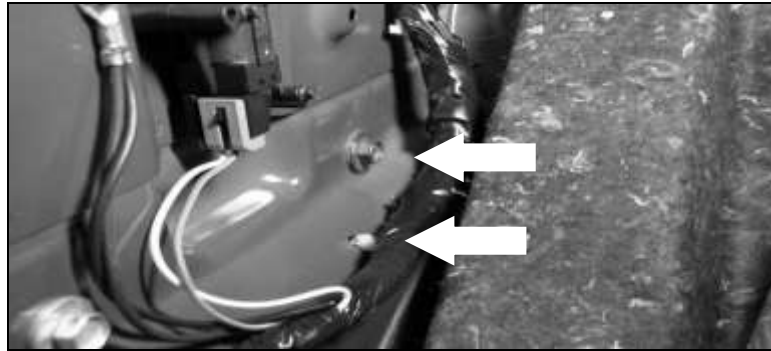


4) **Form and Tuck carpet:**

a) Form/tuck carpet between the factories raised platform and sheet metal.



5) **Position Dead Pedal in place:**

a) With carpet tucked between raised platform and sheet metal, slide the notch of the pedal under head of bolt and position the pedal to desired location, Tighten bolt. Sit in the seat to verify positioning of pedal, adjust if needed.

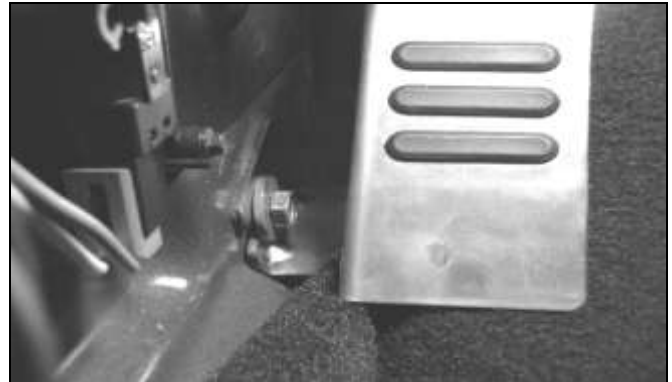

CD4113CD

6) Placement of wire harness:

- a) Route wire harness back to near its original location, reinserting the plastic push pins into their holes where possible. **Note** position of harness (see picture below) in relation to carpet; harness is above carpet line. Maintain some space between the Dead Pedal bracket and the harness so wires do not chafe on edge of Dead Pedal bracket.



All Models

7) Replace panels:

- a) Reinstall interior kick panel and sill plate back into original position. Reinstall plastic push pin retainer through trim panel (removed previously).



Thank you for choosing Classic Design Concepts for your restyling needs. If you have any questions or concerns regarding installation please contact Tech@classicdesignconcepts.com or call 866-624-7997.