


MOBILE-EASE WIRE HARNESS TECH INSTALLATION TIP

The Mobile-Ease wire harness has a total of seven connectors: two 24-pin connectors, two 16-pin connectors, one 18-pin connector, one 4-pin connector, and one 2-pin connector.

Both the 24-pin and 16-pin female connectors must be plugged into the radio upon installation of the harness. Depending on the level of radio in this vehicle application the 24-pin male connector is used but the 16-pin male connector may not be used. Advise tech to plug the male 24-pin Mobile-Ease connector into the vehicle's body harness and tape back the 16-pin male Mobile-Ease connector if the connector is not used.

VEHICLE HARNESS
16-PIN CONNECTOR
NOT ALWAYS
PRESENT

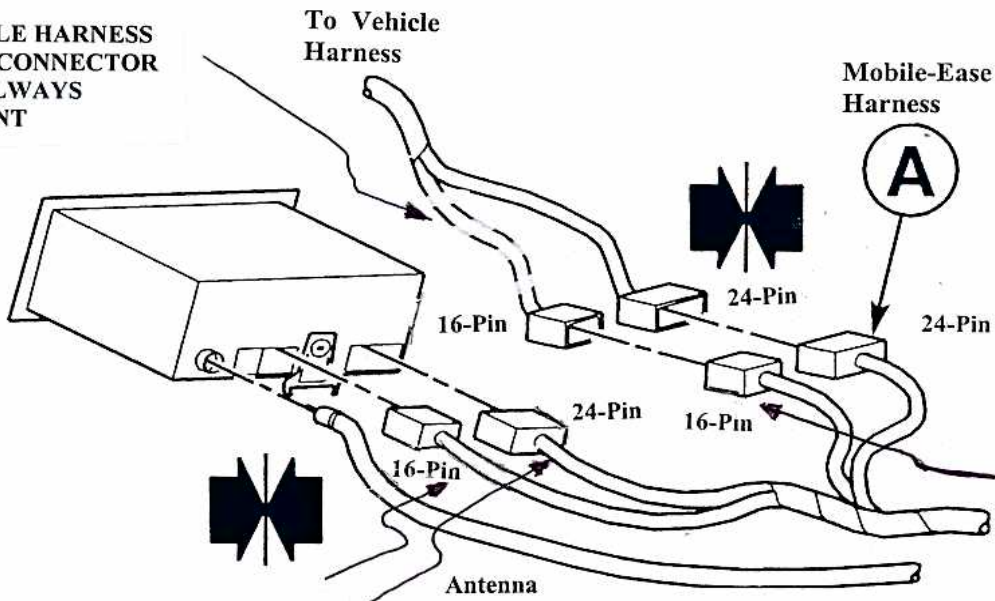

CONNECTION TO RADIO
ALWAYS REQUIRED

IF VEHICLE HARNESS
MATING CONNECTOR
NOT PRESENT - TAPE THIS
CONNECTOR BACK
TO PREVENT RATTLE.