


Seat Backrest — Rear


Coupe Backrest

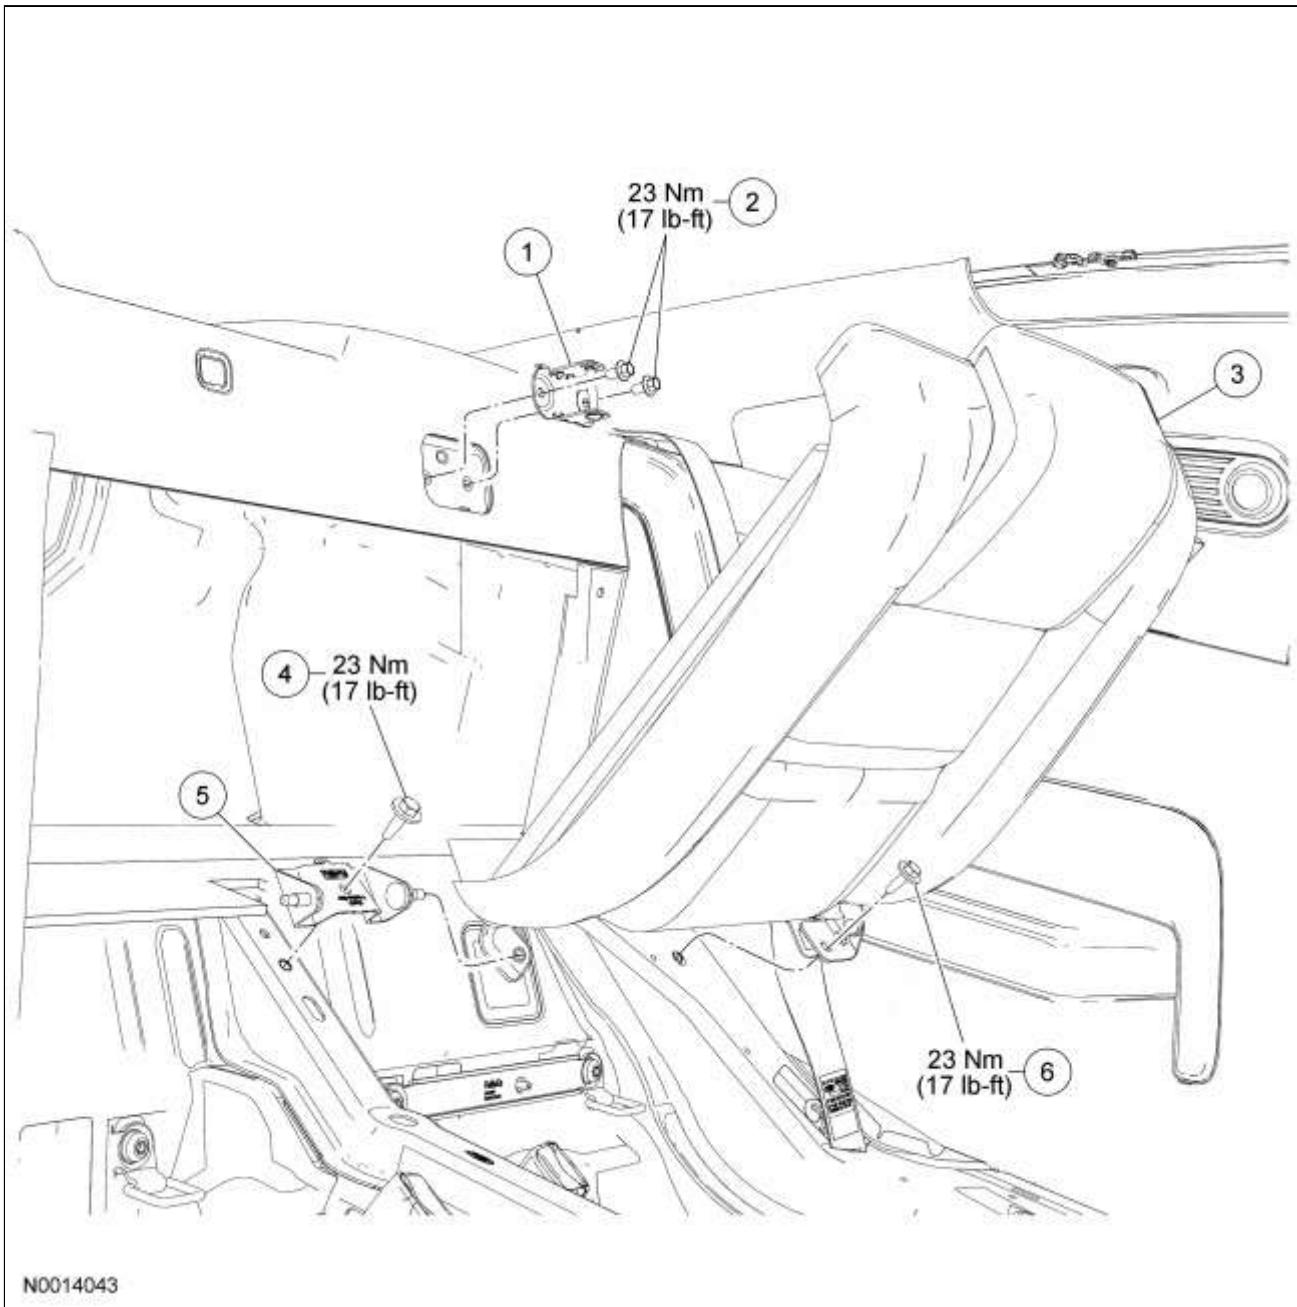

N0014043

Item	Part Number	Description
1	62452	Backrest striker
2	W505260	Backrest striker bolts
3	—	Backrest assembly
4	W505433	Backrest pivot bracket bolt
5	60615	Backrest pivot bracket
6	W505433	Backrest-to-floor bolt

Convertible Backrest

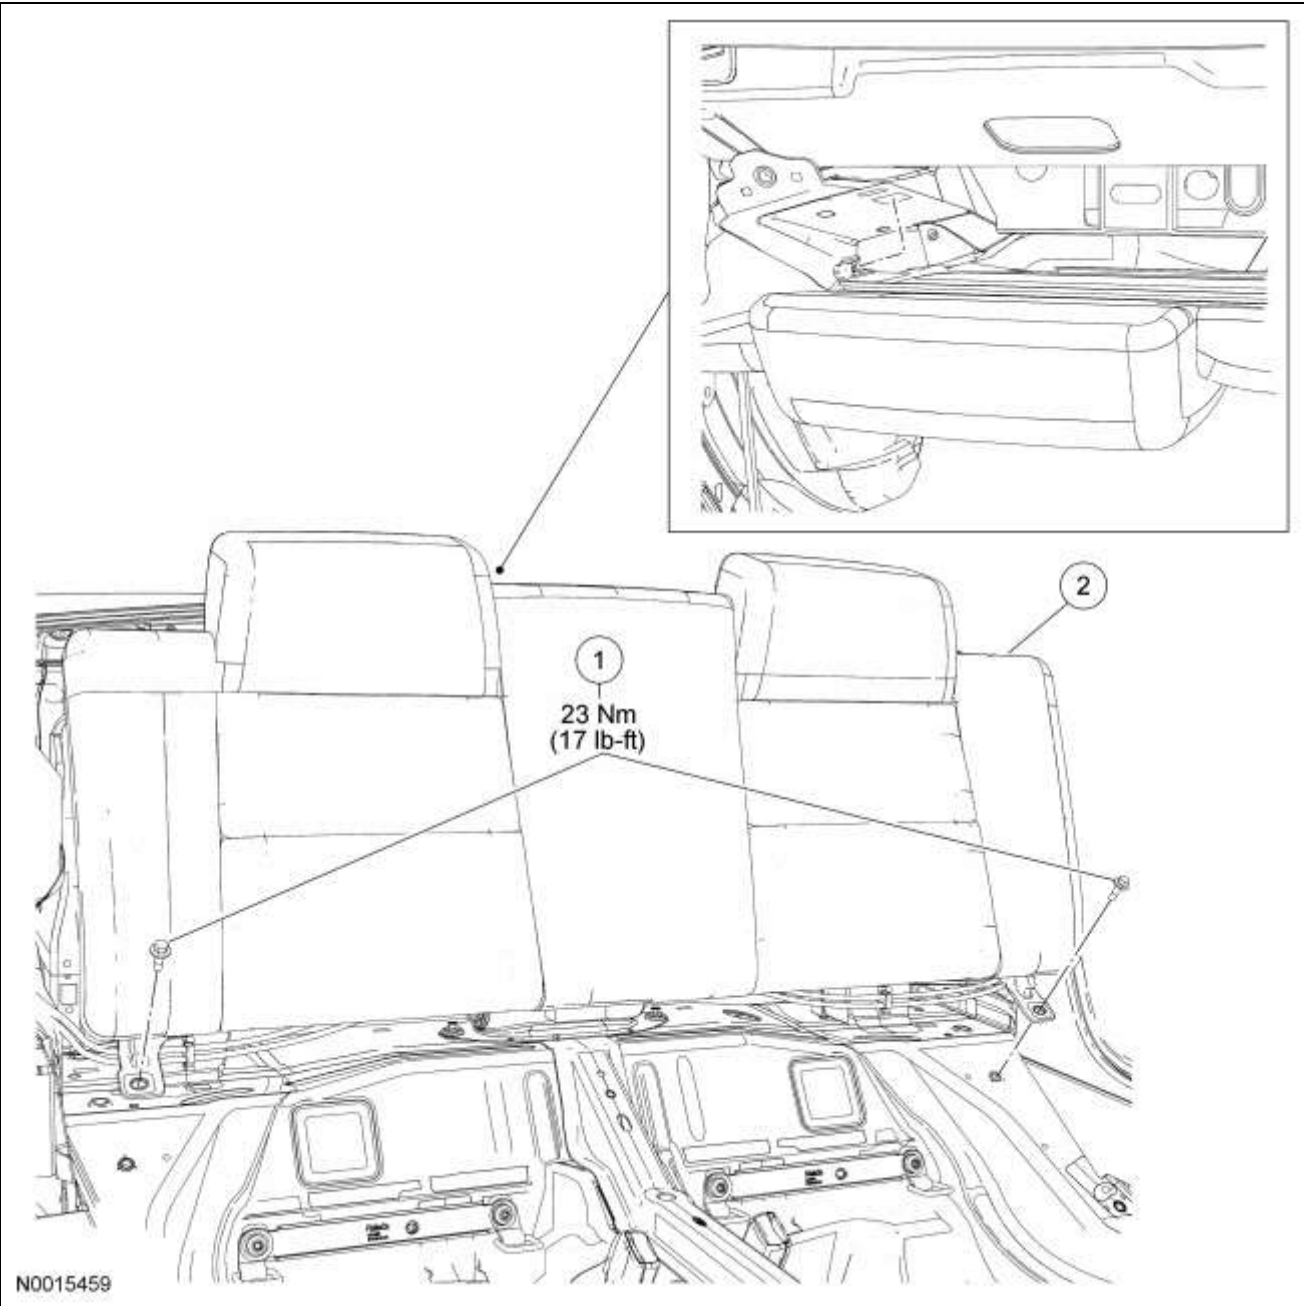

Item	Part Number	Description
1	W505433	Backrest-to-floor bolts
2	—	Backrest assembly

Removal and Installation

NOTE: Coupe LH 50 percent backrest shown, RH 50 percent backrest similar.

All vehicles

1. Remove the rear seat cushion. For additional information, refer to [Seat Cushion — Rear](#) in this section.

Coupe vehicles

2. Remove the bolt, pull the strap to pivot the backrest down, slide the backrest out of the backrest pivot bracket and remove the LH backrest.
 - To install, tighten to 23 Nm (17 lb-ft).

Vehicles with a convertible top

3. Remove the 2 backrest bolts at the bottom, slide the backrest up, disengaging the hooks, and remove the backrest.
 - To install, tighten to 23 Nm (17 lb-ft).

All vehicles

4. **NOTE:** *Make sure the safety belt webbing is not twisted and the safety belts and buckles are accessible to the occupants.*

To install, reverse the removal procedure.

© Copyright 2024, Ford Motor Company.
