



TPMS Warranty

Examples of Non-Warrantable Damage on the New Valve-mounted sensor:

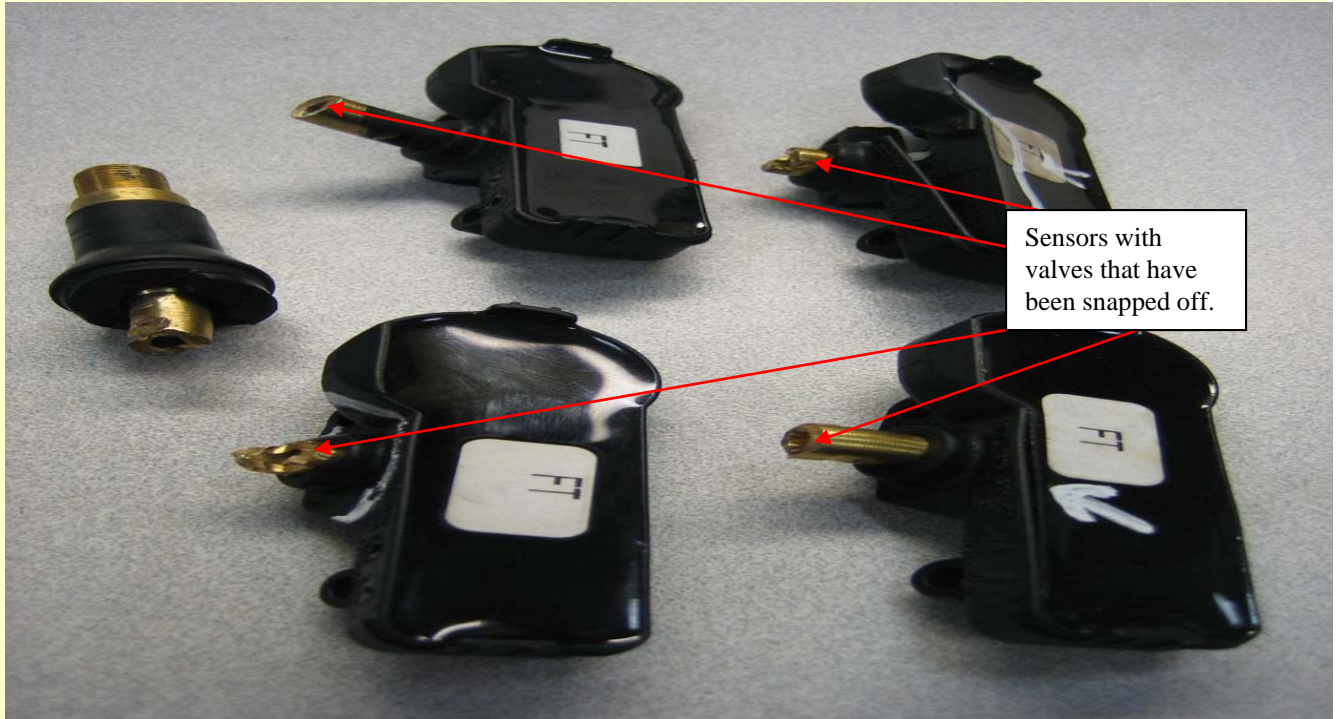


Examples of Non-Warrantable Damage on the New Valve-mounted sensor:

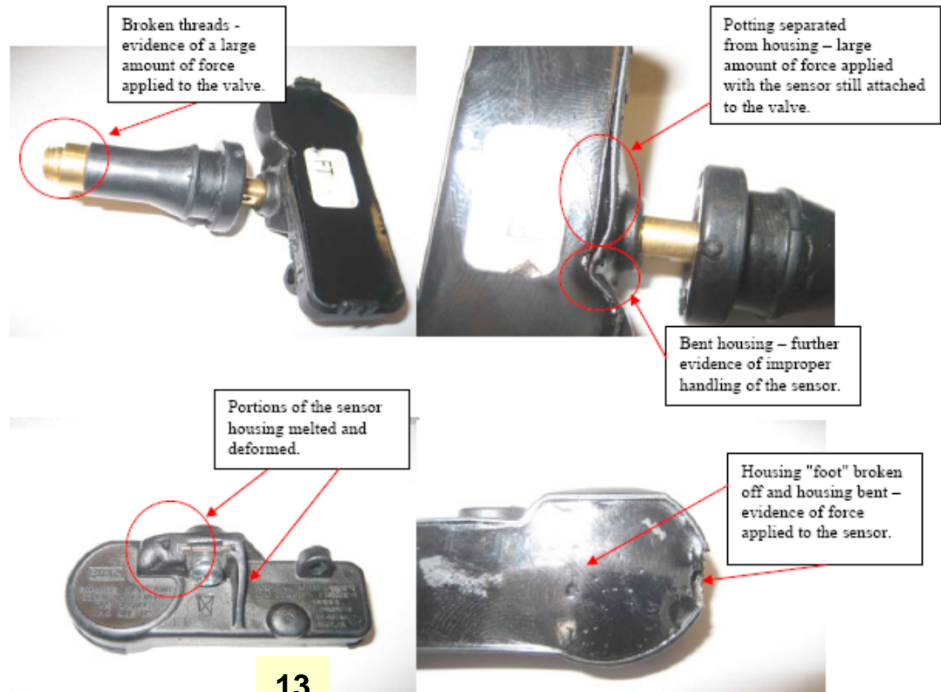


TPMS Warranty

Examples of Non-Warrantable Damage on the New Valve-mounted sensor:

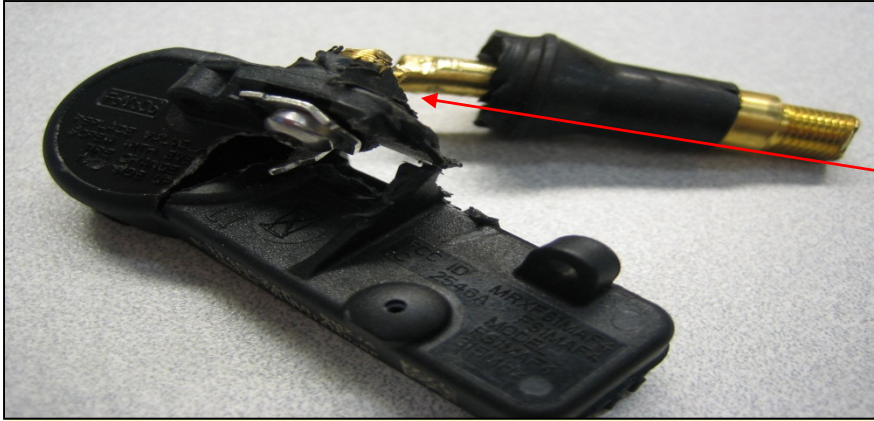

Severe chassis damage from attempting to pull the valve out with sensor attached

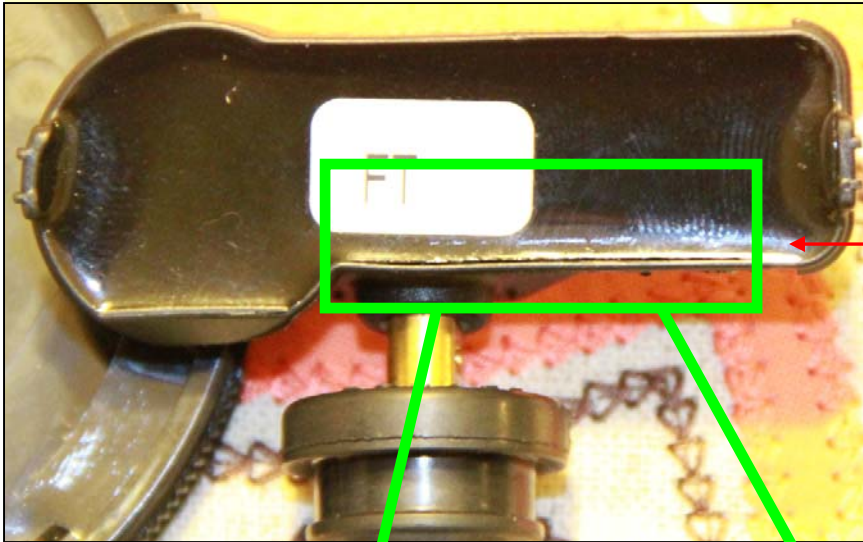

Detail of housing showing potting separation due to heavy force applied to the valve. If a finger nail or business card can be inserted between the TPMS sensor housing and potting, the TPMS sensor has been damaged. Damage of this nature is most often caused by improper tire removal or attempting to remove the valve stem like a conventional rubber valve stem.

