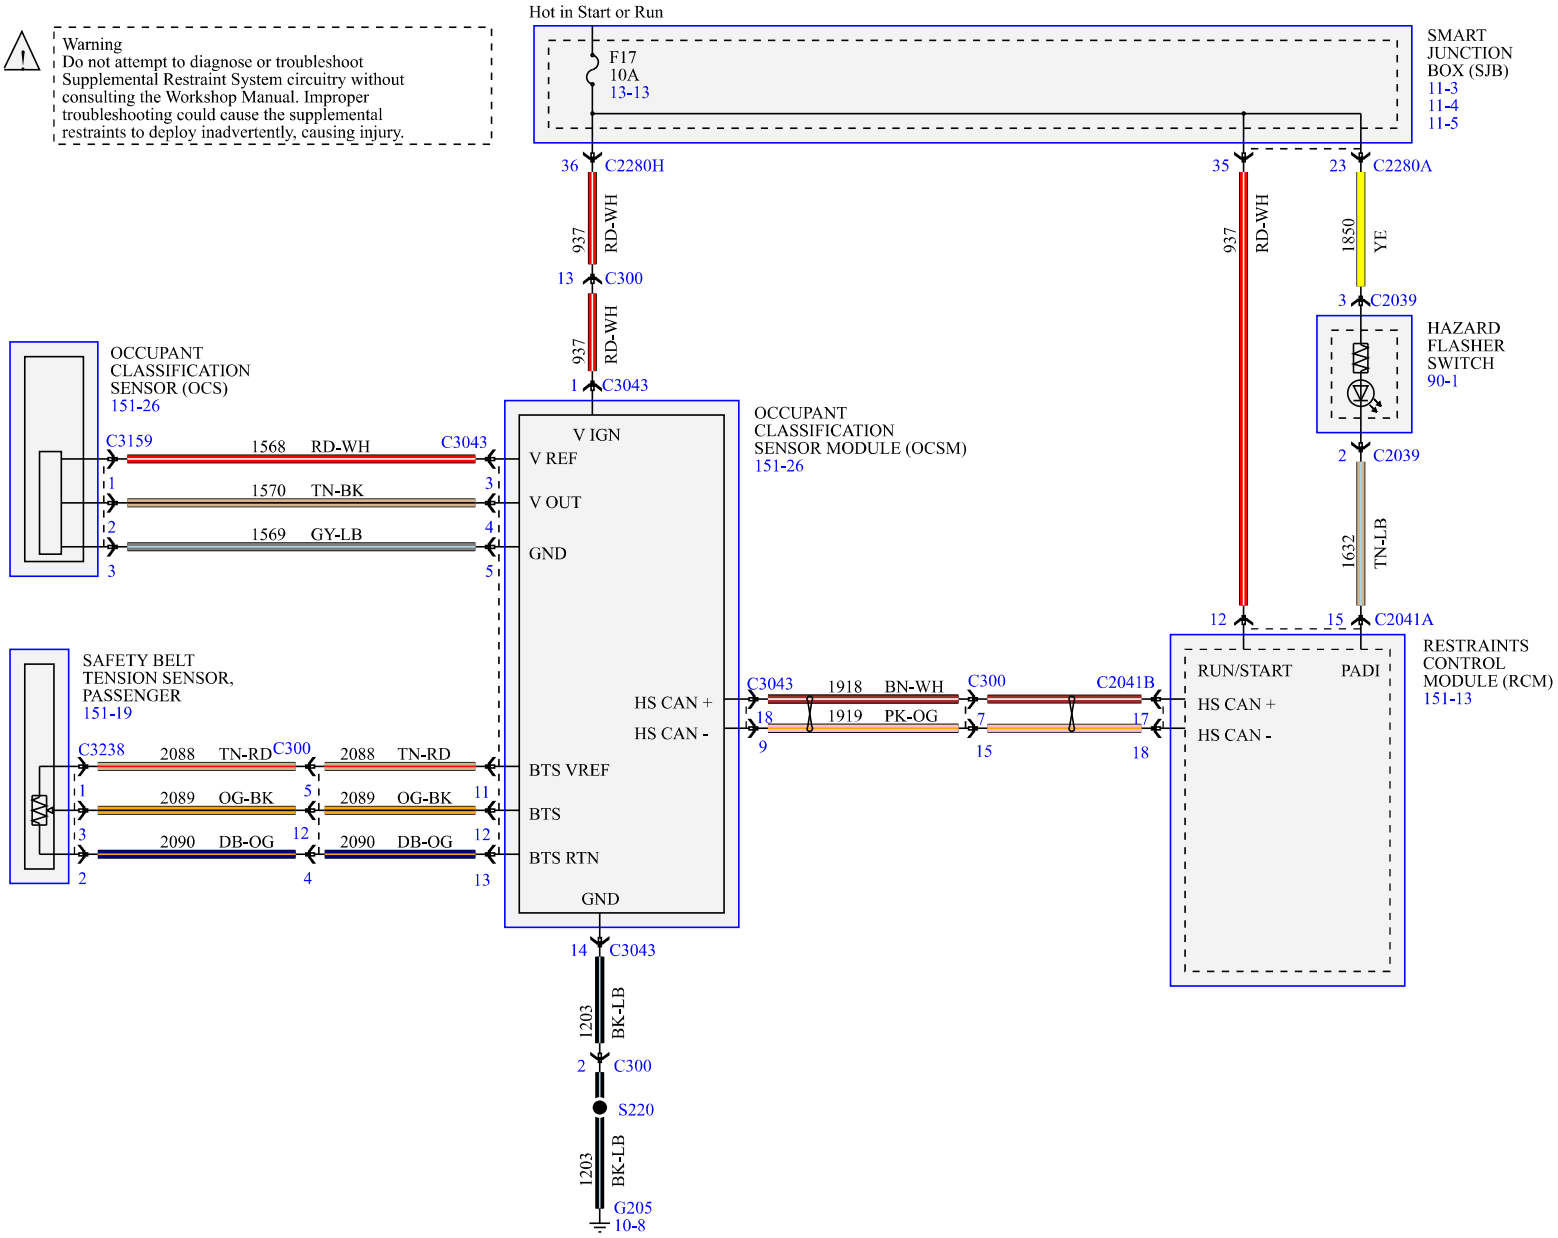
Warning
Do not attempt to diagnose or troubleshoot Supplemental Restraint System circuitry without consulting the Workshop Manual. Improper troubleshooting could cause the supplemental restraints to deploy inadvertently, causing injury.
Hot in Start or Run
F17
10A
13-13
SMART JUNCTION BOX (SJB)
11-3
11-4
11-5
36
C2280H
35
23
C2280A
937
RD-WH
1850
YE
13
C300
3
C2039
HAZARD FLASHER SWITCH
90-1
1
C3043
OCCUPANT CLASSIFICATION SENSOR (OCS)
151-26
C3159
1568
RD-WH
C3043
1570
TN-BK
1569
GY-LB
V IGN
V REF
V OUT
GND
OCCUPANT CLASSIFICATION SENSOR MODULE (OCSM)
151-26
2
C2039
1632
TN-LB
12
15
C2041A
RESTRAINTS CONTROL MODULE (RCM)
151-13
RUN/START
PADI
HS CAN +
HS CAN -
SAFETY BELT TENSION SENSOR, PASSENGER
151-19
C3238
2088
TN-RD
C300
2089
OG-BK
2090
DB-OG
BTS VREF
BTS
BTS RTN
GND
1918
BN-WH
1919
PK-OG
C2041B
14
C3043
1203
BK-LB
2
C300
S220
G205
10-8