


IN-VEHICLE REPAIR**Valve Cover — RH****Material**

Item	Specification
Motorcraft Metal Surface Prep ZC-31	—
Silicone Gasket Remover ZC-30	—
Silicone Gasket and Sealant TA-30	WSE-M4G323-A4

IN-VEHICLE REPAIR (Continued)

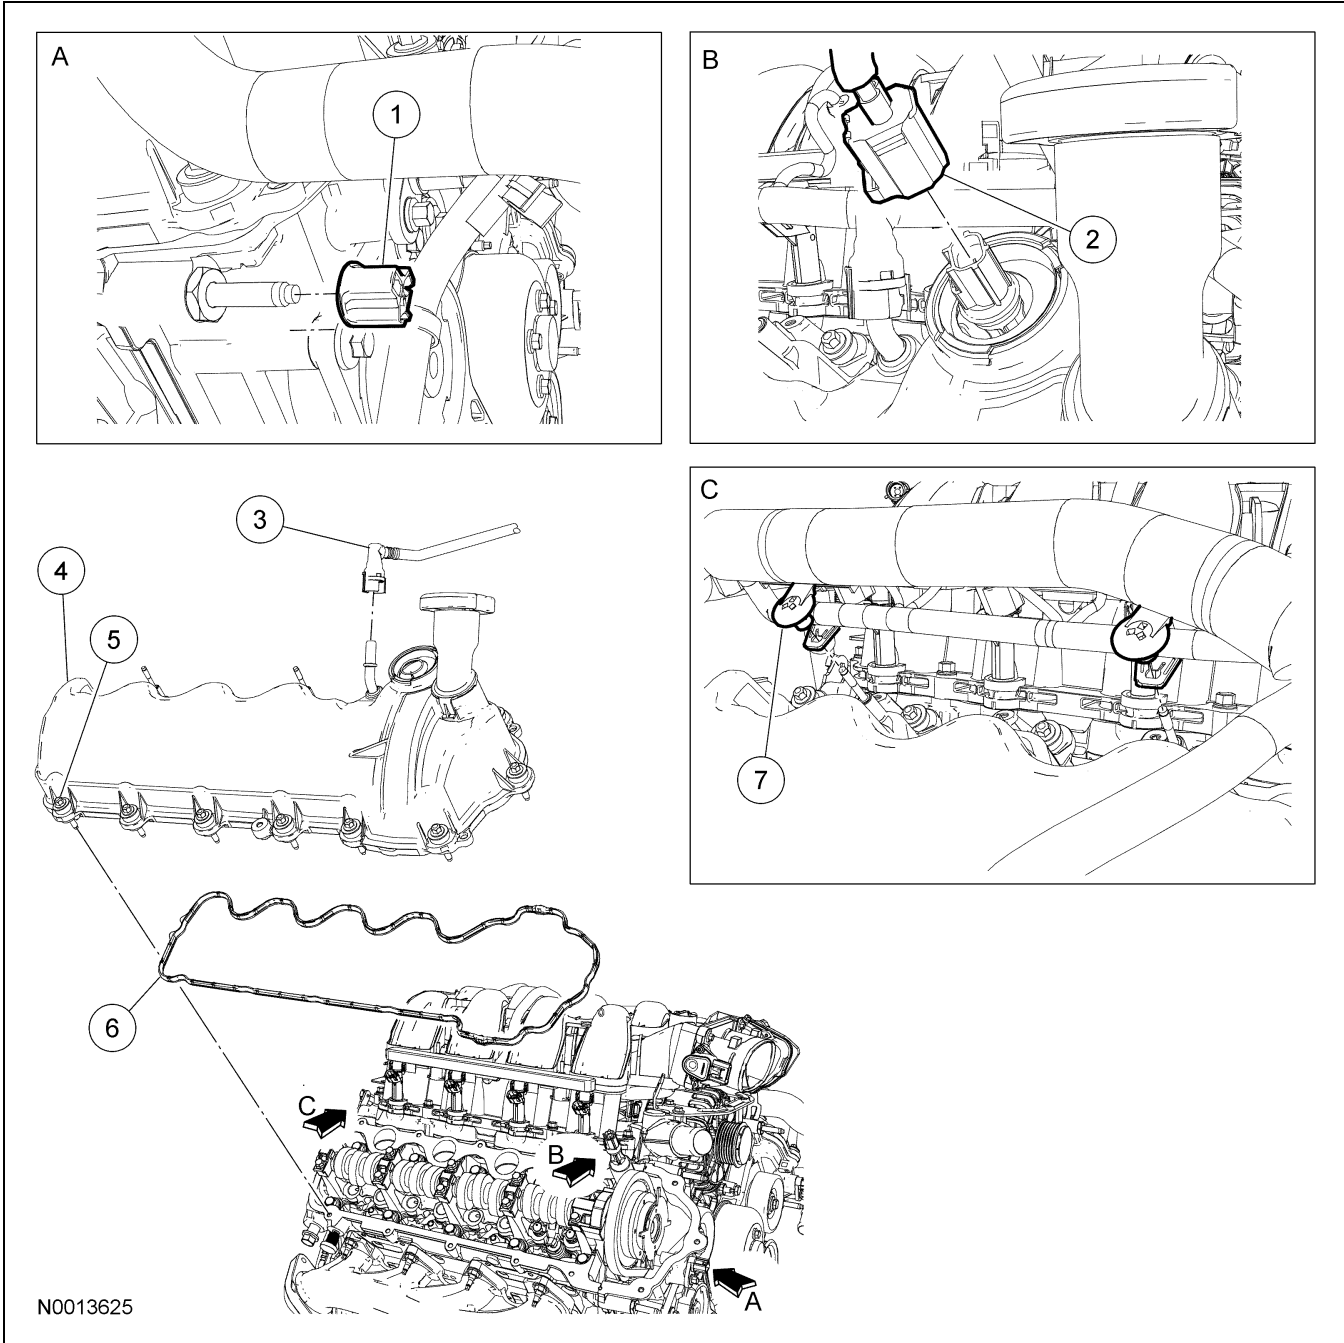

Item	Part Number	Description
1	—	Engine wiring harness (part of 12B637)
2	14A464	RH variable camshaft timing (VCT) solenoid electrical connector (part of 12B637)
3	6758	Positive crankcase ventilation (PCV) tube
4	6582	RH valve cover
5	6C519	RH valve cover bolt (14 required) (part of 6582)
6	6584	RH valve cover gasket

Item	Part Number	Description
7	—	Engine wiring harness retainer (4 required) (part of 12B637)

Removal

1. Remove the RH ignition coils. For additional information, refer to Section 303-07B.
2. Detach the wiring harness retainer from the engine front cover stud bolt.

(Continued)

IN-VEHICLE REPAIR (Continued)

3. Disconnect the RH variable camshaft timing (VCT) solenoid electrical connector.
4. Disconnect the positive crankcase ventilation (PCV) tube from the RH valve cover.
5. Detach the 4 wiring harness retainers from the valve cover stud bolts.
6. **⚠ CAUTION: Do not use metal scrapers, wire brushes, power abrasive discs or other abrasive means to clean the sealing surfaces. These tools cause scratches and gouges which make leak paths. Use a plastic scraping tool to remove all traces of old sealant.**


Loosen the 14 fasteners and remove the RH valve cover and gasket.

- Clean the valve cover mating surface of the cylinder head with silicone gasket remover and metal surface prep. Follow the directions on the packaging.
- Discard the valve cover gasket. Clean the valve cover gasket groove with soap and water or a suitable solvent.


Installation

1. **NOTE:** If the valve cover is not secured within 4 minutes, the sealant must be removed and the sealing area cleaned with metal surface cleaner. Failure to follow this procedure can cause future oil leakage.

Apply a bead of silicone gasket and sealant in 2 places where the engine front cover meets the cylinder head.

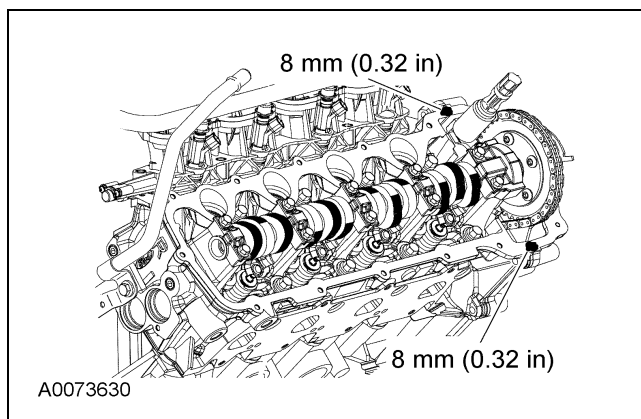

2. Position the RH valve cover and new gasket on the cylinder head and tighten the bolts in the sequence shown.
 - Tighten to 10 Nm (89 lb-in).

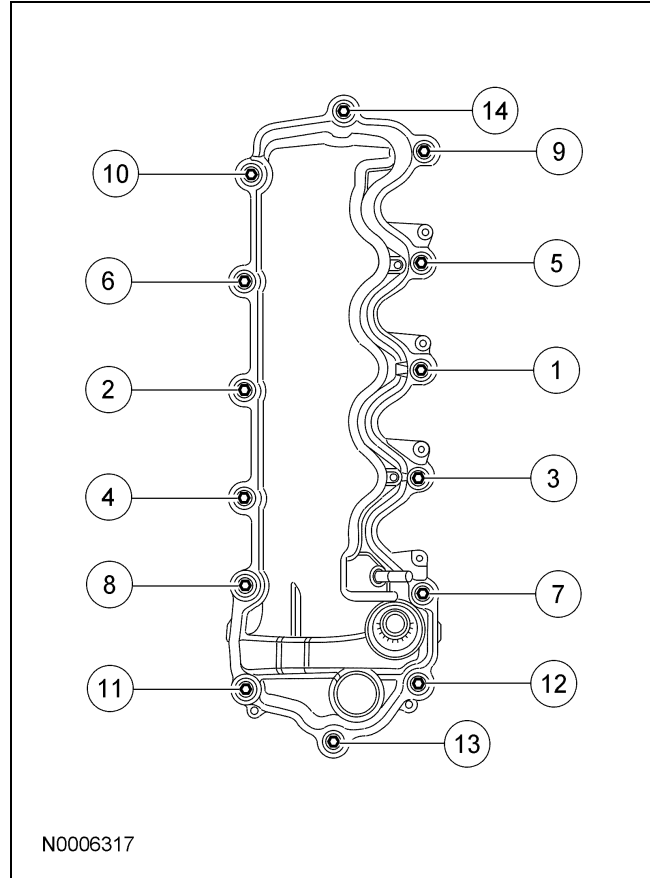

3. Attach the 4 wiring harness retainers to the valve cover stud bolts.
4. Connect the PCV tube to the RH valve cover.
5. Connect the RH VCT solenoid electrical connector.
6. Attach the wiring harness retainer to the engine front cover stud bolt.
7. Install the RH ignition coils. For additional information, refer to Section 303-07B.